

HISTORY INFORMATION FOR THE FOLLOWING MANUAL:

SERVICE MANUAL

MA1 CHASSIS

<u>MODEL NAME</u>	<u>REMOTE COMMANDER</u>	<u>DESTINATION</u>
KDL-26M3000	RM-YD021	US/CANADA
KDL-26M3000	RM-YD021	LATIN NORTH/LATIN SOUTH
KDL-26ML130	RM-YD021	US/CANADA
KDL-32M3000	RM-YD021	US/CANADA
KDL-32M3000	RM-YD021	LATIN NORTH/LATIN SOUTH
KDL-32ML130	RM-YD021	US/CANADA

ORIGINAL MANUAL ISSUE DATE: 7/2007

 :UPDATED ITEM

REVISION DATE	SUBJECT
7/2007	No revisions or updates are applicable at this time.
9/2007	PC Audio Input specification updated. Replaced Page 4. Added Battery Cover PN for Remote Commander. Replaced Page 93.

LCD DIGITAL COLOR TELEVISION

SONY®

SERVICE MANUAL

MA1 CHASSIS

<u>MODEL NAME</u>	<u>REMOTE COMMANDER</u>	<u>DESTINATION</u>
KDL-26M3000	RM-YD021	US/CANADA
KDL-26M3000	RM-YD021	LATIN NORTH/LATIN SOUTH
KDL-26ML130	RM-YD021	US/CANADA
KDL-32M3000	RM-YD021	US/CANADA
KDL-32M3000	RM-YD021	LATIN NORTH/LATIN SOUTH
KDL-32ML130	RM-YD021	US/CANADA



KDL-32M3000



RM-YD021

LCD DIGITAL COLOR TELEVISION

SONY®

TABLE OF CONTENTS

SECTION TITLE	PAGE	SECTION TITLE	PAGE
Specifications	4	3-5. Schematics and Supporting Information	44
Warnings and Cautions	6	BM Board Schematic Diagram (1 of 12)	44
Safety-Related Component Warning	7	BM Board Schematic Diagram (2 of 12)	45
Safety Check-Out	9	BM Board Schematic Diagram (3 of 12)	46
Self-Diagnostic Function	10	BM Board Schematic Diagram (4 of 12)	47
SECTION 1: DISASSEMBLY	12	BM Board Schematic Diagram (5 of 12)	48
1-1. Rear Cover Removal	12	BM Board Schematic Diagram (6 of 12)	49
1-2. Arm, Under Cover and Stand Removal	12	BM Board Schematic Diagram (7 of 12)	50
1-3. HM1 Board Removal	13	BM Board Schematic Diagram (8 of 12)	51
1-4. UM Board and Jack Holder Removal	13	BM Board Schematic Diagram (9 of 12)	52
1-5. Speaker, Light Guide and HM3 Board Removal	14	BM Board Schematic Diagram (10 of 12)	53
1-6. BM Board Removal	14	BM Board Schematic Diagram (11 of 12)	54
1-7. G1 Bracket and G1M Board Removal	15	BM Board Schematic Diagram (12 of 12)	55
1-8. VESA Bracket Removal	15	G1M Board Schematic Diagram	57
1-9. LCD Panel/Bracket and LED Light Guide Removal	16	HM1 Board Schematic Diagram	60
Wire Dressing	17	HM3 Board Schematic Diagram	62
KDL-26M3000/26ML130 Only	17	UM Board Schematic Diagram	64
KDL-32M3000/32ML130 Only	27	3-6. Semiconductors	66
SECTION 2: SERVICE ADJUSTMENTS	38	SECTION 4: EXPLODED VIEWS	67
2-1. Using the Remote Commander for Electrical Adjustments ..	38	4-1. Rear Cover Assembly and Stand Assembly	67
2-2. Accessing Service Adjustment Mode	38	4-2. Chassis	68
2-3. Viewing the Service Menus	39	4-3. Connectors	69
2-4. Resetting to Factory Defaults	39	4-4. Bezel Assembly, LCD Panel and Speakers	70
SECTION 3: DIAGRAMS	40	SECTION 5: ELECTRICAL PARTS LIST	71
3-1. Circuit Boards Location	40	APPENDIX A: ENCRYPTION KEY COMPONENTS	A-1
3-2. Printed Wiring Boards and Schematic Diagrams Information	40		
3-3. Block Diagram	42		
3-4. Connection Diagram	43		

SPECIFICATIONS

Power Requirements 120V AC, 60Hz
220V, 50/60 Hz (Chile, Perú)

Video (IN) 1/2/3

S Video (4-Pin Mini DIN (VIDEO 1 Only))

Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative
C: 0.286 Vp-p (Burst signal), 75 ohms

Video

1.0 Vp-p, 75ohms unbalanced, sync negative

Audio

500 mVrms (100% modulation)
Impedance: 47 kilohms

COMPONENT IN 1/2

Y_P B_P R_P (Component Video)

Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative
P_B: 0.7 Vp-p, 75 ohms
P_R: 0.7 Vp-p, 75 ohms
Signal format: 480i, 480p, 720p, 1080i

AUDIO

500 mVrms (100% modulation)
Impedance: 47 kilohms

HDMI IN 1/2:

HDMI: Video: 480i, 480p, 720p, 1080i

Audio: Two channel linear PCM 32, 44.1 and 48 kHz, 16, 20 and 24 bits

AUDIO: (HDMI IN 2 only) 500 mVrms (100% modulation)
Impedance: 47 kilohms

AUDIO OUT:

500 mVrms (100% modulation)
More than 1 Vrms at the maximum volume setting (Variable)
More than 500 mVrms (Fixed)

PC IN:

D-sub 15-pin, analog RGB, 0.7 Vp-p, 75 ohms, positive



PC AUDIO INPUT:

Stereo mini jack, 500 mVrms, 47 kilohm


HEADPHONES:

Stereo mini jack
Impedance: ≥ 16 ohms

Trademark Information

Manufactured under license from Dolby Laboratories. "Dolby" and double-D symbol are trademarks of Dolby Laboratories.

This TV incorporates High-Definition Multimedia Interface (HDMI™) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Blu-ray is a trademark. "BRAVIA" and BRAVIA, , and PS3 are trademarks or registered marks of Sony Corporation.



Design and specifications are subject to change without notice.

	KDL-26M3000	KDL-26ML130	KDL-32M3000	KDL-32ML130
Power Consumption in use in standby	135W		170W	
	Less than 1W			
Speaker Output (W) mm in	10W + 10W			
	146 x 35 mm 5 ^{3/4} x 1 ^{3/8} in			
Dimensions (W x H x D) with stand mm in	662 x 515 x 214 mm 26 ^{1/8} x 20 ^{3/8} x 8 ^{1/2} in		796 x 590 x 214 mm 31 ^{3/8} x 23 ^{1/4} x 8 ^{1/2} in	
Dimensions (W x H x D) without stand mm in	662 x 468 x 108 mm 26 ^{1/8} x 18 ^{1/2} x 4 ^{3/8} in		796 x 544 x 100 mm 31 ^{3/8} x 21 ^{1/2} x 4 in	
Mass with stand kg lbs	13 kg 29 lbs		16 kg 36 lbs	
without stand kg lbs	11 kg 25 lbs		14 kg 31 lbs	

All measurements are approximations.

Television system

NTSC American TV Standard
 ATSC (8VSB terrestrial) ATSC compliant 8VSB
 QAM on cable: ANSI/SCTE 07 2000

Channel coverage

	Analog	Digital
Terrestrial	2-69	2-69
Cable	1-125	1-135

Antenna

75-ohm external terminal for VHF/UHF

Panel System

LCD (Liquid Crystal Display) Panel

Display Resolution (horizontal x vertical):

1,366 dots x 768 lines

Screen Size (measured diagonally)

approx. 26 inches (KDL-26M3000/26ML130 Only)

approx. 31.5 inches (KDL-32M3000/32ML130 Only)

Supplied Accessories

Remote Commander RM-YD021
 Two Size AA (R6) Batteries
 AC Power Cord
 Suport Belt, Securing Screw, and Wood Screw
 Cable Holder
 Operating Instructions
 Quick Setup Guide
 Warranty Card
 Online Registration Card
 Wall-Mount Instructions

Optional Accessories

Headphones Plug Adapter
 Connecting Cables
 Wall-Mount Bracket
 SU-WL100 (KDL-26M3000/26ML130 Only)
 SU-WL500 (KDL-32M3000/32ML130 Only)
 HD15-HD15 Cable
 75-ohm Coaxial Cable

WARNINGS AND CAUTIONS

CAUTION

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

CARRYING THE TV


To avoid dropping the TV and causing serious injury, be sure to follow these guidelines:

- ☐ Before carrying the TV, disconnect all cables.
- ☐ Carrying the large size TV requires two or more people.
- ☐ When you carry the TV, place your hand as illustrated and hold it securely. Do not put stress on the LCD panel.


KDL-26M3000/26ML130



KDL-32M3000/32ML130

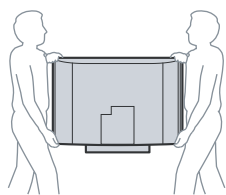

- ☐ When lifting or moving the TV, hold it firmly from the bottom. Place your palm directly under the panel.

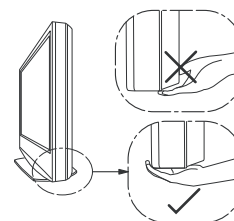

- ☐ When carrying, do not subject the TV to shocks or vibration, or excessive force.

WARNING!!

An isolation transformer should be used during any service to avoid possible shock hazard, because of live chassis. The chassis of this receiver is directly connected to the ac power line.



SAFETY-RELATED COMPONENT WARNING!!

Components identified by shading and ⚠ mark on the schematic diagrams, exploded views, and in the parts list are critical for safe operation. Replace these components with Sony parts whose part numbers appear as shown in this manual or in supplements published by Sony. Circuit adjustments that are critical for safe operation are identified in this manual. Follow these procedures whenever critical components are replaced or improper operation is suspected.

ATTENTION!!

Ces instructions de service sont à l'usage du personnel de service qualifié seulement. Pour prévenir le risque de choc électrique, ne pas faire l'entretien autre que celui contenu dans le Mode d'emploi à moins que vous soyez qualifié faire ainsi.

POUR TRANSPORTER LE TÉLÉVISEUR


Assurez-vous de suivre ces consignes pour éviter de laisser tomber le téléviseur et de provoquer des blessures graves :

- ☐ Avant de transporter le téléviseur, débranchez tous les câbles.
- ☐ Le transport du téléviseur doit être effectué par au moins deux personnes.
- ☐ Lorsque vous le transportez, placez vos mains tel que cela est illustré et tenez solidement l'appareil. N'appliquez pas de pression sur l'écran ACL.


KDL-26M3000/26ML130



KDL-32M3000/32ML130

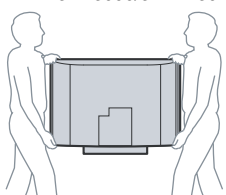

- ☐ Lorsque vous levez ou déplacez le téléviseur, assurez-vous de tenir solidement de la base. Placez la paume des mains directement sous le panneau.

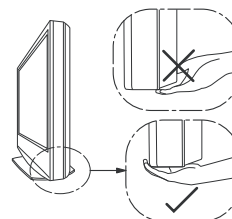

- ☐ Lorsque vous transportez le téléviseur, ne le soumettez pas à des chocs ou vibrations, ni à une force excessive.

Afin d'éviter tout risque d'électrocution provenant d'un châssis sous tension, un transformateur d'isolement doit être utilisé lors de tout dépannage. Le châssis de ce récepteur est directement raccordé à l'alimentation du secteur.



ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

Les composants identifiés par une trame et par une marque ⚠ sur les schémas de principe, les vues explosées et les listes de pièces sont d'une importance critique pour la sécurité du fonctionnement. Ne les remplacer que par des composants Sony dont le numéro de pièce est indiqué dans le présent manuel ou dans des suppléments publiés par Sony. Les réglages de circuit dont l'importance est critique pour la sécurité du fonctionnement sont identifiés dans le présent manuel. Suivre ces procédures lors de chaque remplacement de composants critiques, ou lorsqu'un mauvais fonctionnement suspecte.

SAFETY-RELATED COMPONENT WARNING

There are critical components used in LCD color TVs that are important for safety. These components are identified with shading and \triangle mark on the schematic diagrams and the electrical parts list. It is essential that these critical parts be replaced only with the part number specified in the electrical parts list to prevent electric shock, fire, or other hazard.

NOTE: Do not modify the original design without obtaining written permission from the manufacturer or you will void the original parts and labor guarantee.

USE CAUTION WHEN HANDLING THE LCD PANEL


When repairing the LCD panel, be sure you are grounded by using a wrist band.

When installing the LCD panel on a wall, the LCD panel must be secured using the 4 mounting holes on the rear cover.

To avoid damaging the LCD panel:


- do not press on the panel or frame edge to avoid the risk of electric shock.
- do not scratch or press on the panel with any sharp objects.
- do not leave the module in high temperatures or in areas of high humidity for an extended period of time.
- do not expose the LCD panel to direct sunlight.
- avoid contact with water. It may cause a short circuit within the module.
- disconnect the AC adapter when replacing the backlight (CCFL) or inverter circuit.
(High voltage occurs at the inverter circuit at 650Vrms.)
- always clean the LCD panel with a soft cloth material.
- use care when handling the wires or connectors of the inverter circuit. Damaging the wires may cause a short.
- protect the panel from ESD to avoid damaging the electronic circuit (C-MOS).

LEAKAGE CURRENT HOT CHECK CIRCUIT

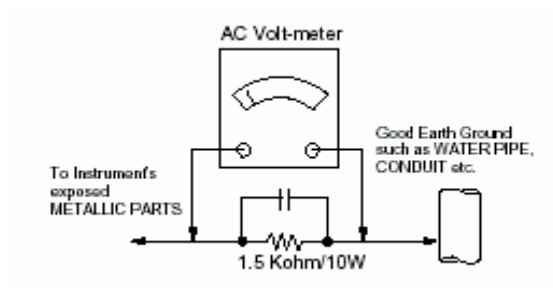

example 1

The circuit boards used in these models have been processed using Lead Free Solder. The boards are identified by the LF logo located close to the board designation e.g. H1 etc [see example]. The servicing of these boards requires special precautions to be taken as outlined below.

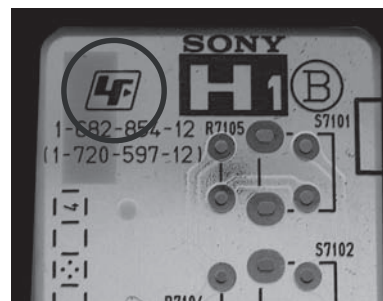

It is strongly recommended to use Lead Free Solder material in order to guarantee optimal quality of new solder joints. Lead Free Solder is available under the following part numbers :

Part number	Diameter	Remarks
7-640-005-19	0.3mm	0.25Kg
7-640-005-20	0.4mm	0.50Kg
7-640-005-21	0.5mm	0.50Kg
7-640-005-22	0.6mm	0.25Kg
7-640-005-23	0.8mm	1.00Kg
7-640-005-24	1.0mm	1.00Kg
7-640-005-25	1.2mm	1.00Kg
7-640-005-26	1.6mm	1.00Kg

Due to the higher melting point of Lead Free Solder the soldering iron tip temperature needs to be set to 370 degrees centigrade. This requires soldering equipment capable of accurate temperature control coupled with a good heat recovery characteristics.

For more information on the use of Lead Free Solder, please refer to <http://www.sony-training.com>

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or touching high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instructions.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low voltage scale. The Simpson's 250 and Sanwa SH-63TRD are examples of passive VOMs that are suitable. Nearly all battery-operated digital multimeters that have a 2 VAC range are suitable (see Figure A).

How to Find a Good Earth Ground

A cold-water pipe is a guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms.

If a cold-water pipe is not accessible, connect a 60- to 100-watt trouble- light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side on the line; the lamp should light at normal brilliance if the screw is at ground potential (see Figure B).

Leakage Test

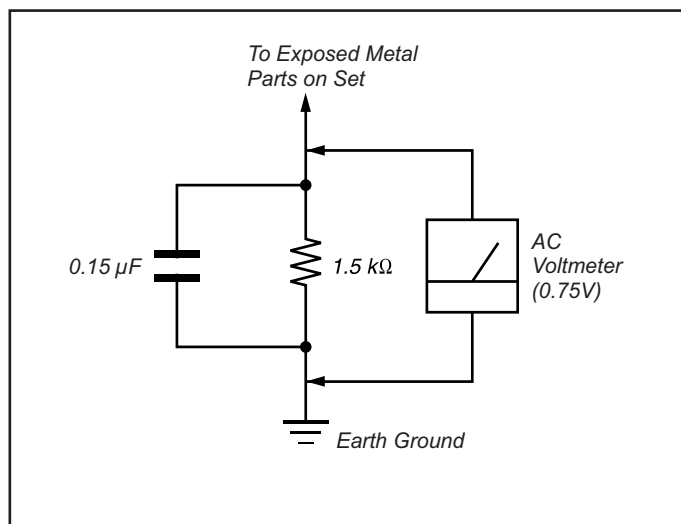


Figure A. Using an AC voltmeter to check AC leakage.

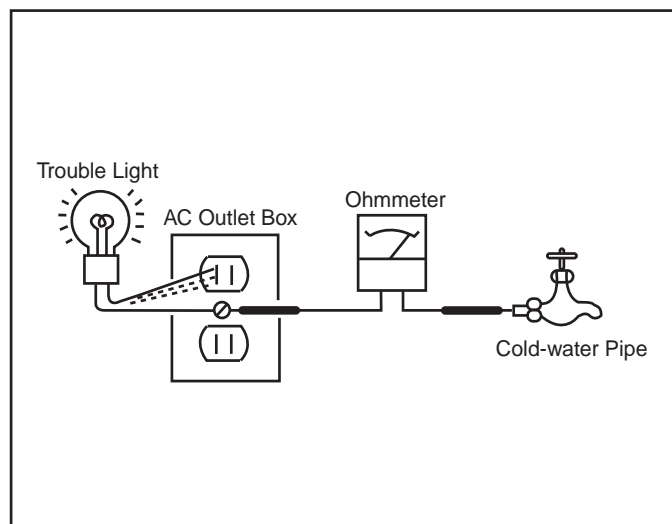


Figure B. Checking for earth ground.

SELF-DIAGNOSTIC FUNCTION




The units in this manual contain a self-diagnostic function. If an error occurs, the TIMER LED indicator will automatically begin to flash. The number of times the LED flashes translates to a probable source of the problem. A definition of the TIMER LED flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the Remote Commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

1. Diagnostic Test Indicators

When an error occurs, the TIMER LED indicator will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the indicator will identify the first of the problem areas.


Control Buttons

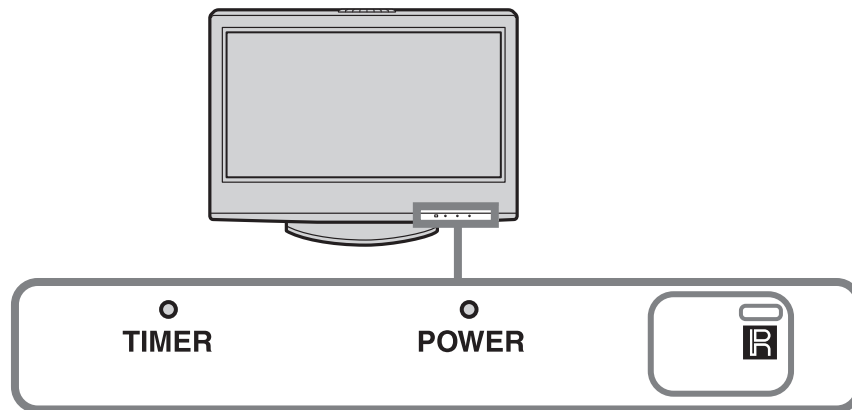

Description of LED Indicators

LED	LED Type	Description
POWER LED	Green LED	* Light is green when the TV set is on
TIMER LED	Amber/Green/Red LED	* Light is green when the Picture Off feature is activated. * Light is amber when the timer is set. * Blinks red when indicating the TV may need servicing

Display of TIMER LED Flash Count

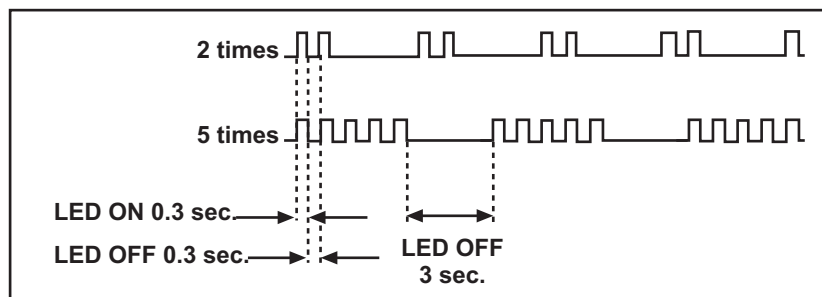


Viewing the Self Check Diagnostic List

1. TV must be in standby mode. (Power off).
2. Press the following buttons on the Remote Commander within a second of each other:

[DISPLAY] → Channel [5] → Volume [+/-] → [TV POWER].

The Self Check list displays. ↑ This is the SAME as accessing Service Adjustments.

Results for all of the following diagnostic items are displayed at the bottom of the screen. No error has occurred if the screen displays a "0".

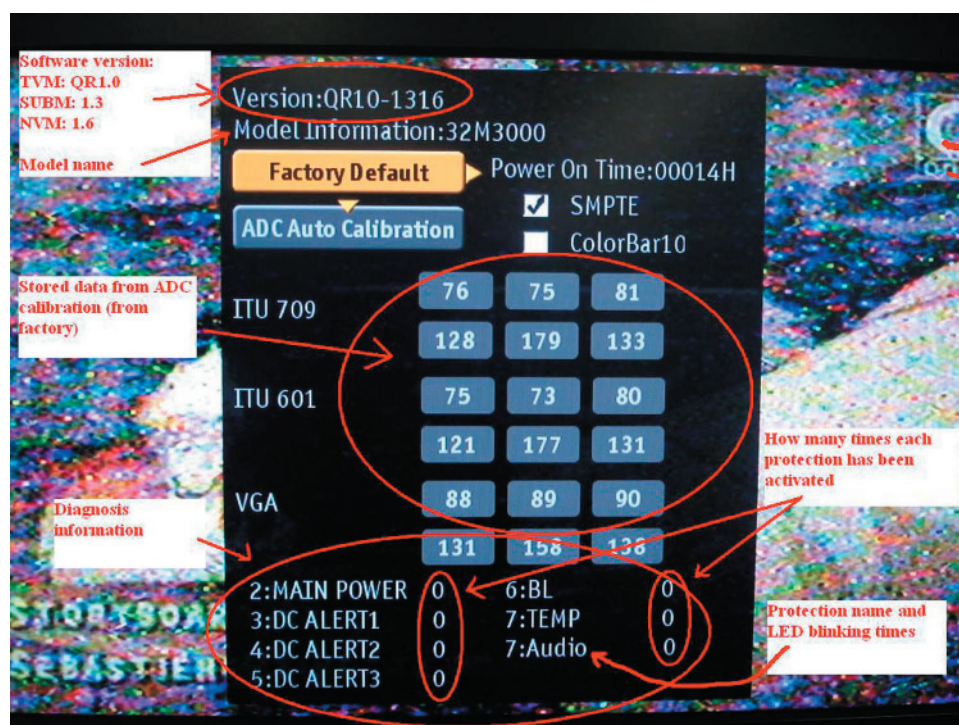

2: MAIN_POWER	0	6: BL (Back Light)	0	← 0 indicates no error was detected
3: DC_ALERT1	0	7: TEMP	1	← 1 indicates an error was detected
4: DC_ALERT2	0	7: Audio	0	
5: DC_ALERT3	0			


Clearing the Self Check Diagnostic List

1. In Service Mode, press the Channel [8] → Channel [0].

SECTION 1: DISASSEMBLY


1-1. REAR COVER REMOVAL

- ① Remove 2 screws from Rear Cover arm positions, +PSW M5X16
- ② Remove 2 screws from Terminals, +BVTP 3X12 TYPE2 TT(B)
- ③ Remove 14 screws from Rear Cover, +BVTP2 4X16

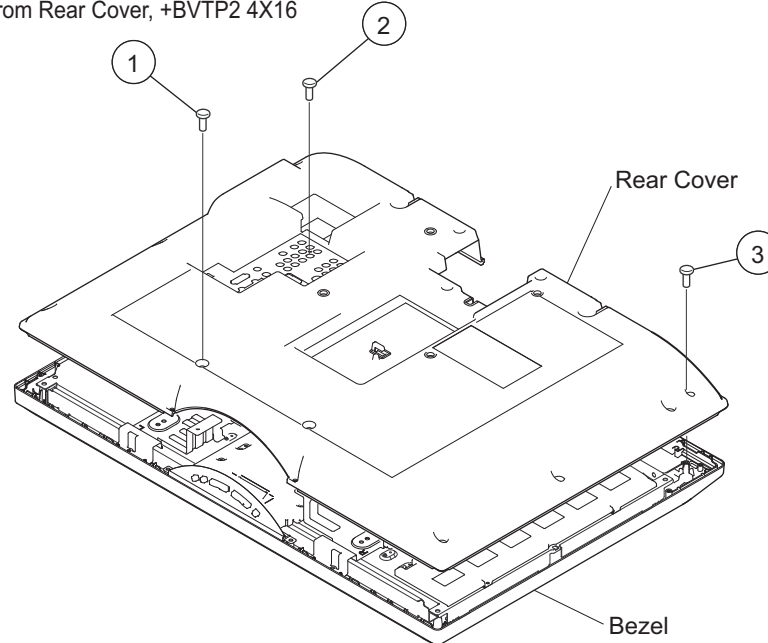


1-2. ARM, UNDER COVER AND STAND REMOVAL

- ① Remove 2 screws from bottom of VESA Arms, +PSW M5X16
- ② Remove 3 screws from Under Cover and Stand, +BVTP2 4X16 (32" only)
- ③ Remove 2 screws from Under Cover and Bezel, +BVTP2 4X16

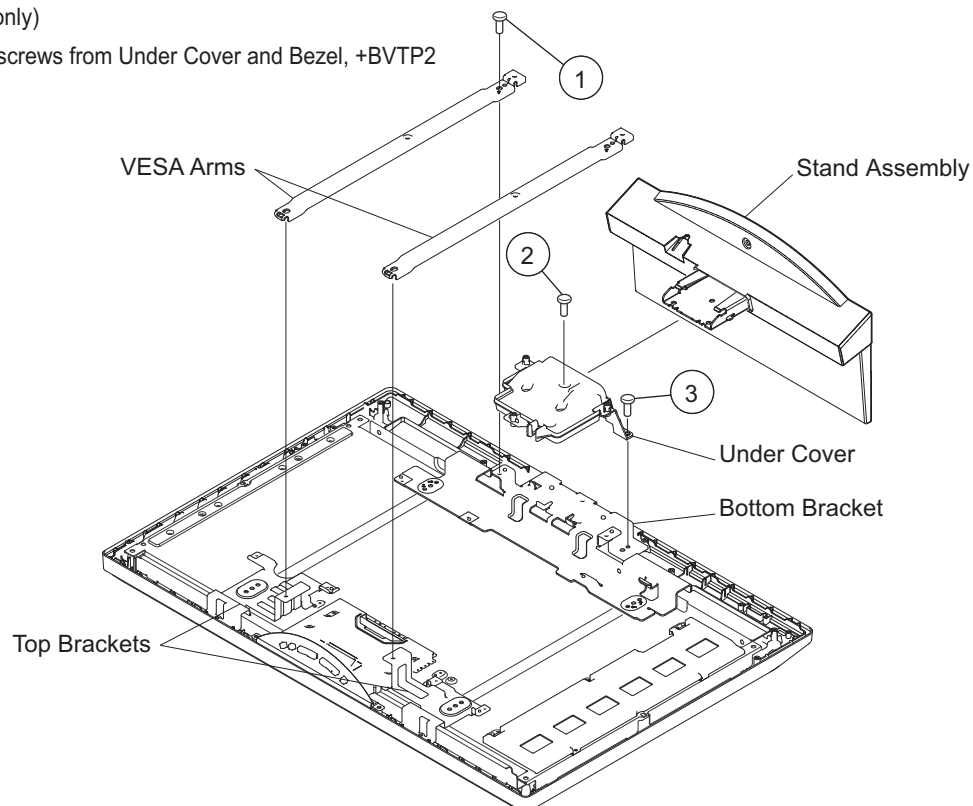


1-3. HM1 BOARD REMOVAL

- ① Remove from bezel
- ② Disconnect one connector
- ③ Release hooks and remove HM1 Board

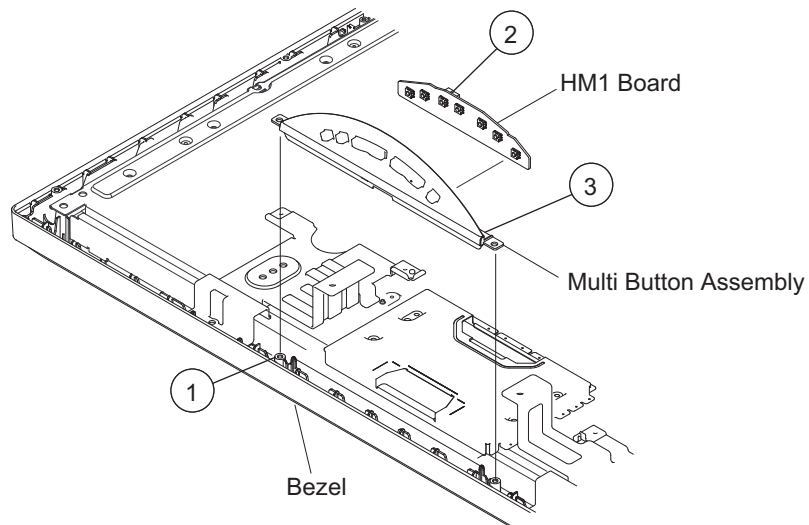


1-4. UM BOARD AND JACK HOLDER REMOVAL

- ① Remove one screw, +BVTP 3X12 TYPE2 TT(B)
- ② Disconnect 2 connectors
- ③ Remove 2 screws, +BVTP 3X12 TYPE2 TT(B)

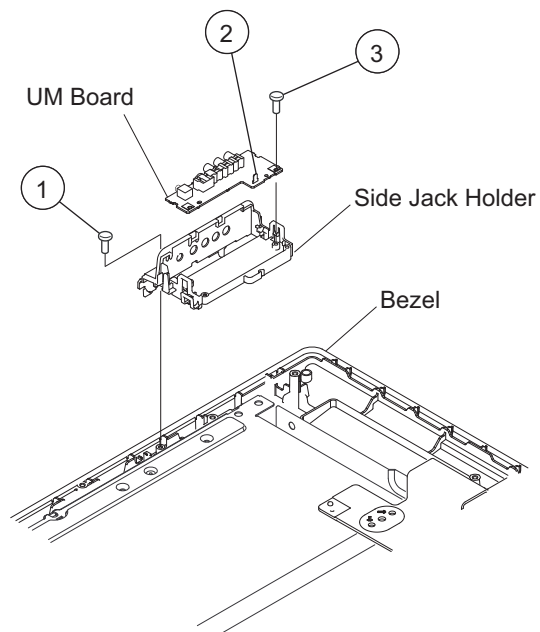


1-5. SPEAKER, LIGHT GUIDE AND HM3 BOARD REMOVAL

- ① Slide out Speakers from Bezel
- ② Disconnect one connector
- ③ Remove 2 screws, +BVTP 3X12 TYPE2 TT(B)

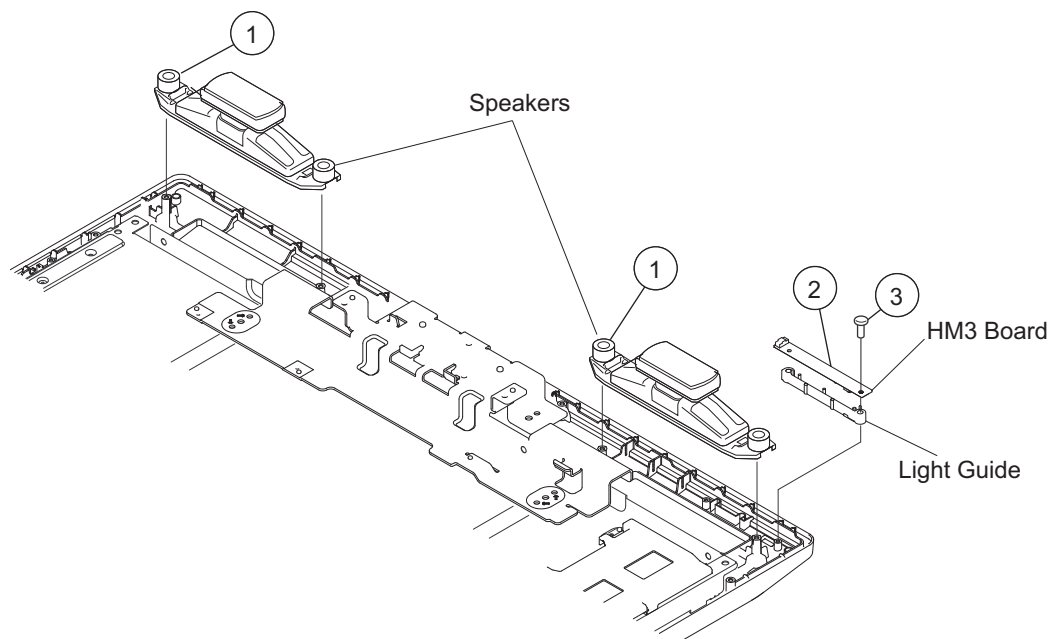


1-6. BM BOARD REMOVAL

- ① Remove 4 screws, +BVST 3X8
- ② Remove 2 screws, +BVST 3X8
- ③ Remove 2 screws, HEX
- ④ Remove 2 screws, +PSW M3X5
- ⑤ Remove 7 screws, +BVST 3X8
- ⑥ Disconnect 8 connectors
- ⑦ Remove one screw, +PSW M3X5
- ⑧ Remove 4 screws, +PSW M3X5

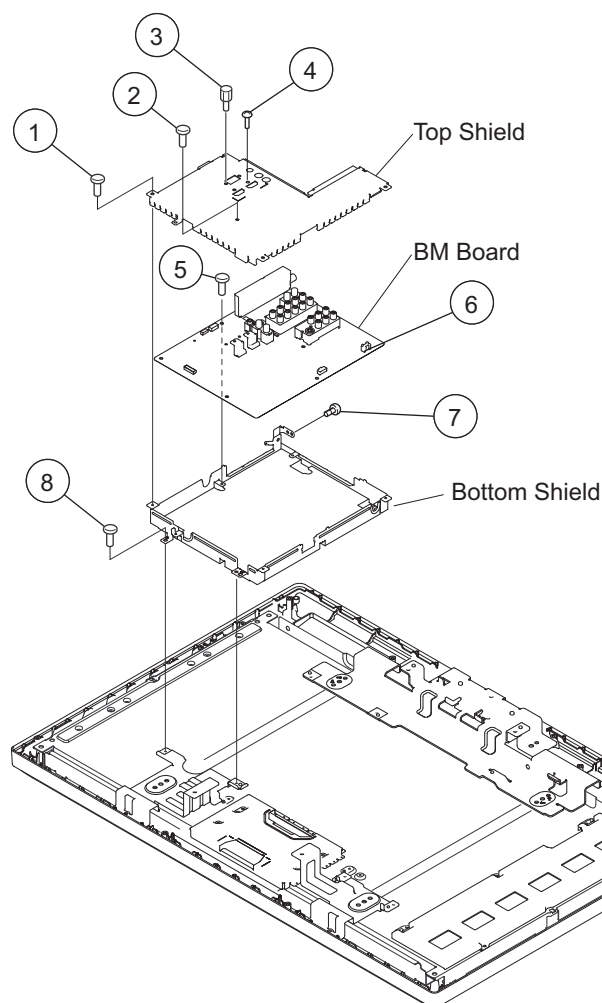


1-7. G1 BRACKET AND G1M BOARD REMOVAL

- ① Remove 3 screws (32"), 4 screws (26"), +PSW 3SG
- ② Disconnect 3 connectors

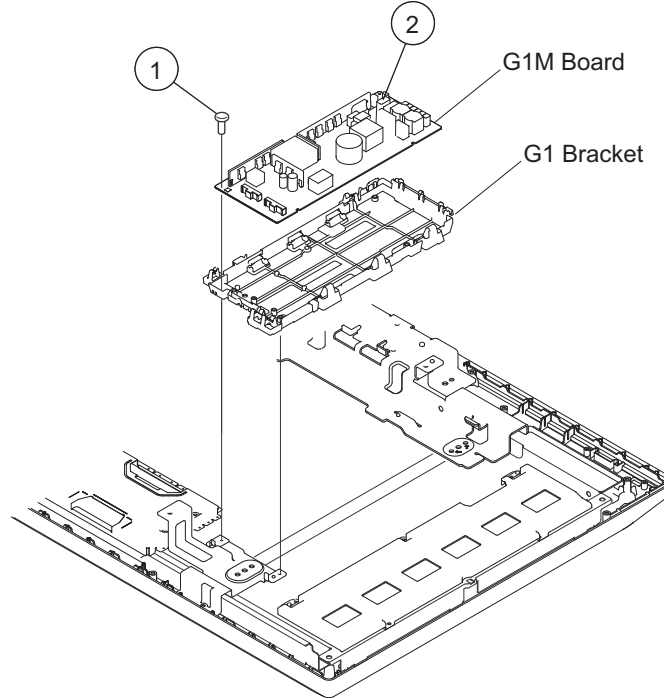

1-8. VESA BRACKET REMOVAL

- ① Remove 4 screws, +PSW M4X8
- ② Remove 2 screws, +BVTP2 4X16
- ③ Remove 4 screws, +PSW M4X8
- ④ Remove 2 screws, +BVTP2 4X16
- ⑤ Remove 4 screws, +PSW M4X8
- ⑥ Remove 2 screws, +BVTP2 4X16


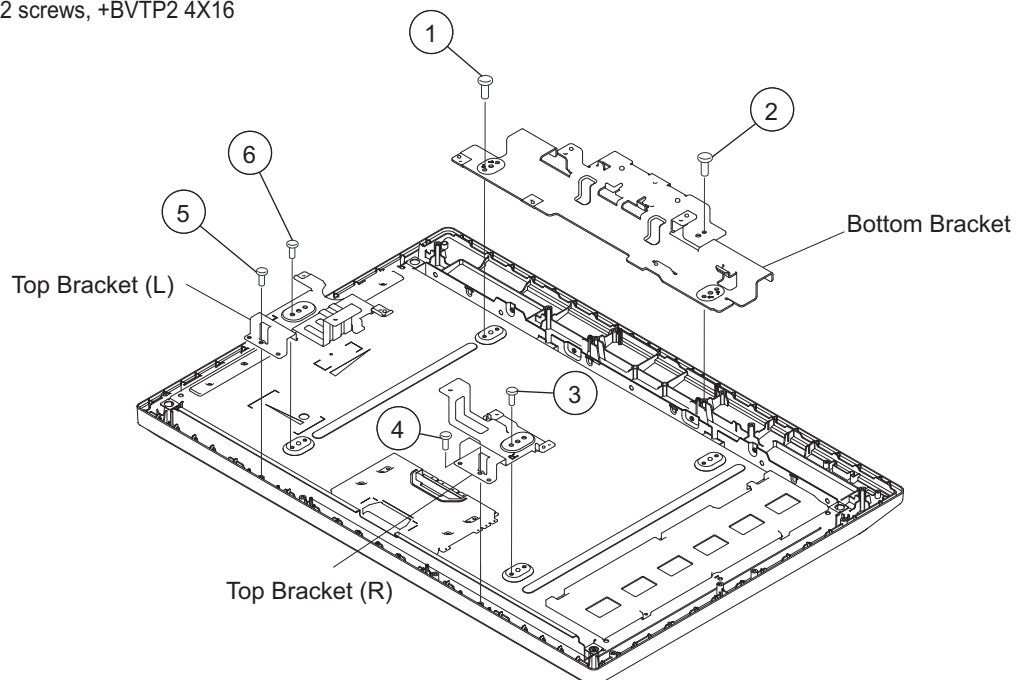


1-9 LCD PANEL/BRACKET AND LED LIGHT GUIDE REMOVAL

CAUTION:

Be sure to identify the inverter cover screws before proceeding. **DO NOT** remove the screws securing the plastic strip holding the lamp sockets.


- ① Remove 2 screws, +BVTP2 4X16

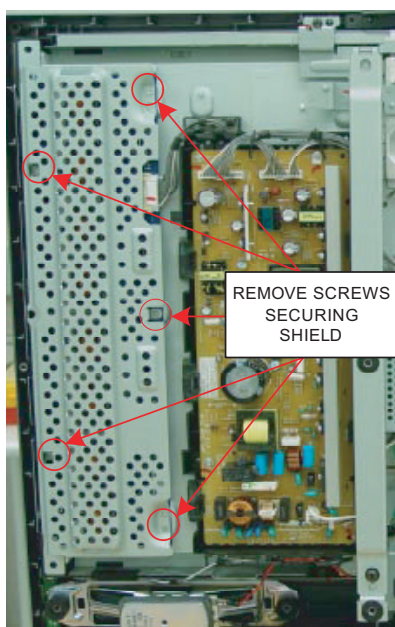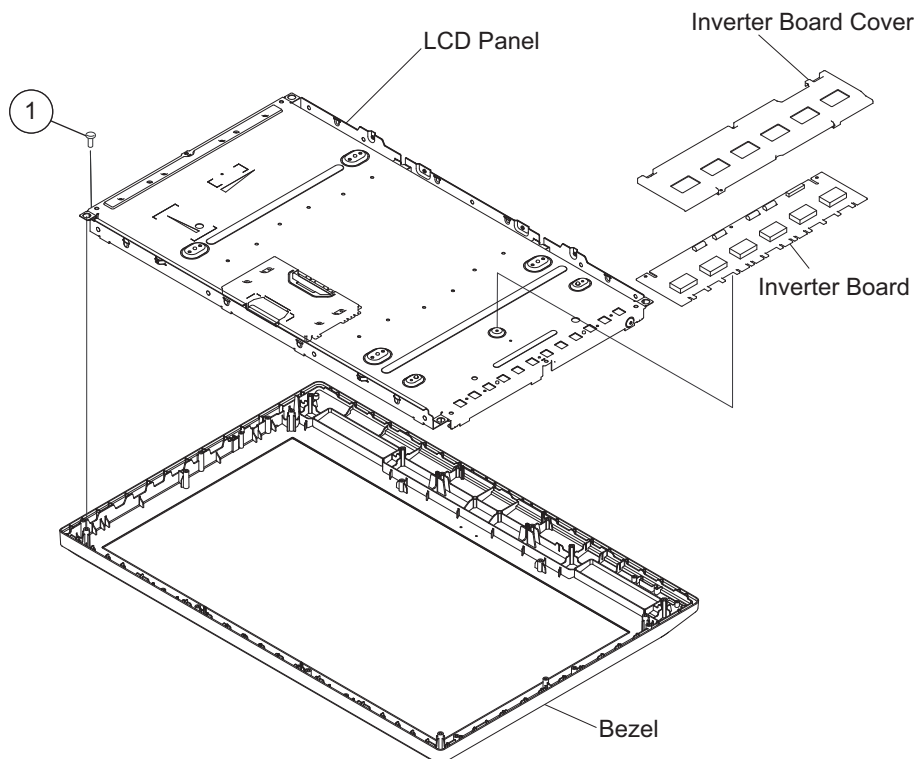

SHIELD REMOVAL


WARNING!

NEVER REMOVE THE SCREWS SECURING THE PLASTIC STRIP HOLDING THE LAMP SOCKETS. DAMAGE TO THE BACKLIGHT TUBES WILL OCCUR!

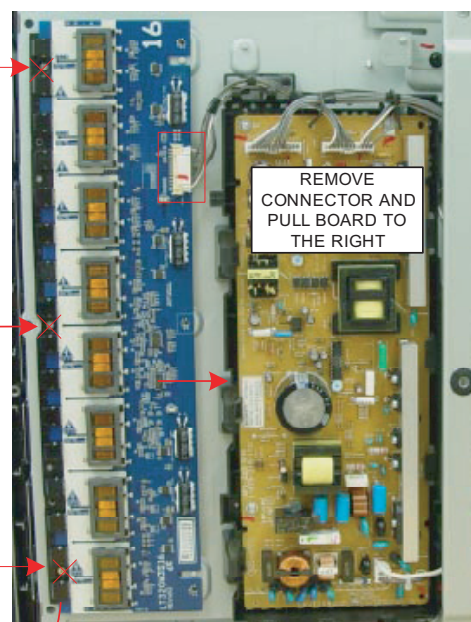

INVERTER BOARD REMOVAL


Only remove the screws securing the inverter cover which may be metal or plastic. The remaining plastic strip contains sockets for the fluorescent backlights and should never be loosened. The backlights will pop out of the sockets and/or break the backlight requiring a LCD panel replacement. The example shown is a 32" model but applies to all models.

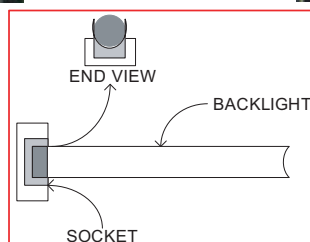


KDL-26M3000/26ML130 ONLY



KDL-26M3000/26ML130 ONLY

GROUND CABLE

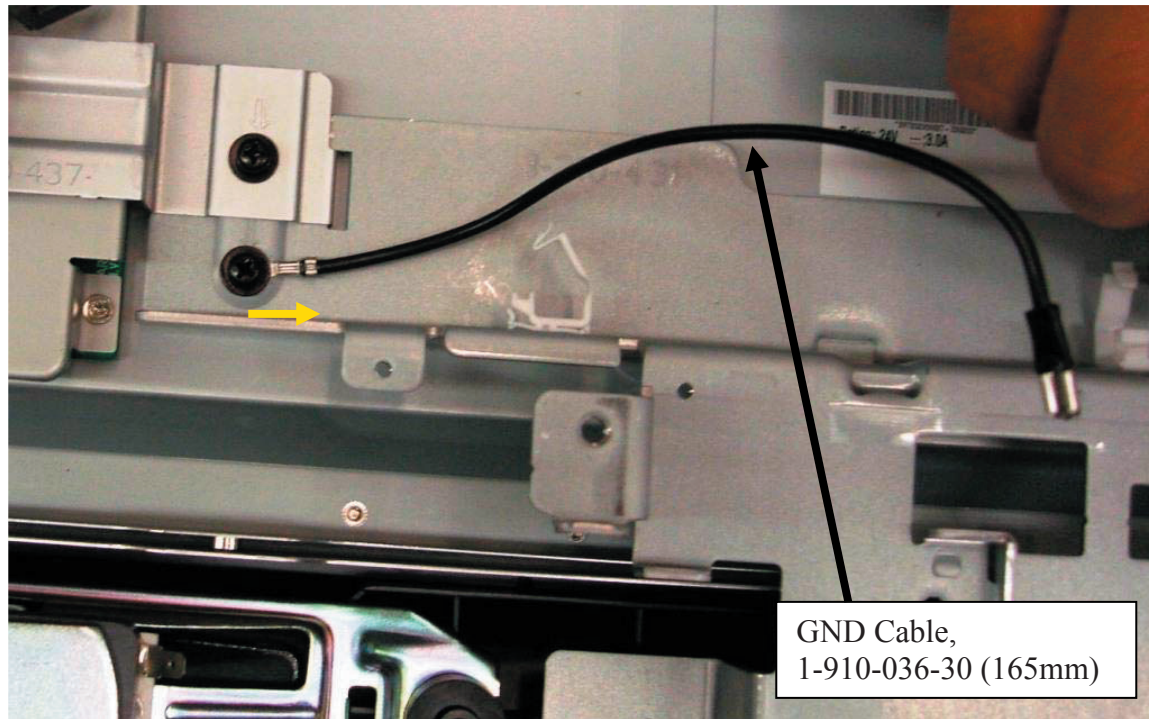


LVDS CONNECTOR

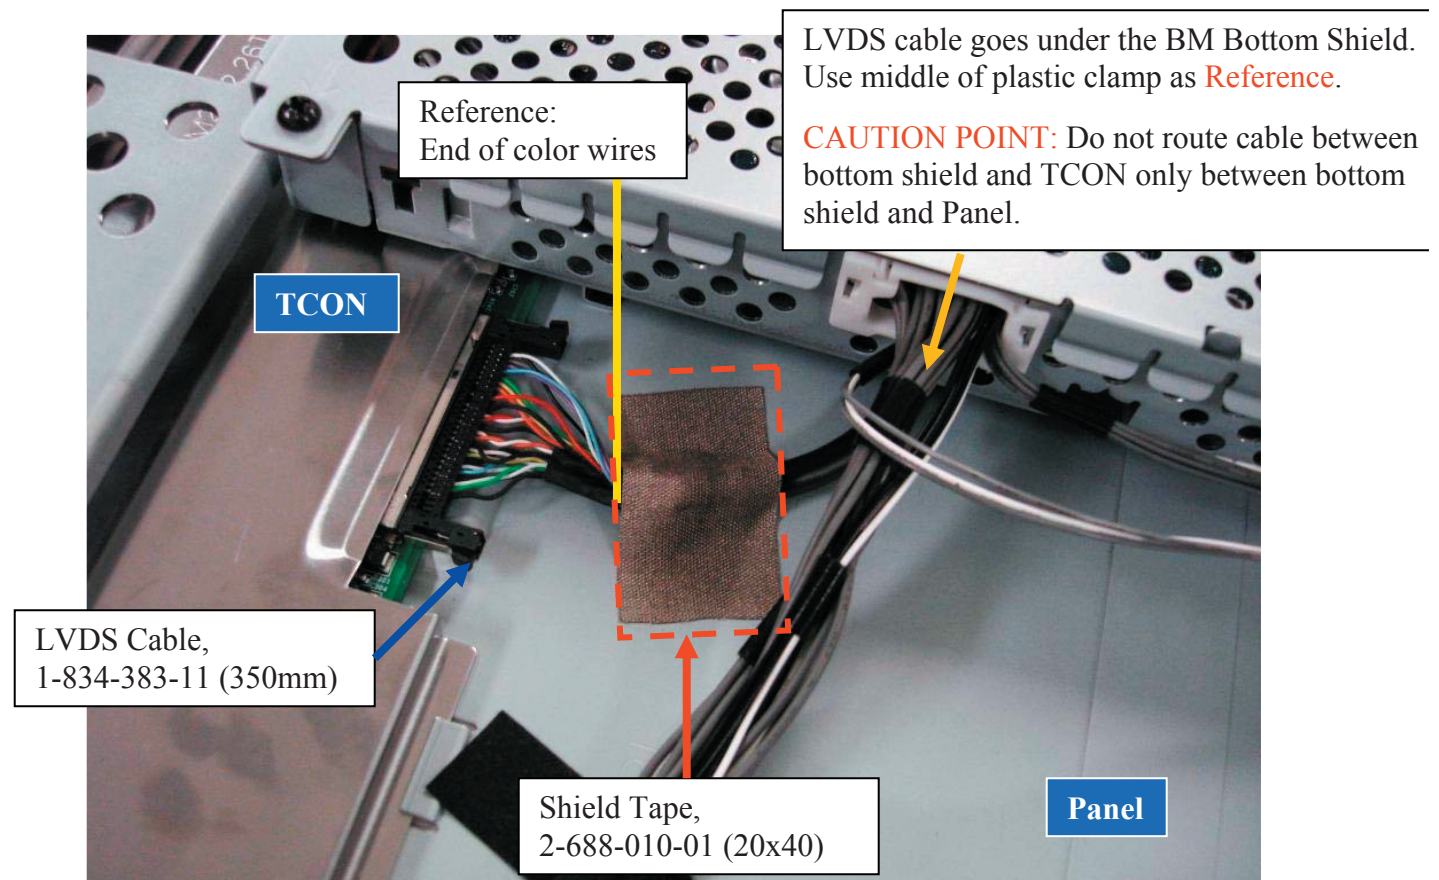

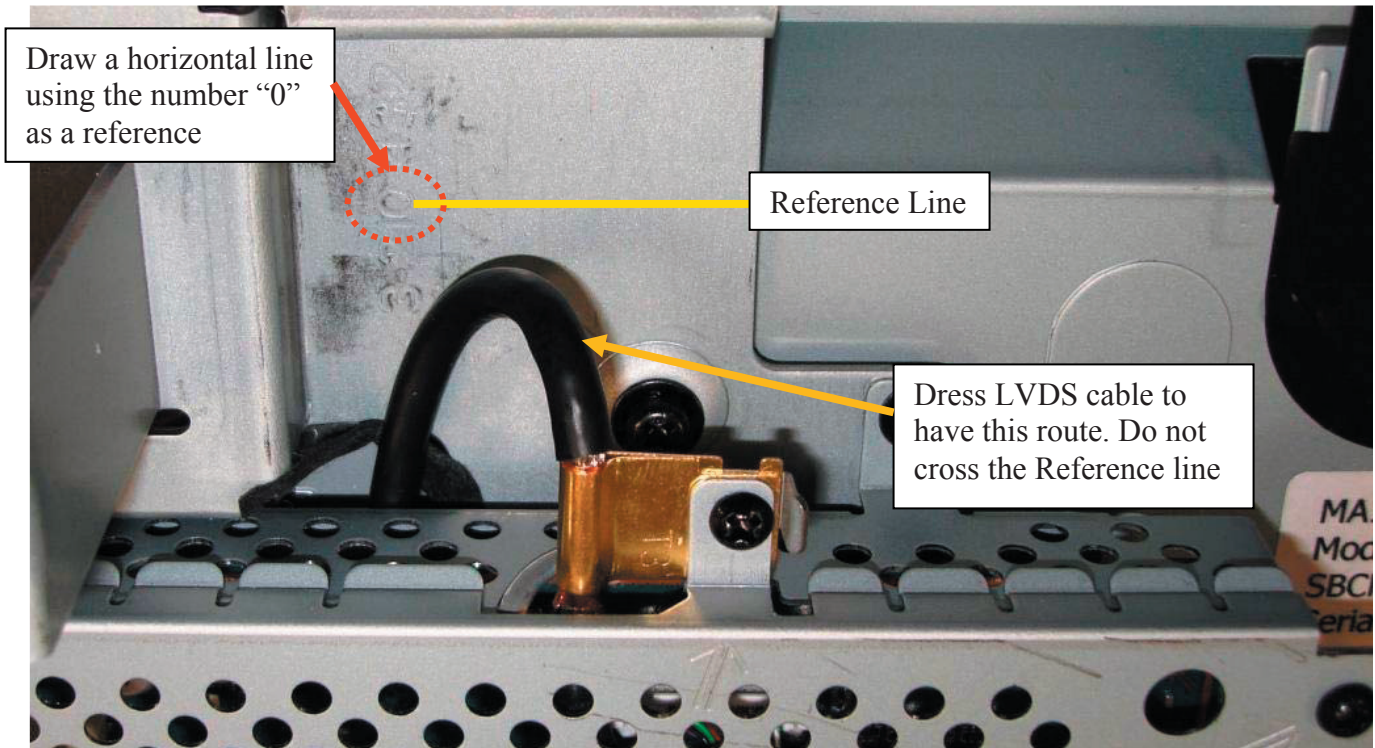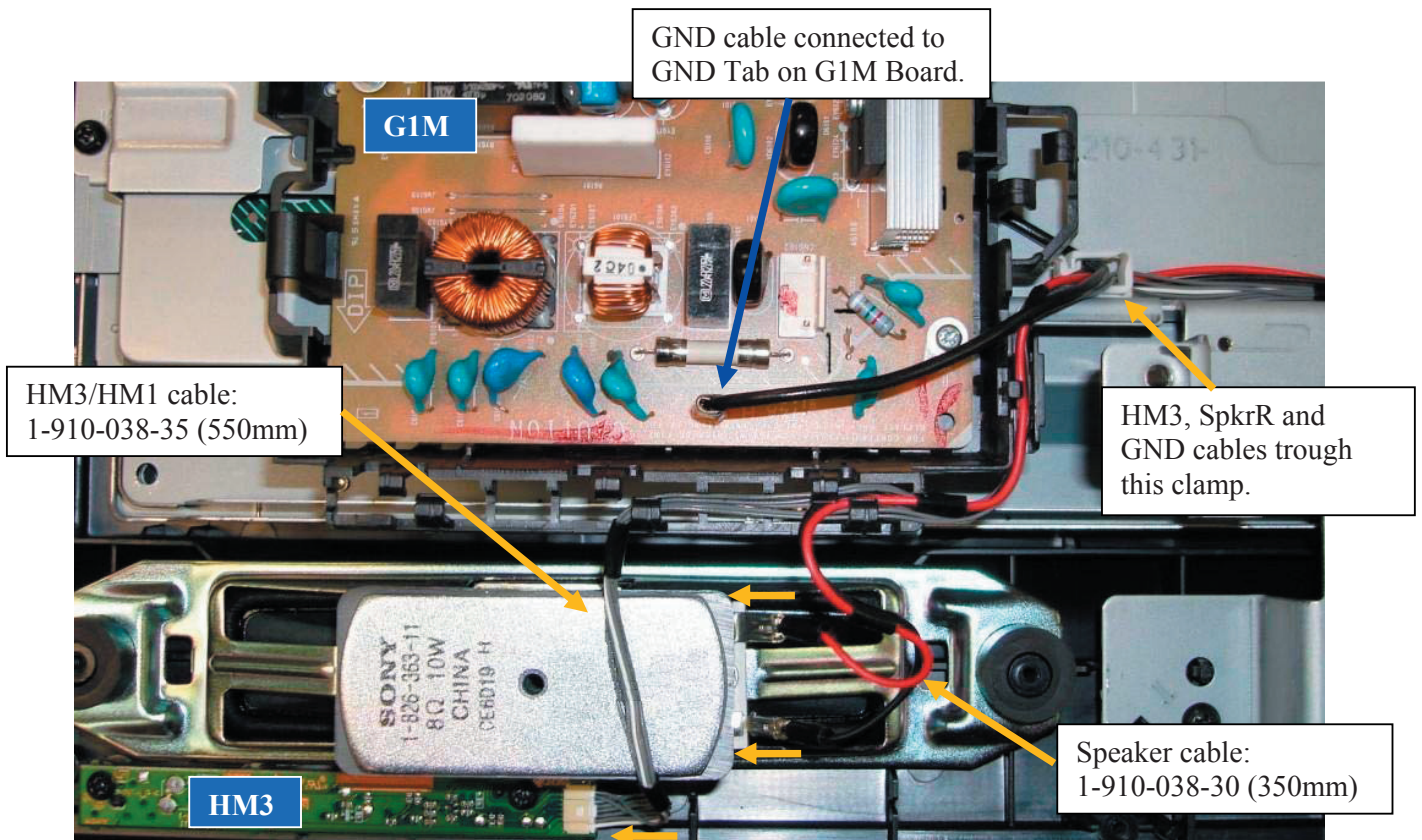
KDL-26M3000/26ML130 ONLY**LVDS CONNECTOR (CONTINUED)****HM3 BOARD AND SPEAKERS**

KDL-26M3000/26ML130 ONLY

HM3 BOARD AND SPEAKERS (CONTINUED)

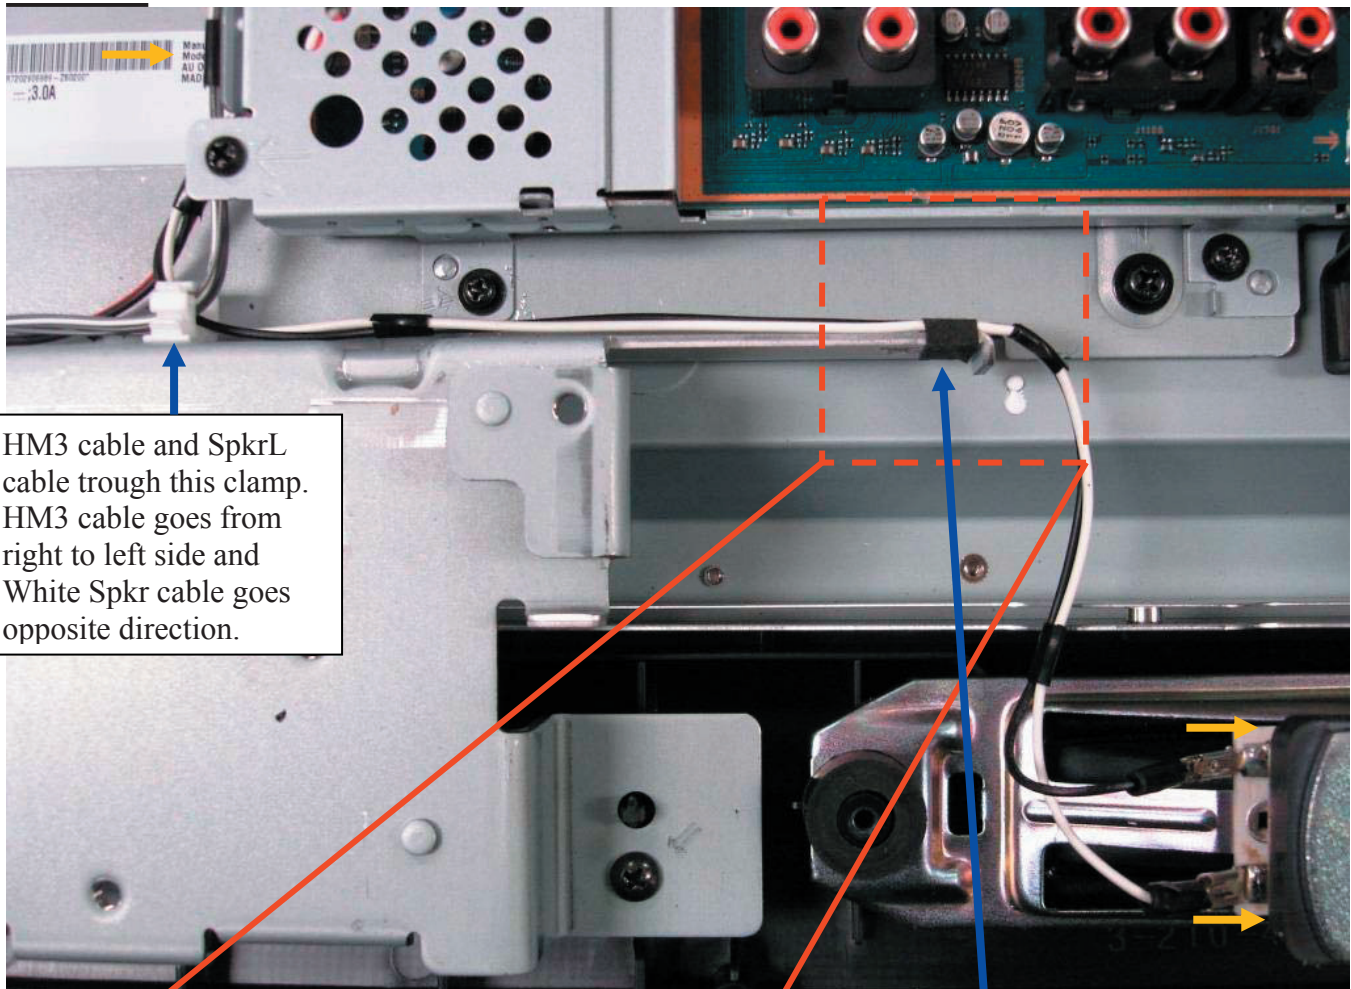

HM3 cable and SpkrL cable trough this clamp. HM3 cable goes from right to left side and White Spkr cable goes opposite direction.

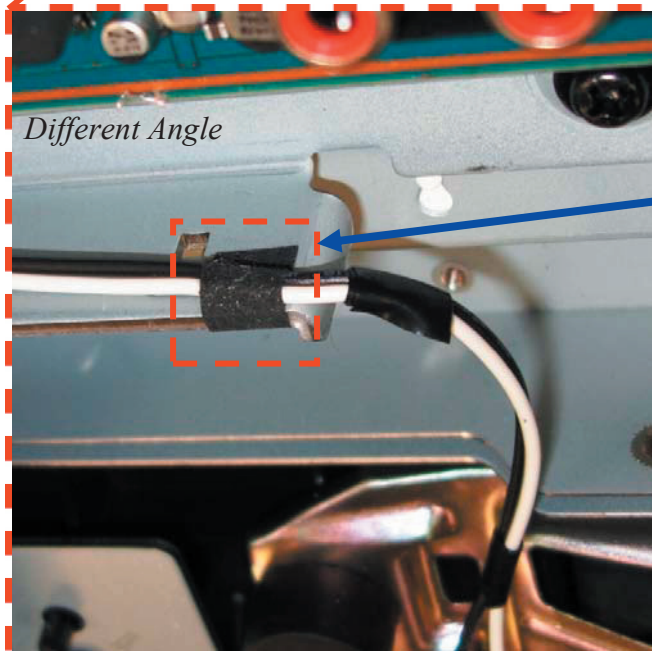


Different Angle

Fix cable to metal part using:
Himelon Tape (LCD)
2-688-062-01 (8x30)
Cable and Himelon position should be as shown in picture.


KDL-26M3000/26ML130 ONLY

INVERTER BOARD CONNECTORS

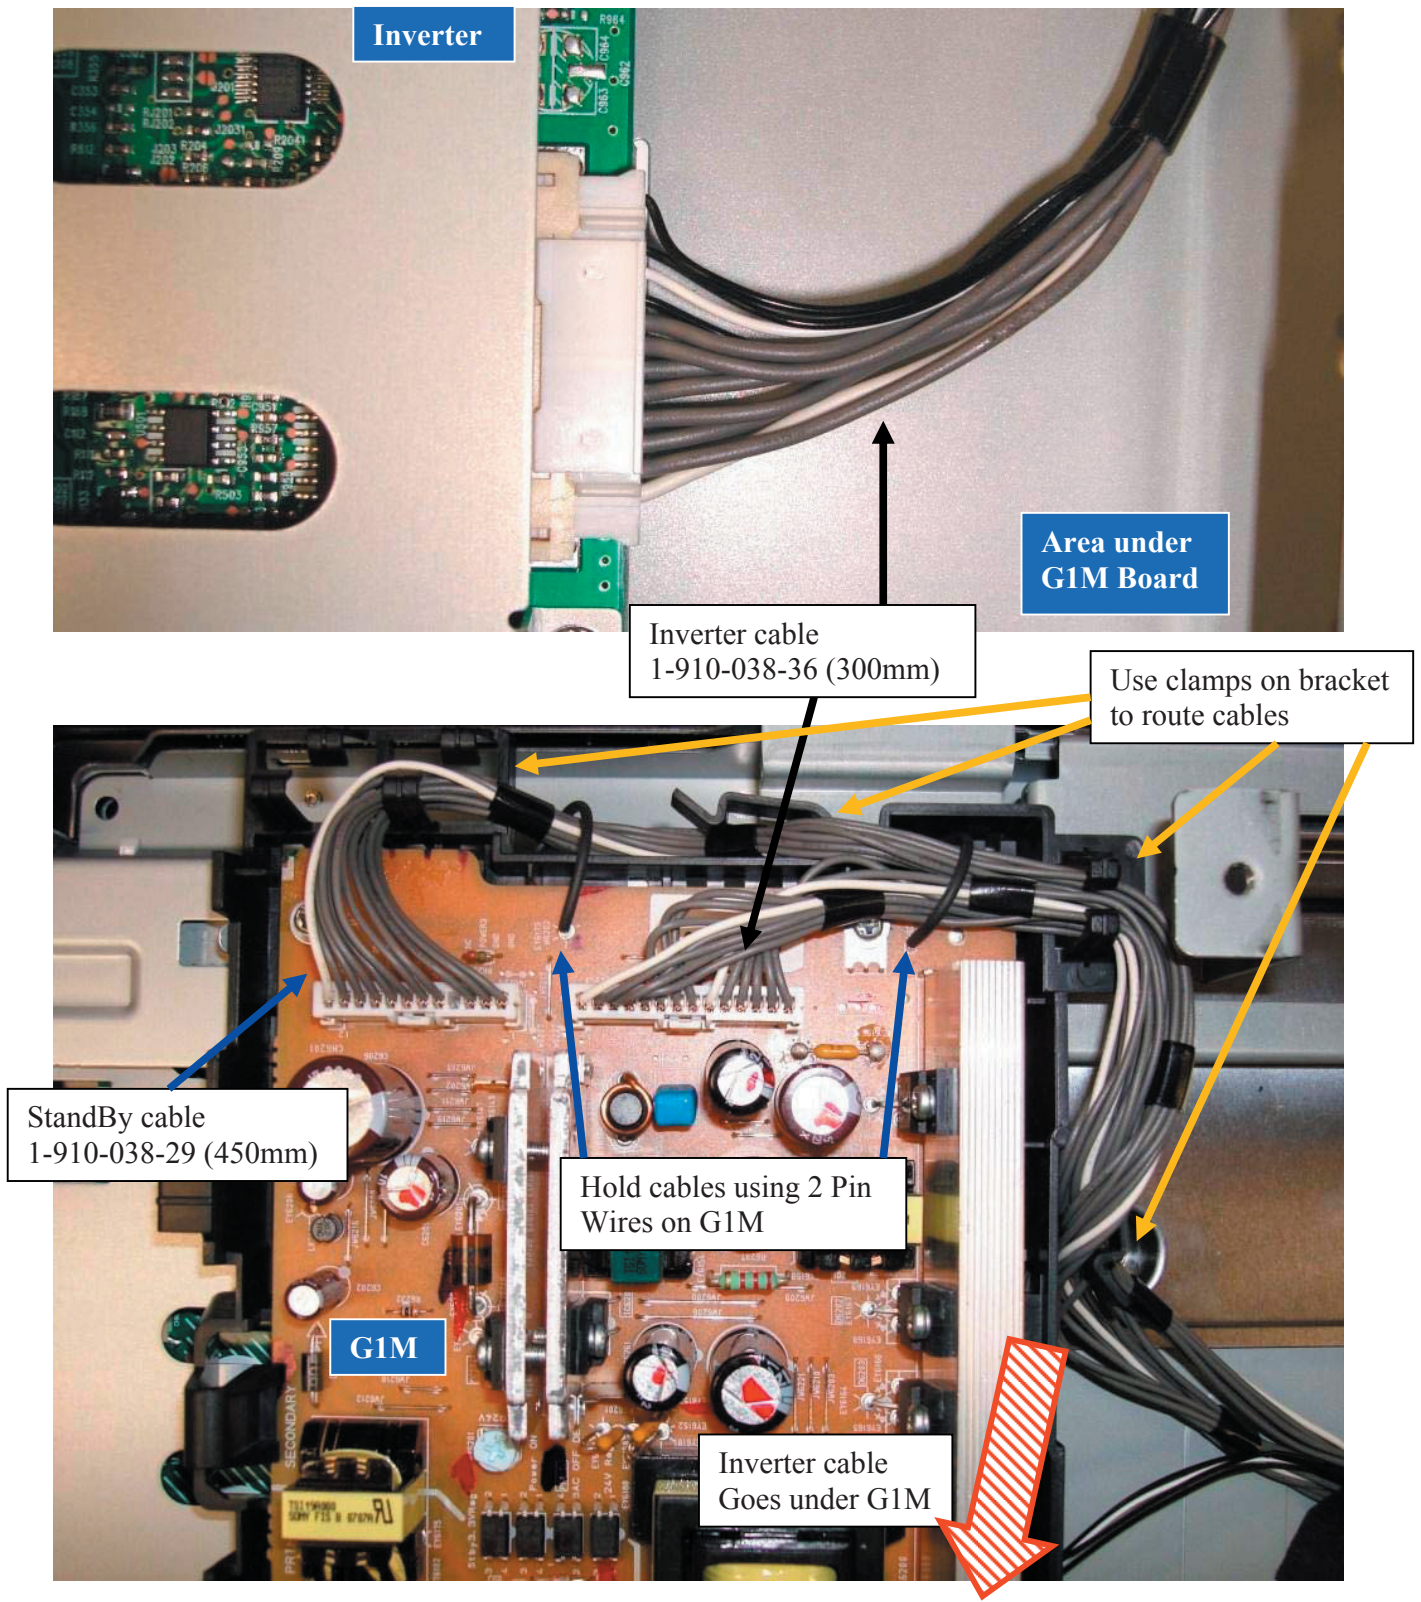


KDL-26M3000/26ML130 ONLY

HDMI CONNECTORS

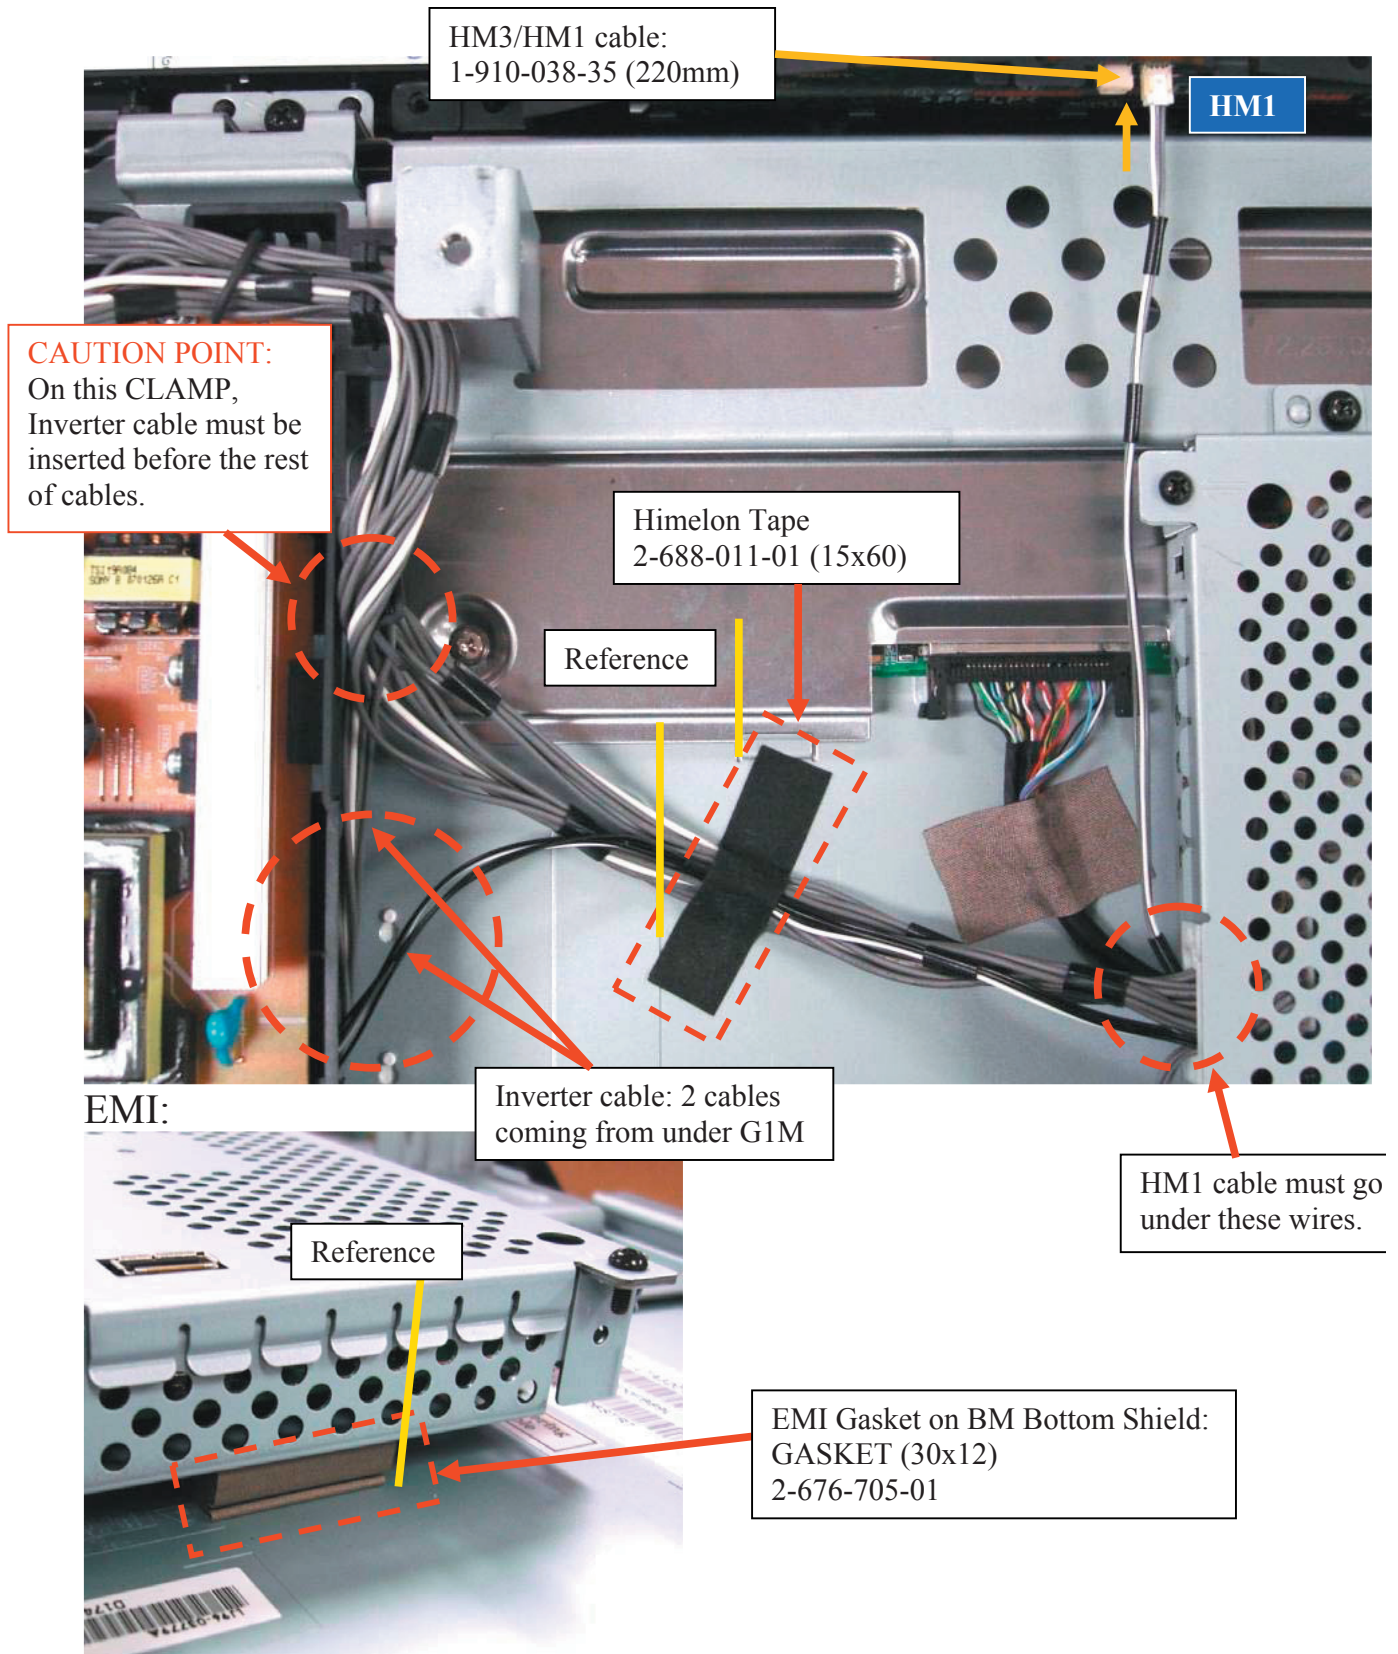



KDL-26M3000/26ML130 ONLY

VIDEO CONNECTORS AND GROUND CABLE

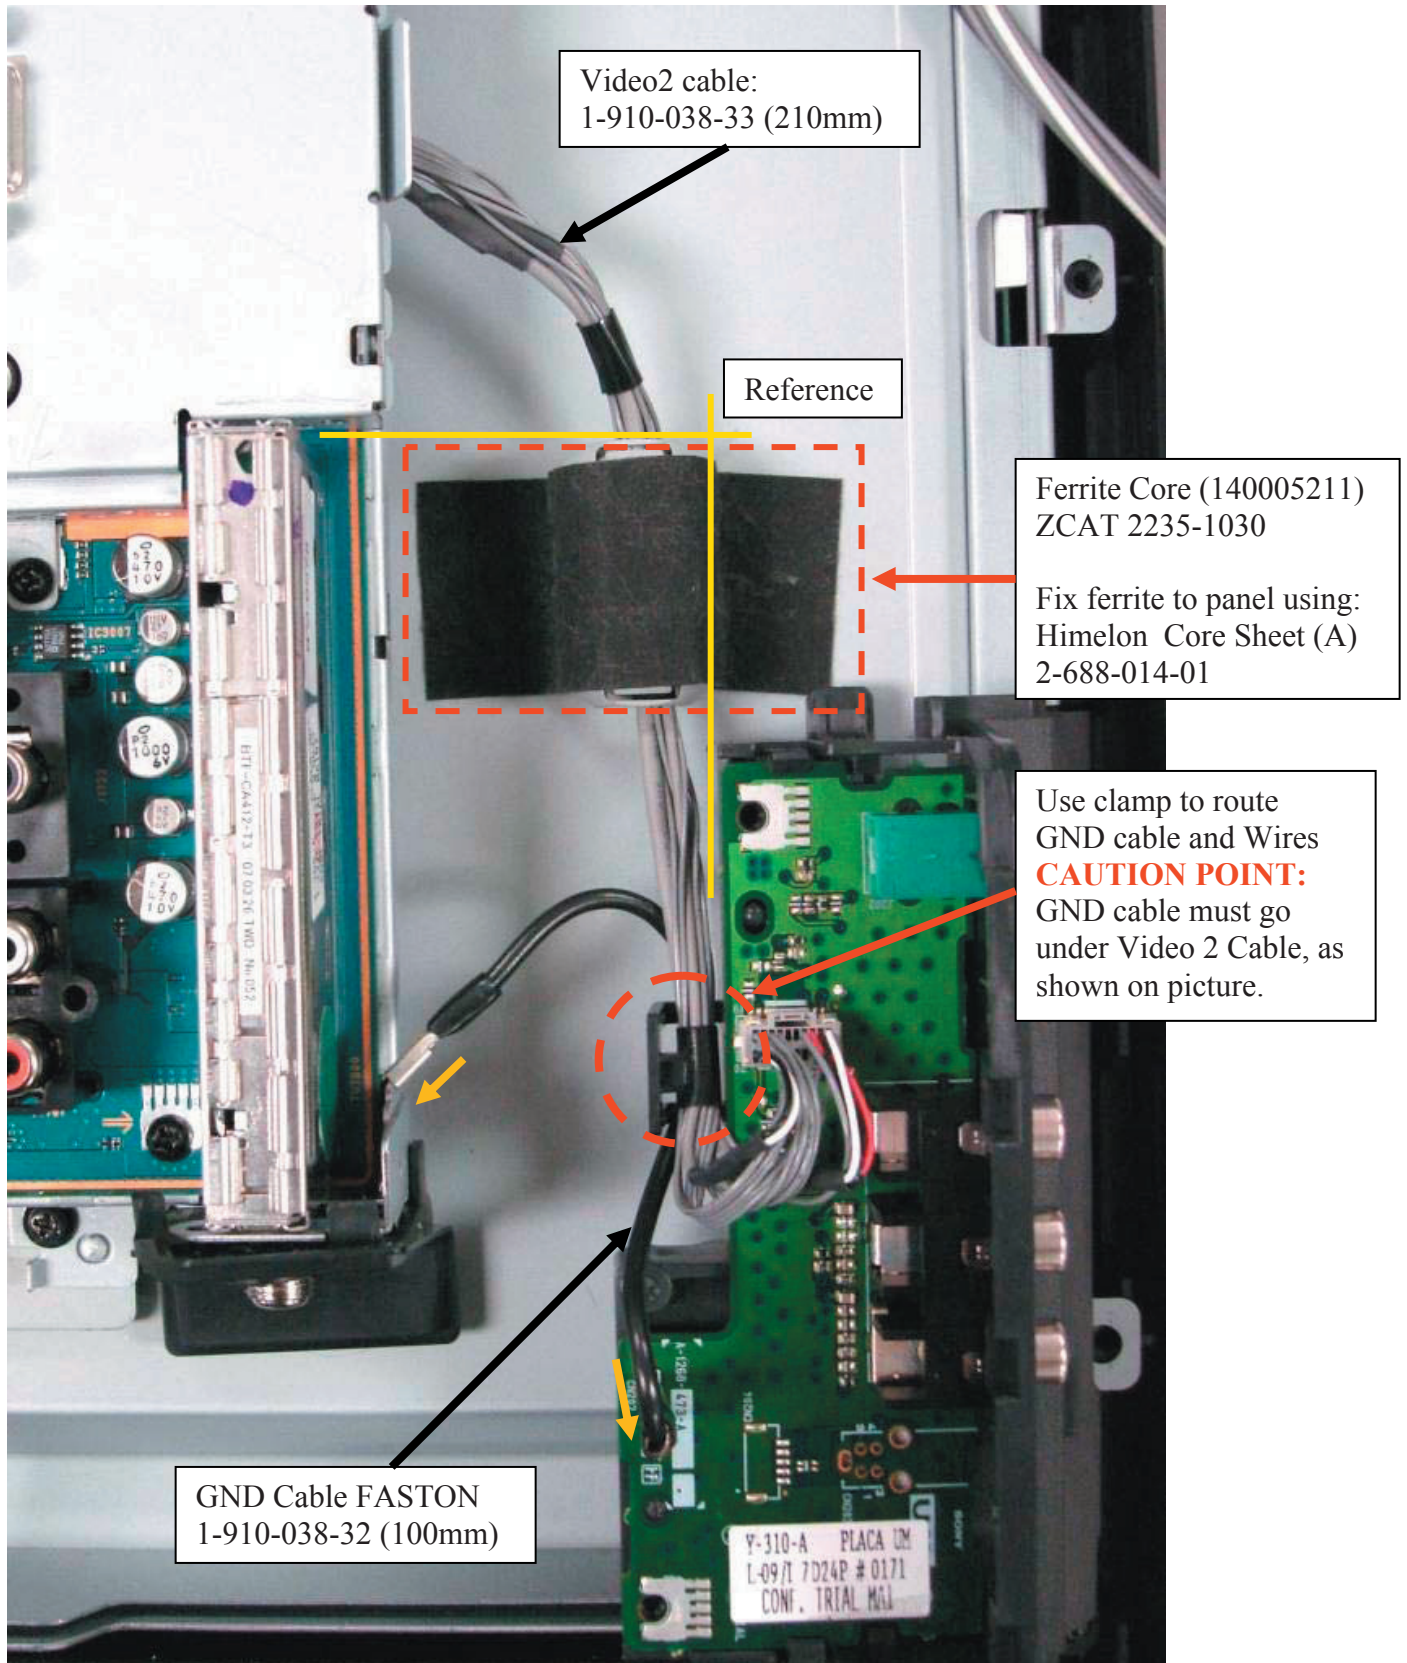


KDL-26M3000/26ML130 ONLY

AC CORD CONNECTOR

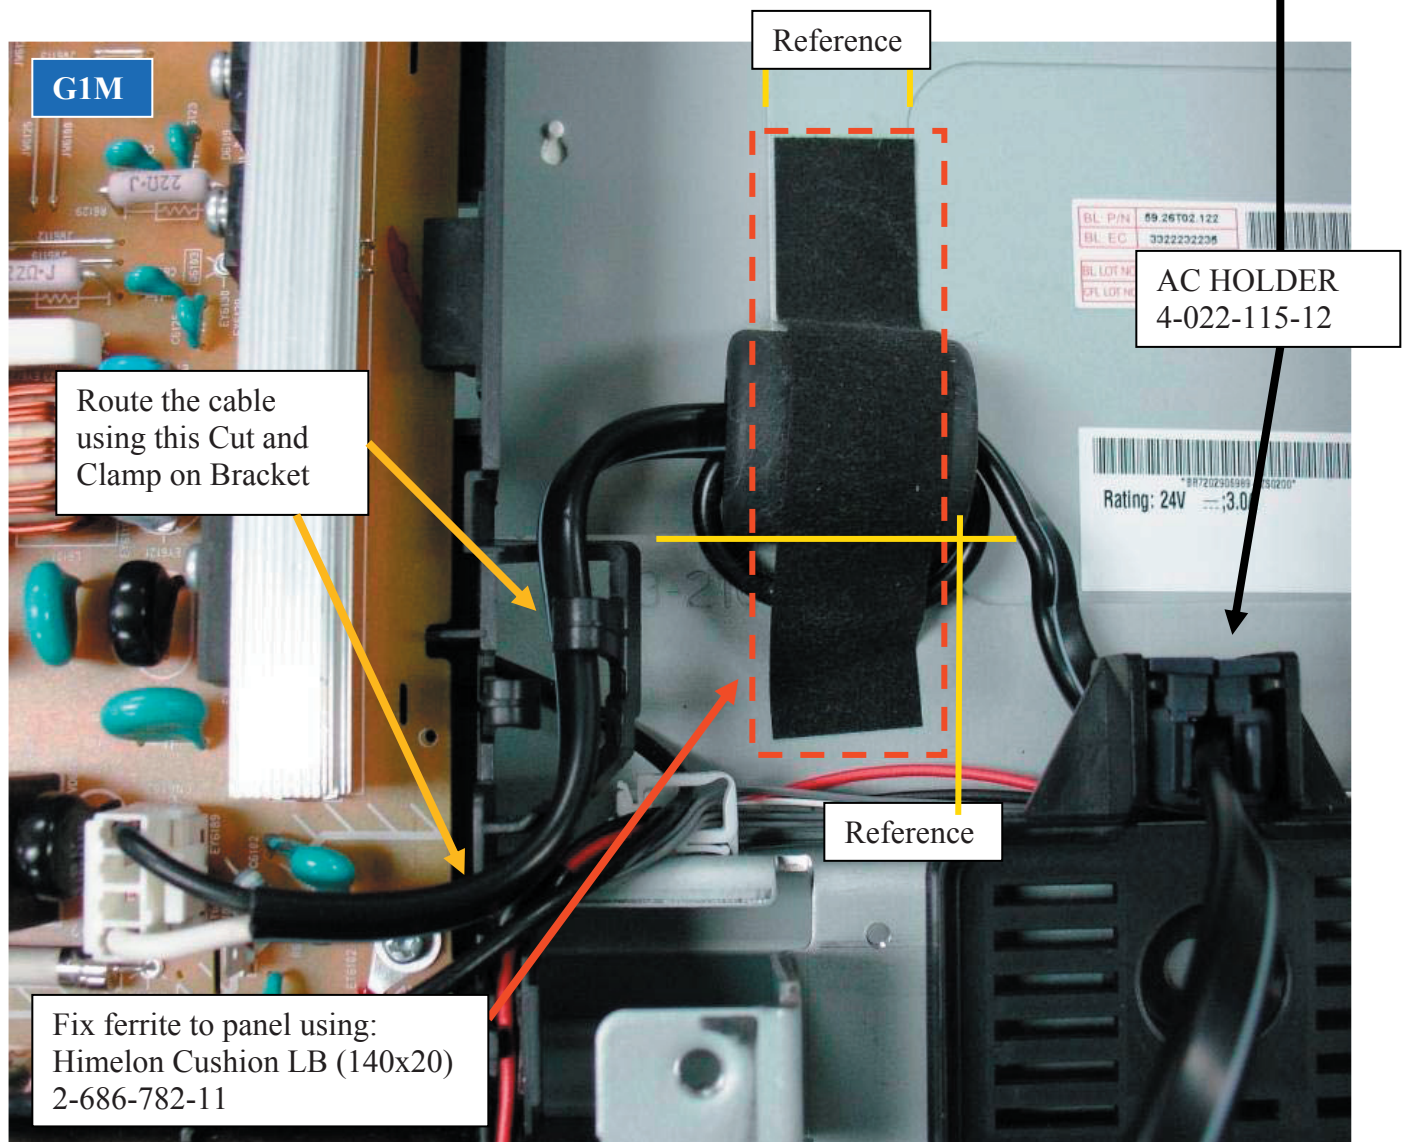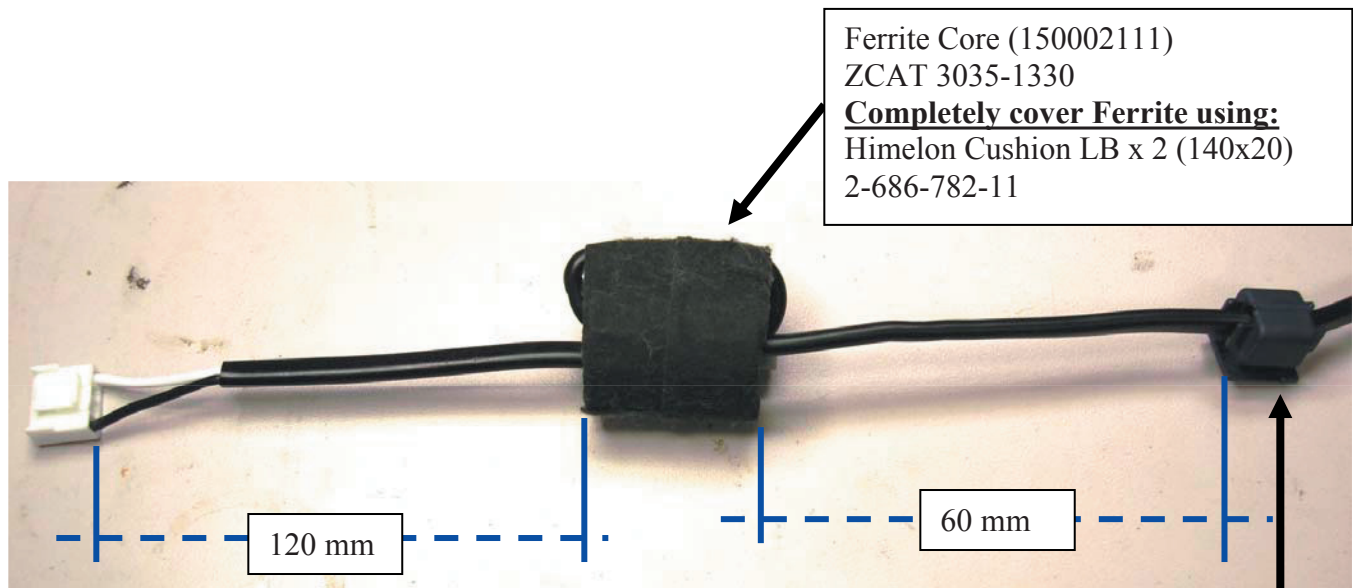


KDL-26M3000/26ML130 ONLY

SHIELD TAPE PLACEMENT

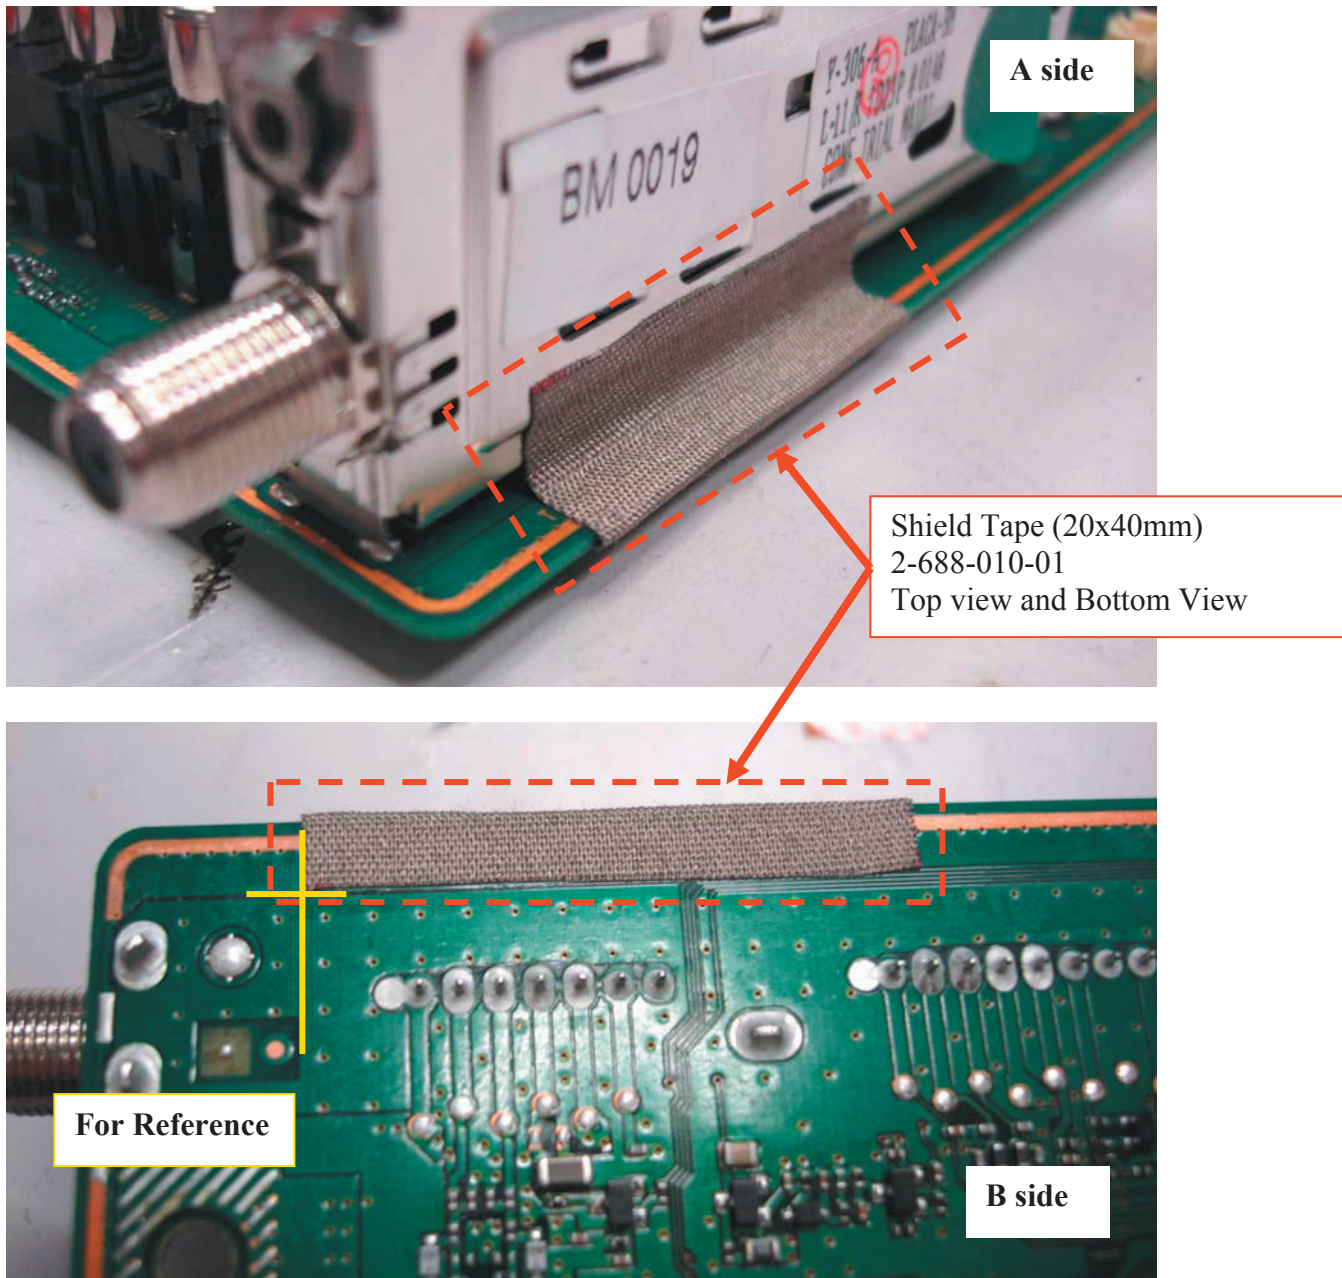

KDL-26M3000/26ML130 ONLY

SHIELD TAPE PLACEMENT (CONTINUED)

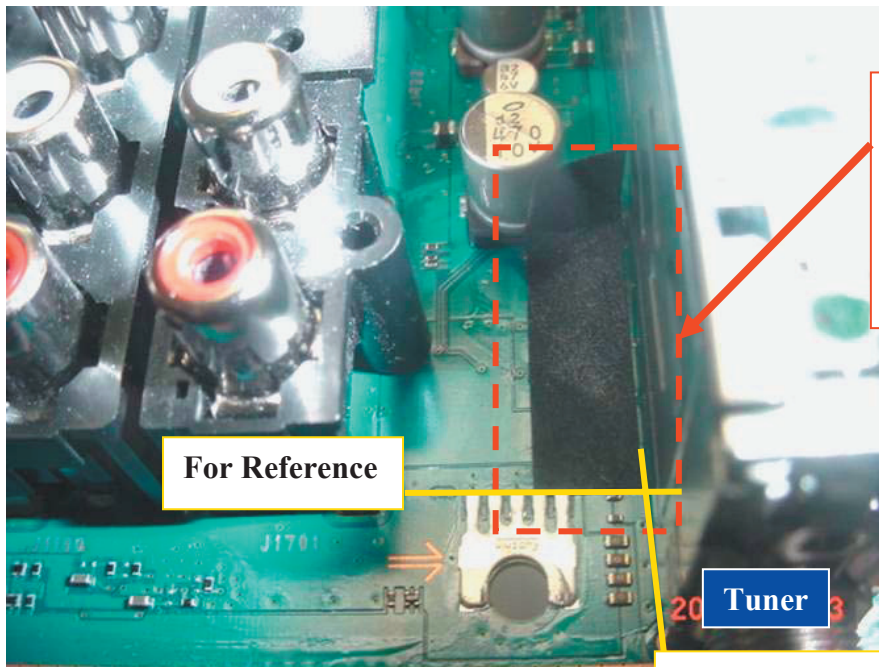**STEP 1:**


Add 1 Himelton Tape (LCD)
PN: 2-688-062-01 (8x30mm)

Note: R7853 should be covered
with himelton.

For Reference

Tuner

For Reference: Edge of Tuner

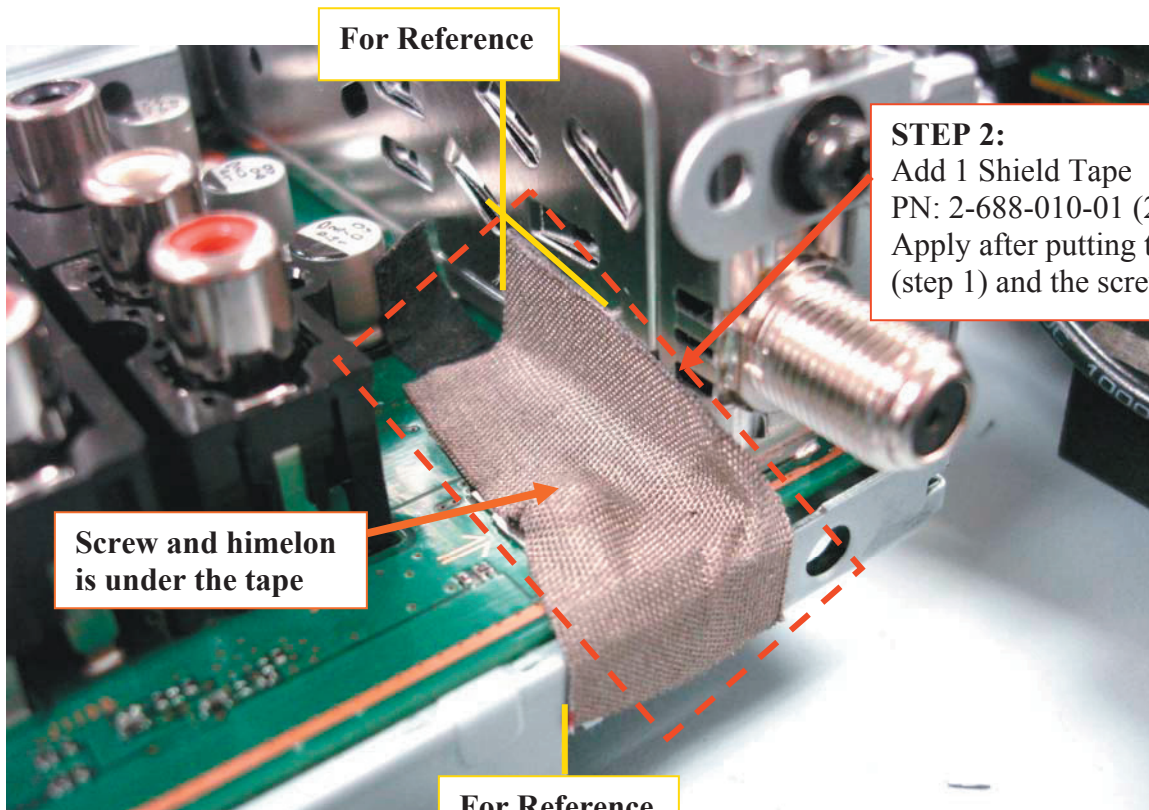

For Reference


STEP 2:



Add 1 Shield Tape
PN: 2-688-010-01 (20x40mm)
Apply after putting the himelton
(step 1) and the screw.



Screw and himelton
is under the tape

For Reference

KDL-32M3000/32ML130 ONLY
OVERALL VIEW


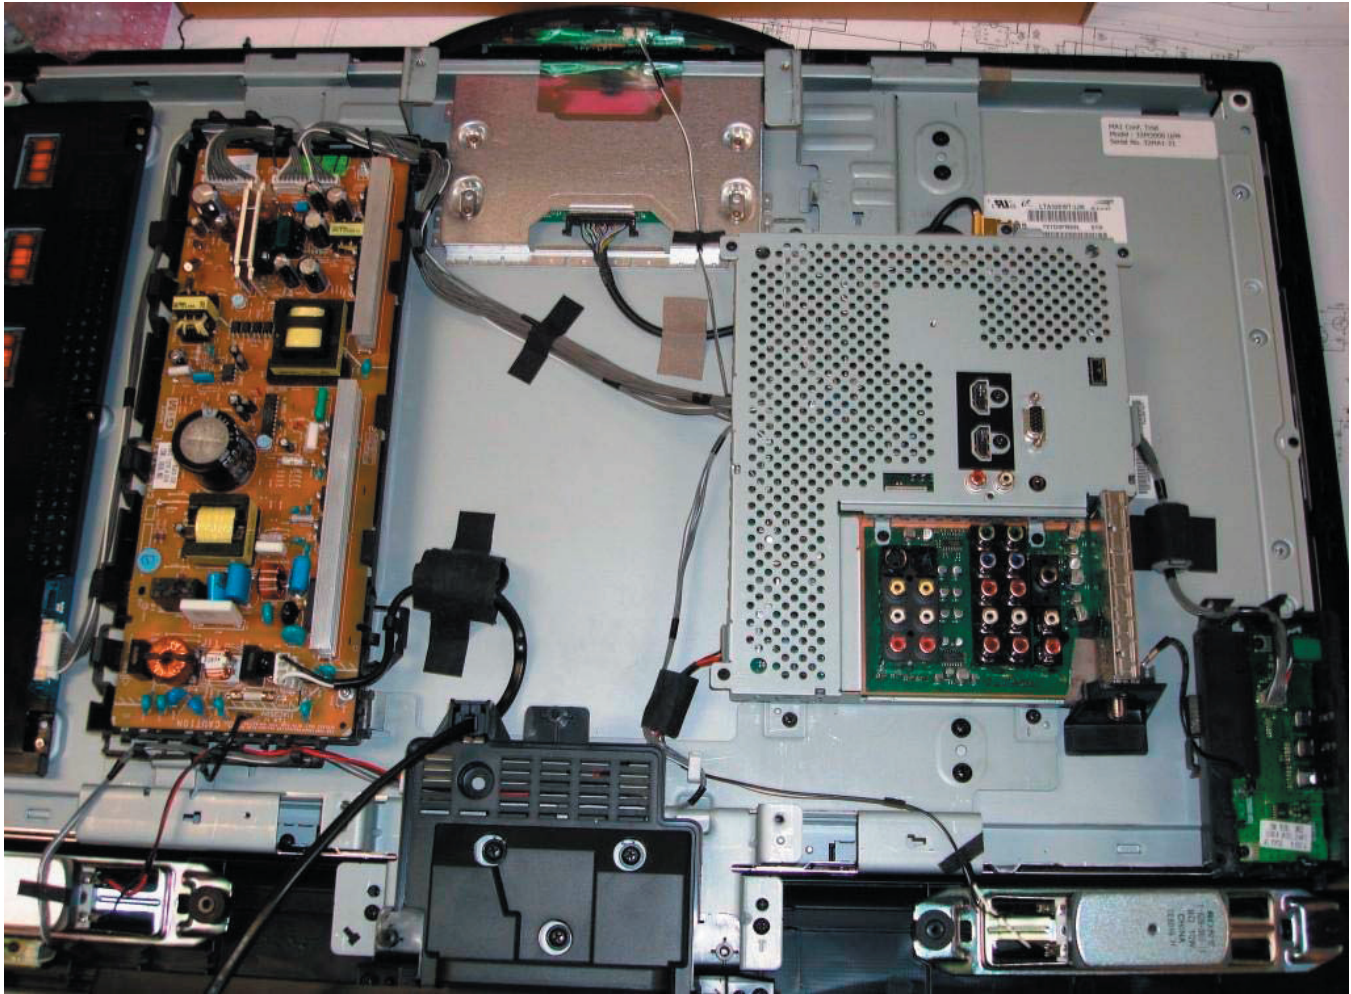


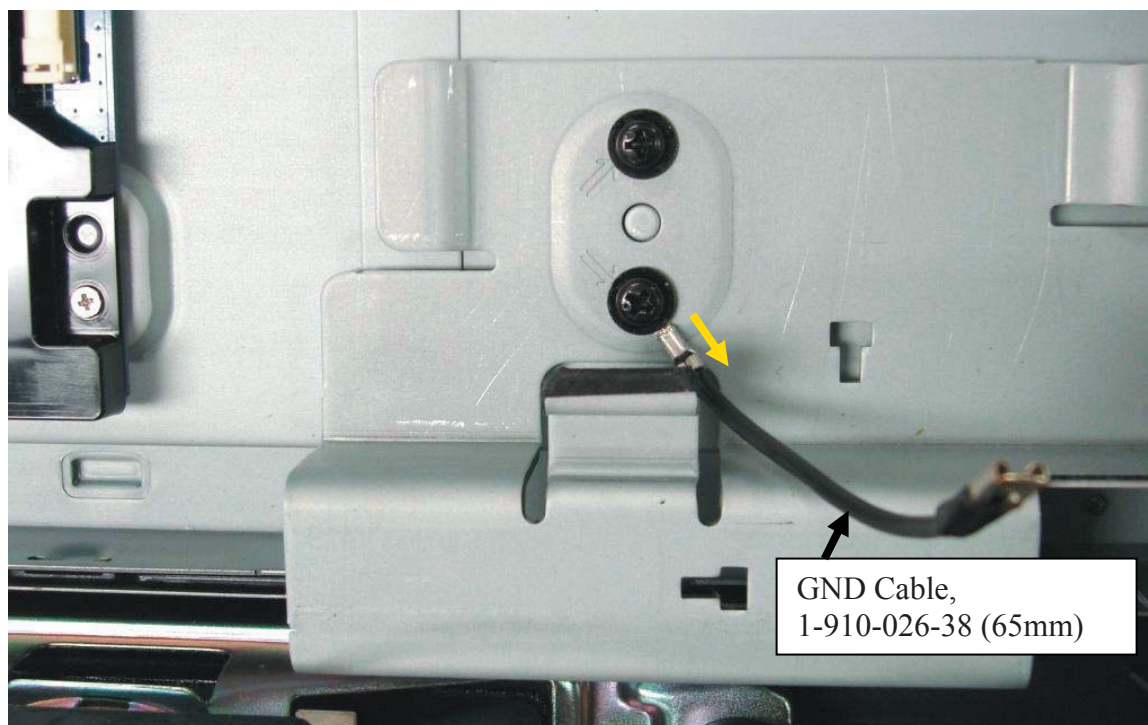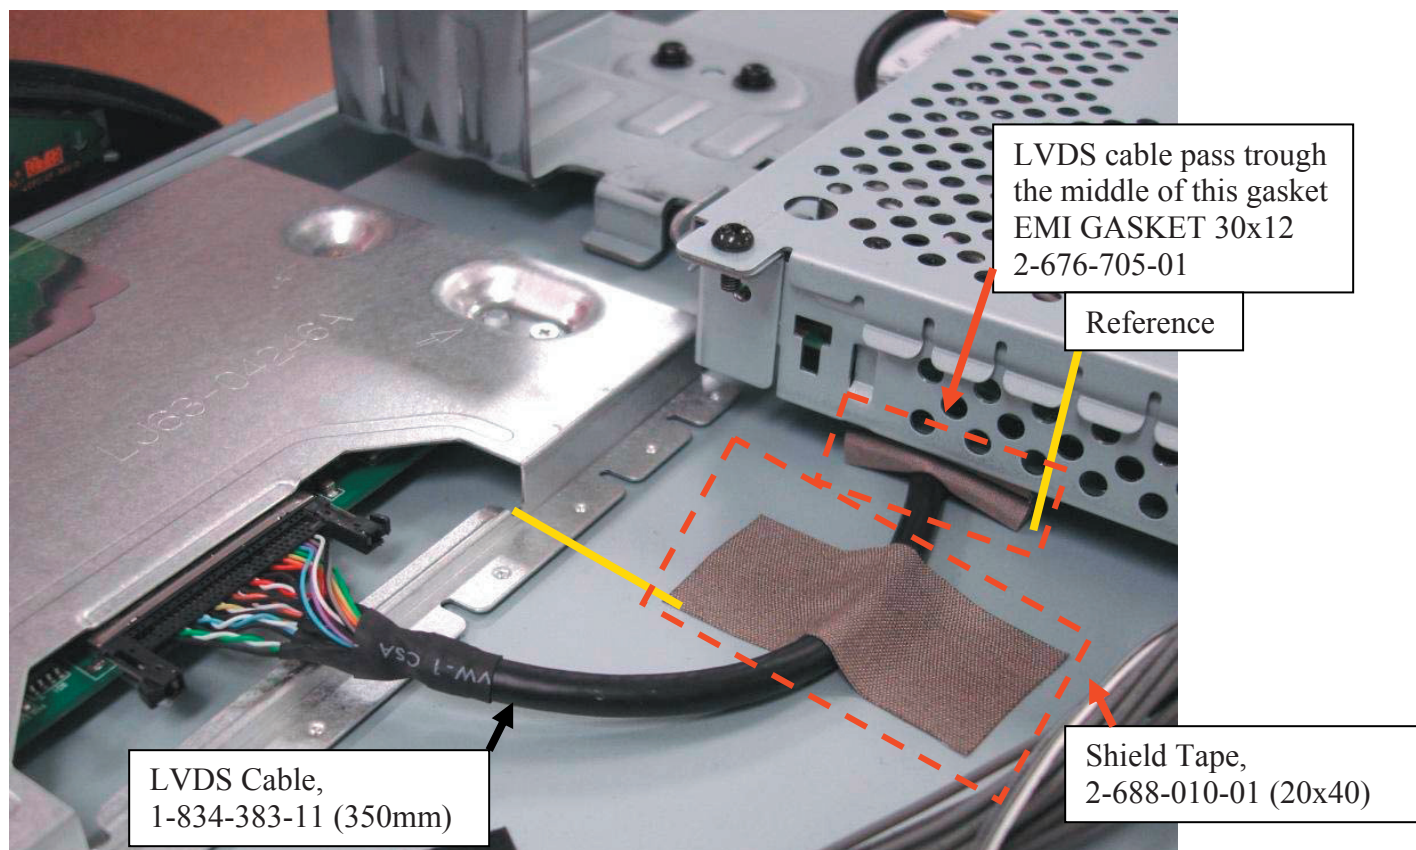KDL-32M3000/32ML130 ONLY**GROUND CABLE****LVDS CONNECTOR**

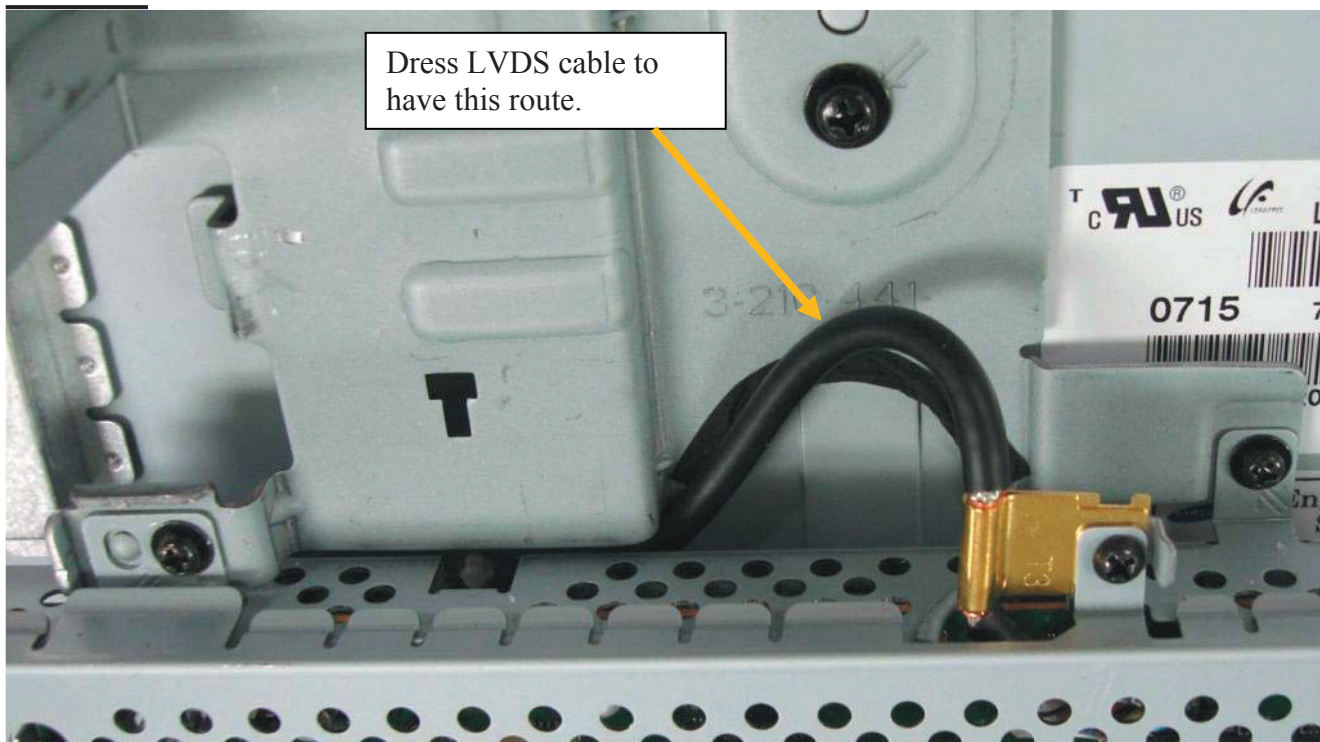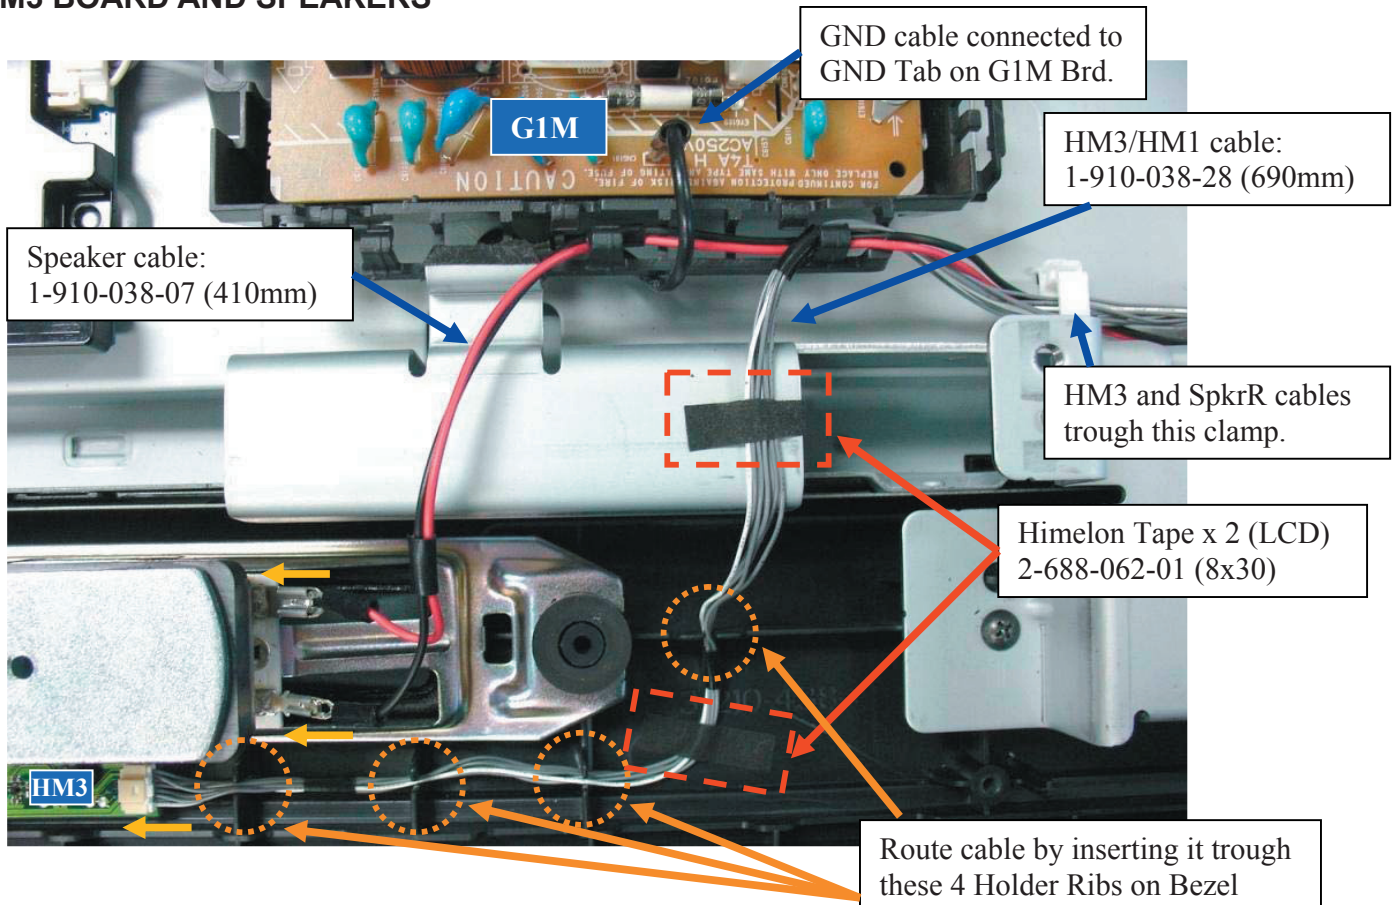KDL-32M3000/32ML130 ONLY**LVDS CONNECTOR (CONTINUED)****HM3 BOARD AND SPEAKERS**



KDL-32M3000/32ML130 ONLY


HM3 BOARD AND SPEAKERS (CONTINUED)

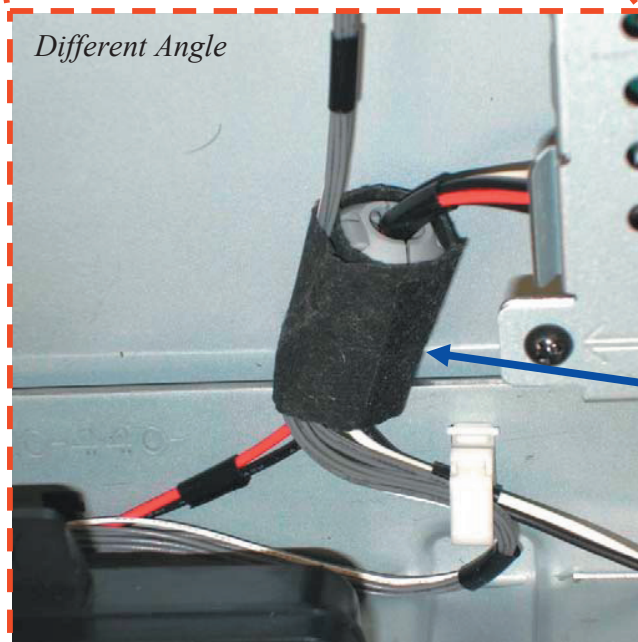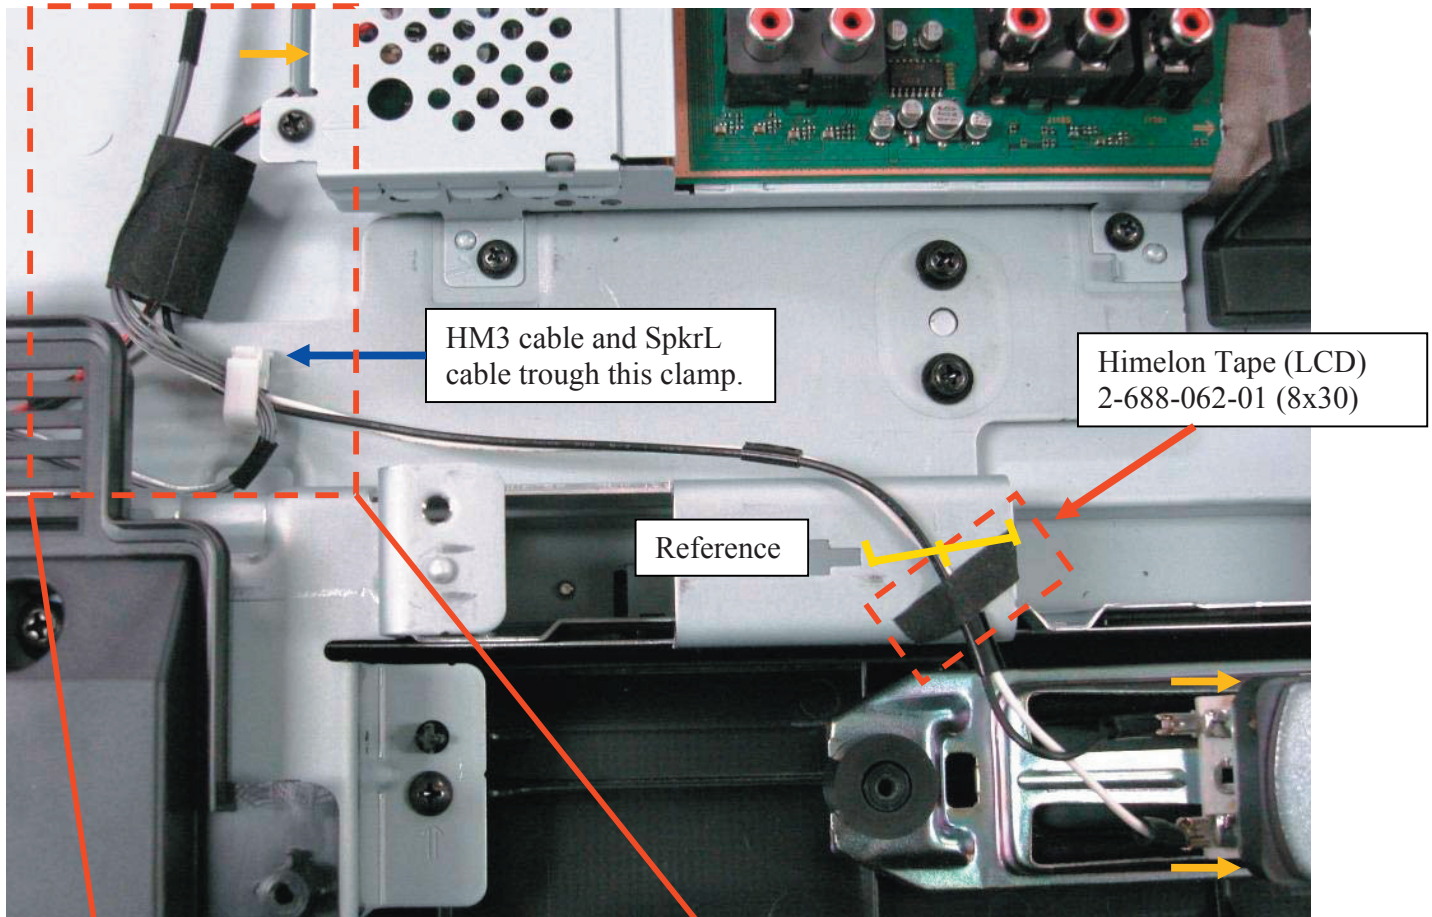

Ferrite Core (146908911)
ZCAT 1730-0730


**Completely cover Ferrite and
grab the HM3 cable using:**
Himelon Core Sheet (A)
2-688-014-01

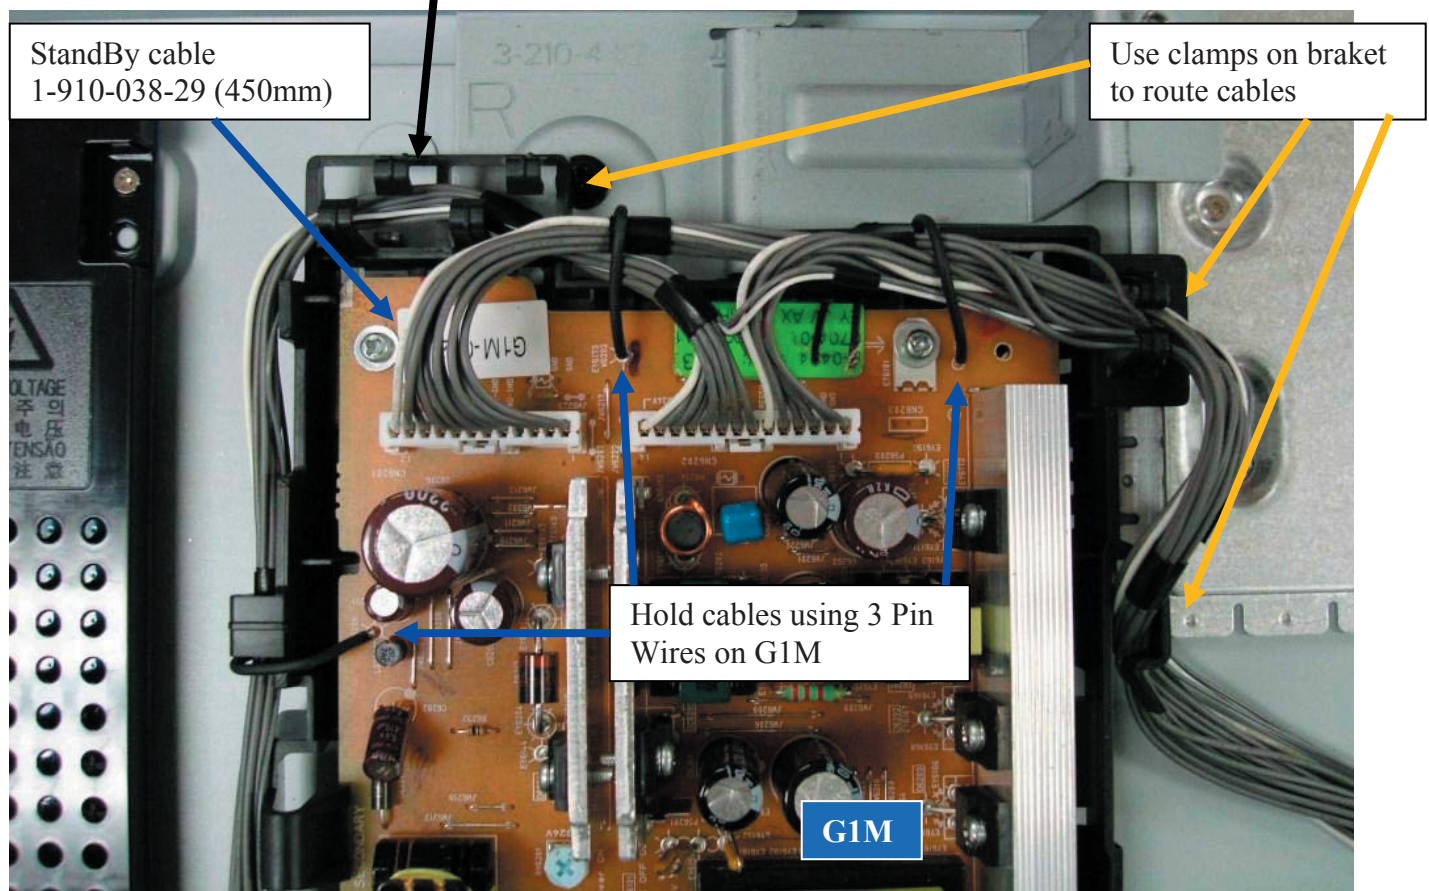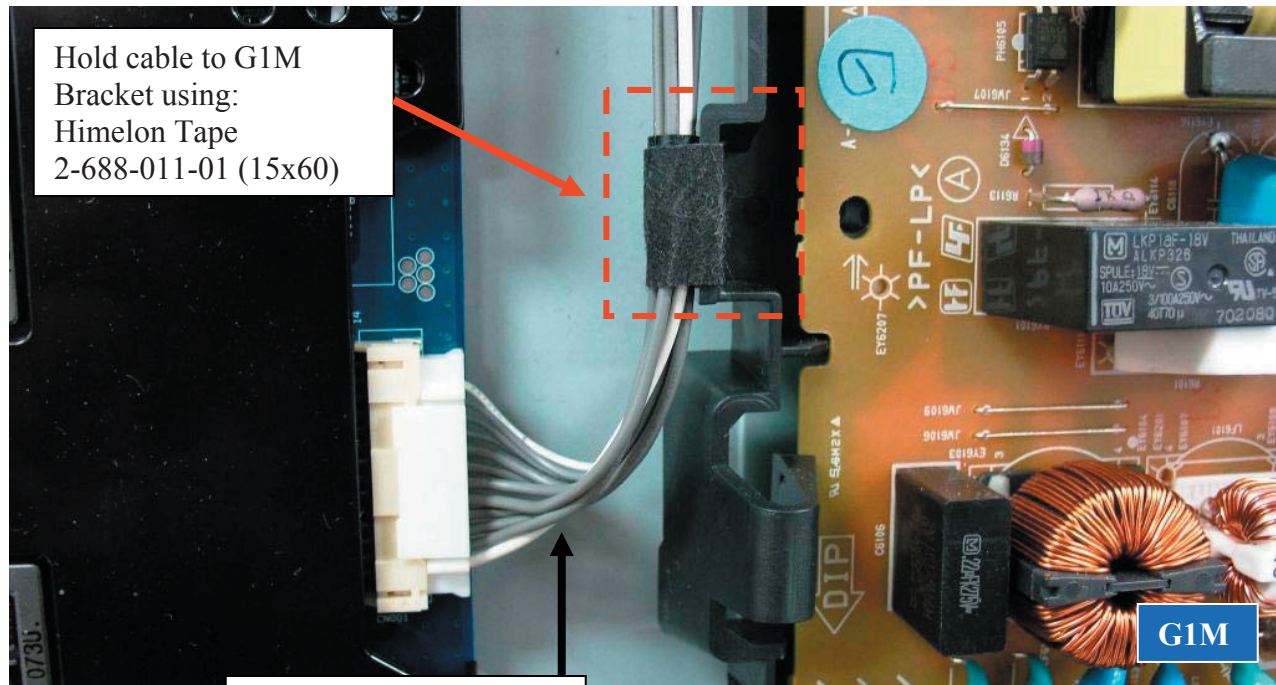KDL-32M3000/32ML130 ONLY**INVERTER BOARD CONNECTORS**

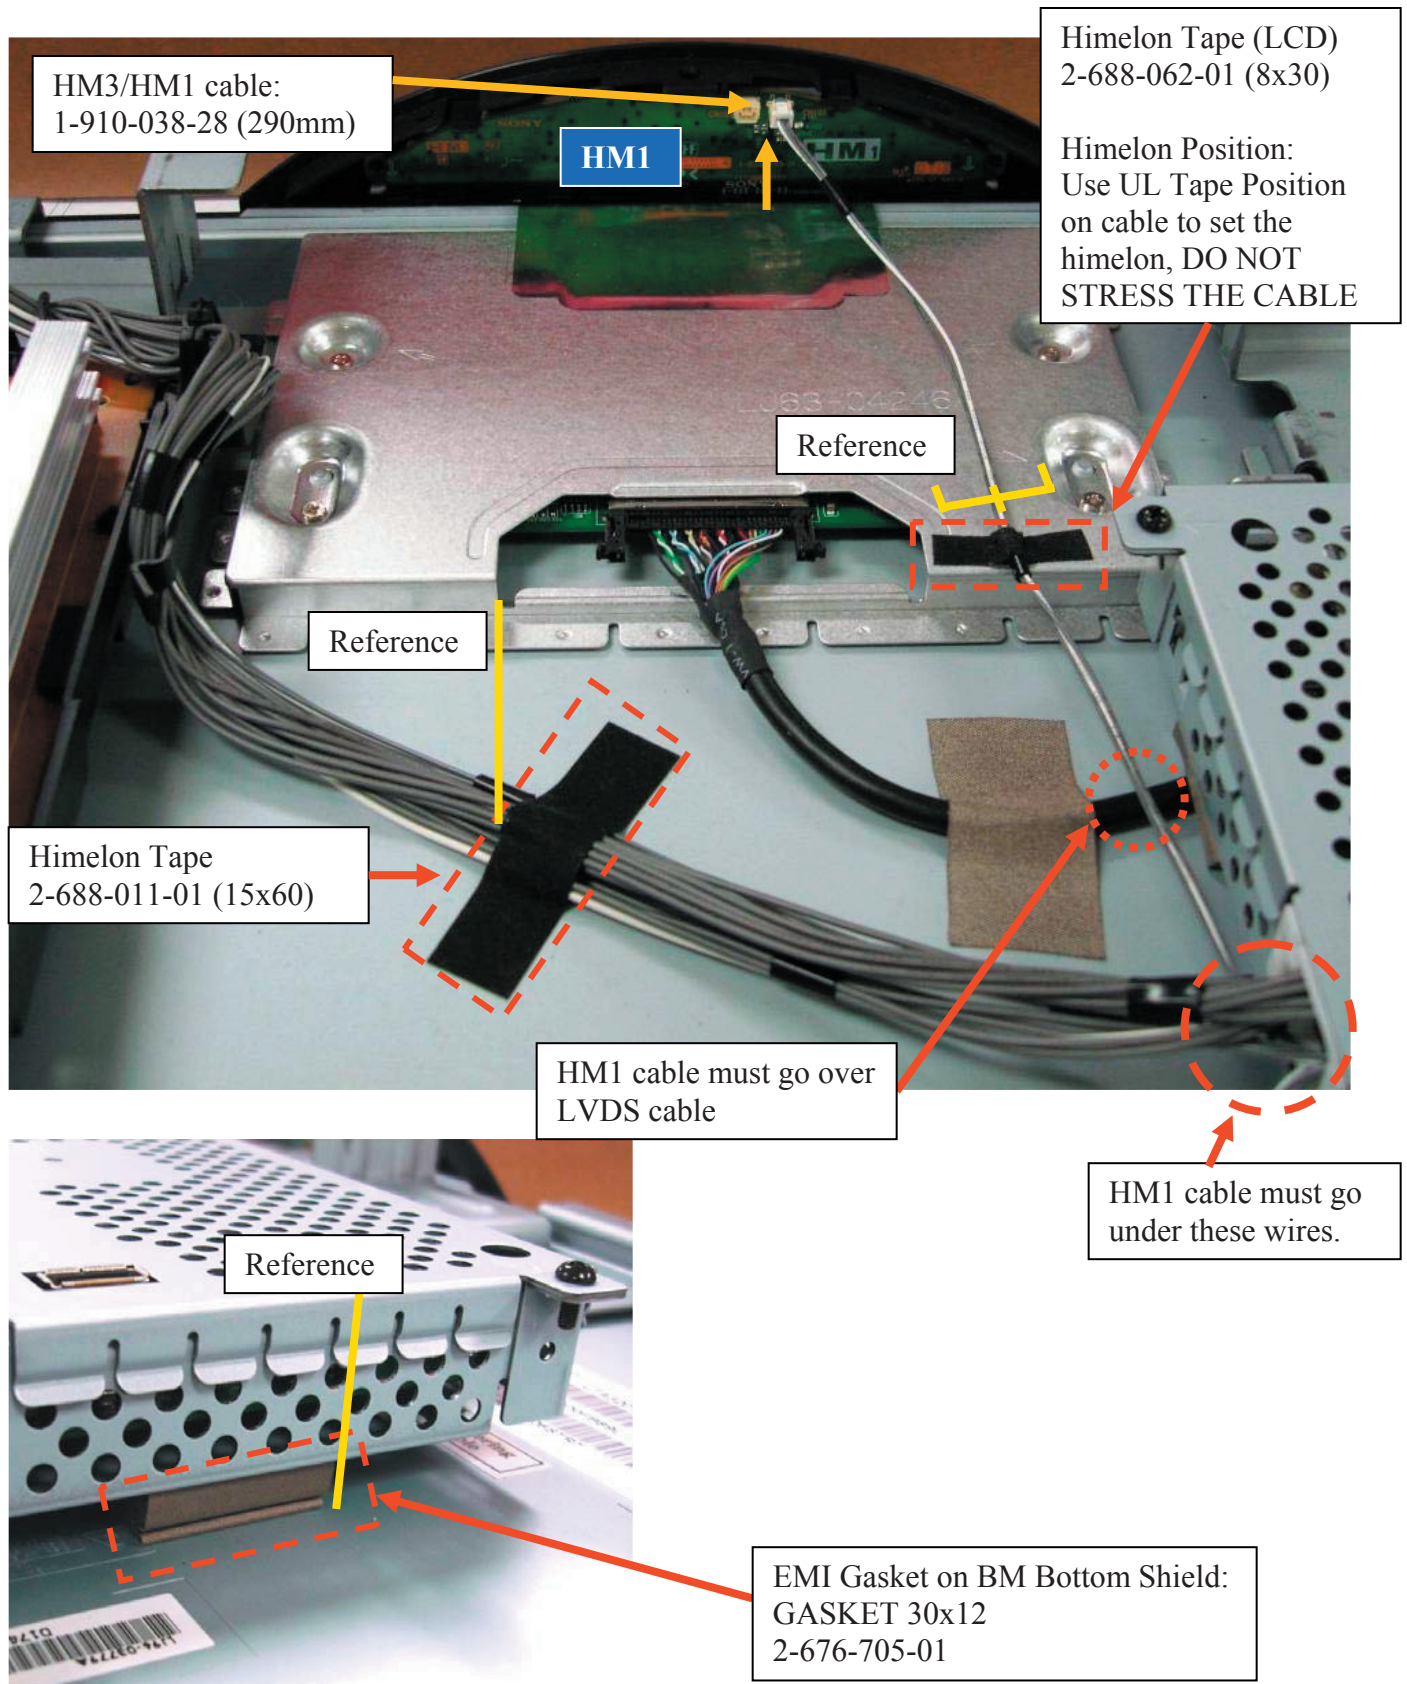KDL-32M3000/32ML130 ONLY**HDMI CONNECTORS**



KDL-32M3000/32ML130 ONLY



VIDEO CONNECTORS AND GROUND CABLE

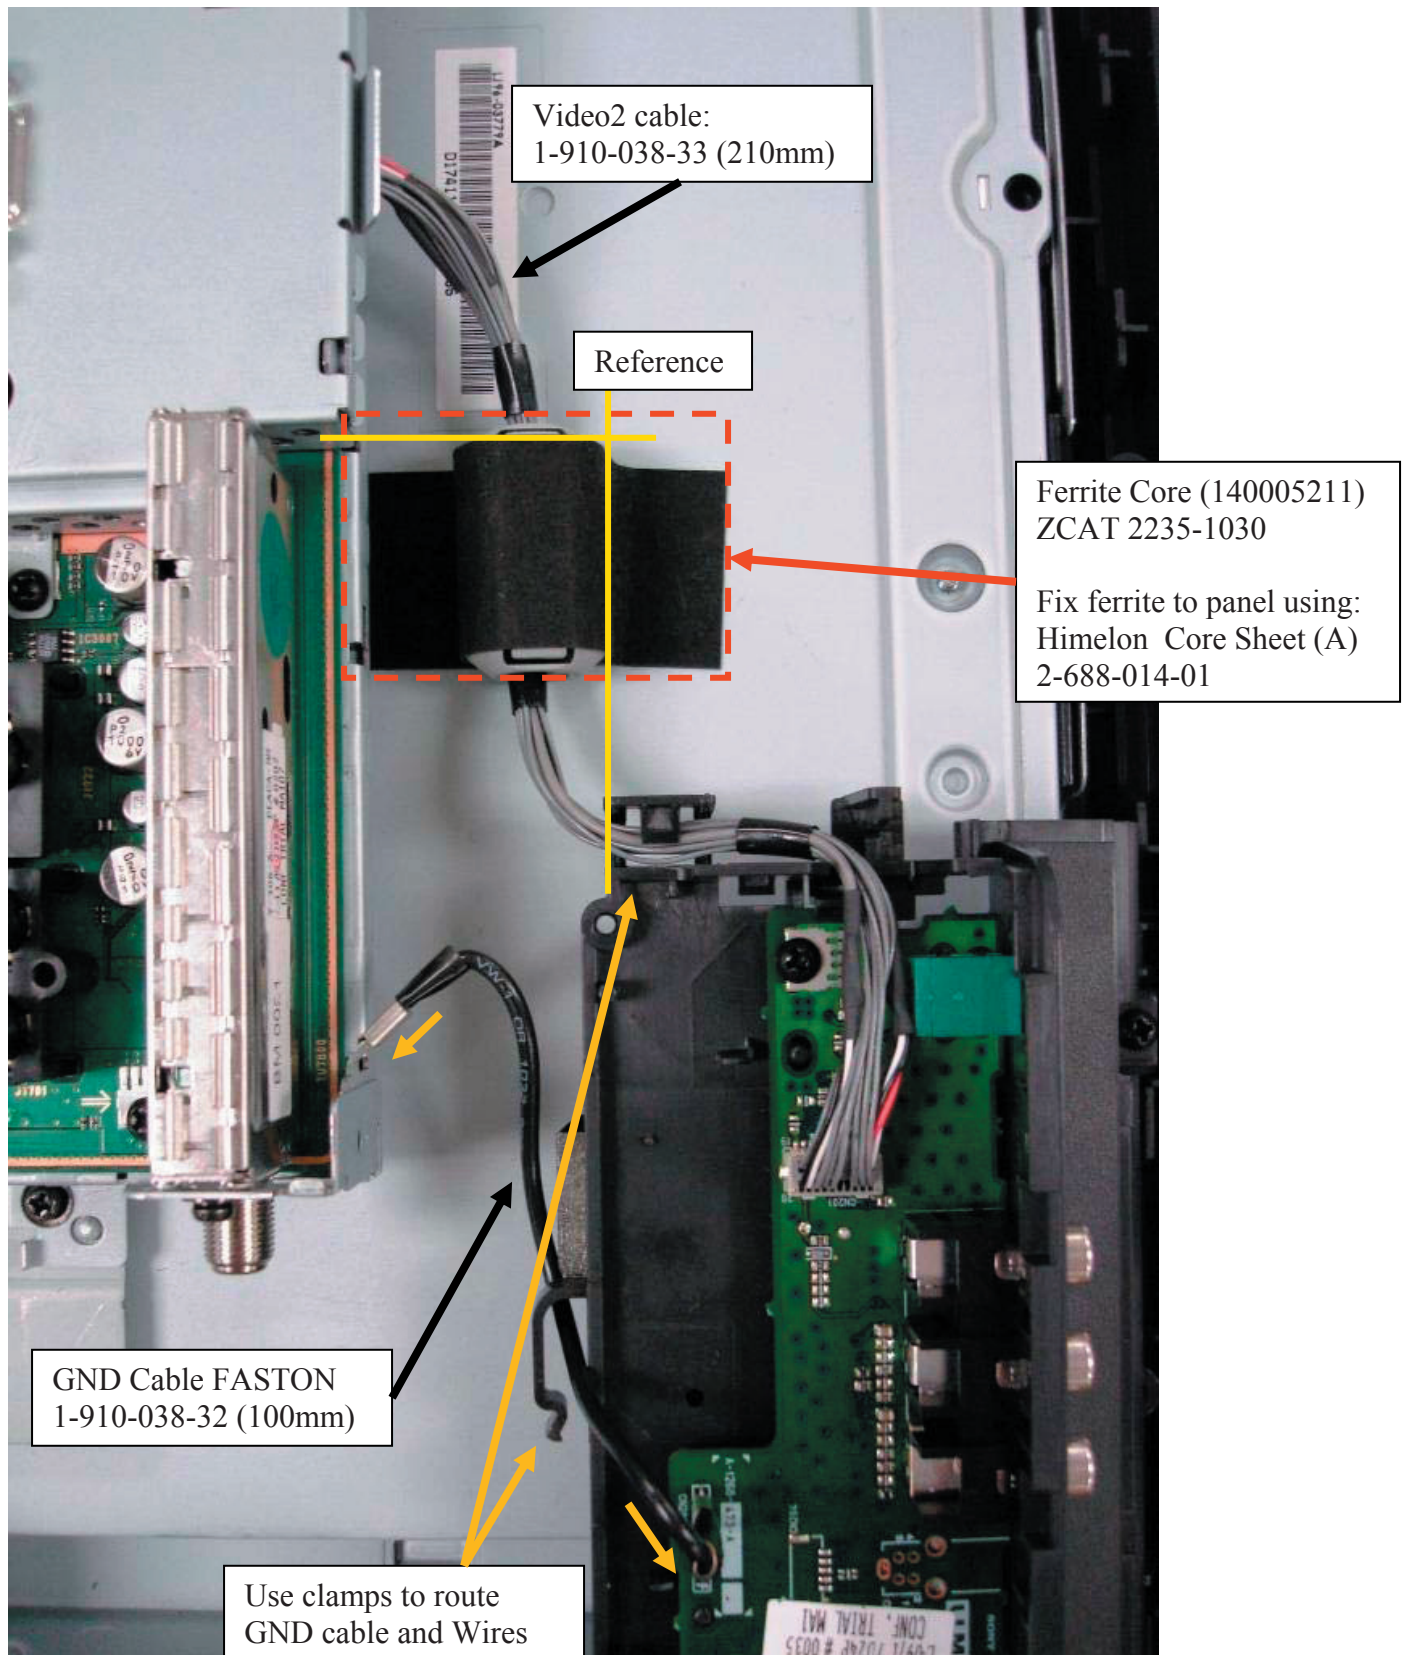

KDL-32M3000/32ML130 ONLY


AC CORD CONNECTOR

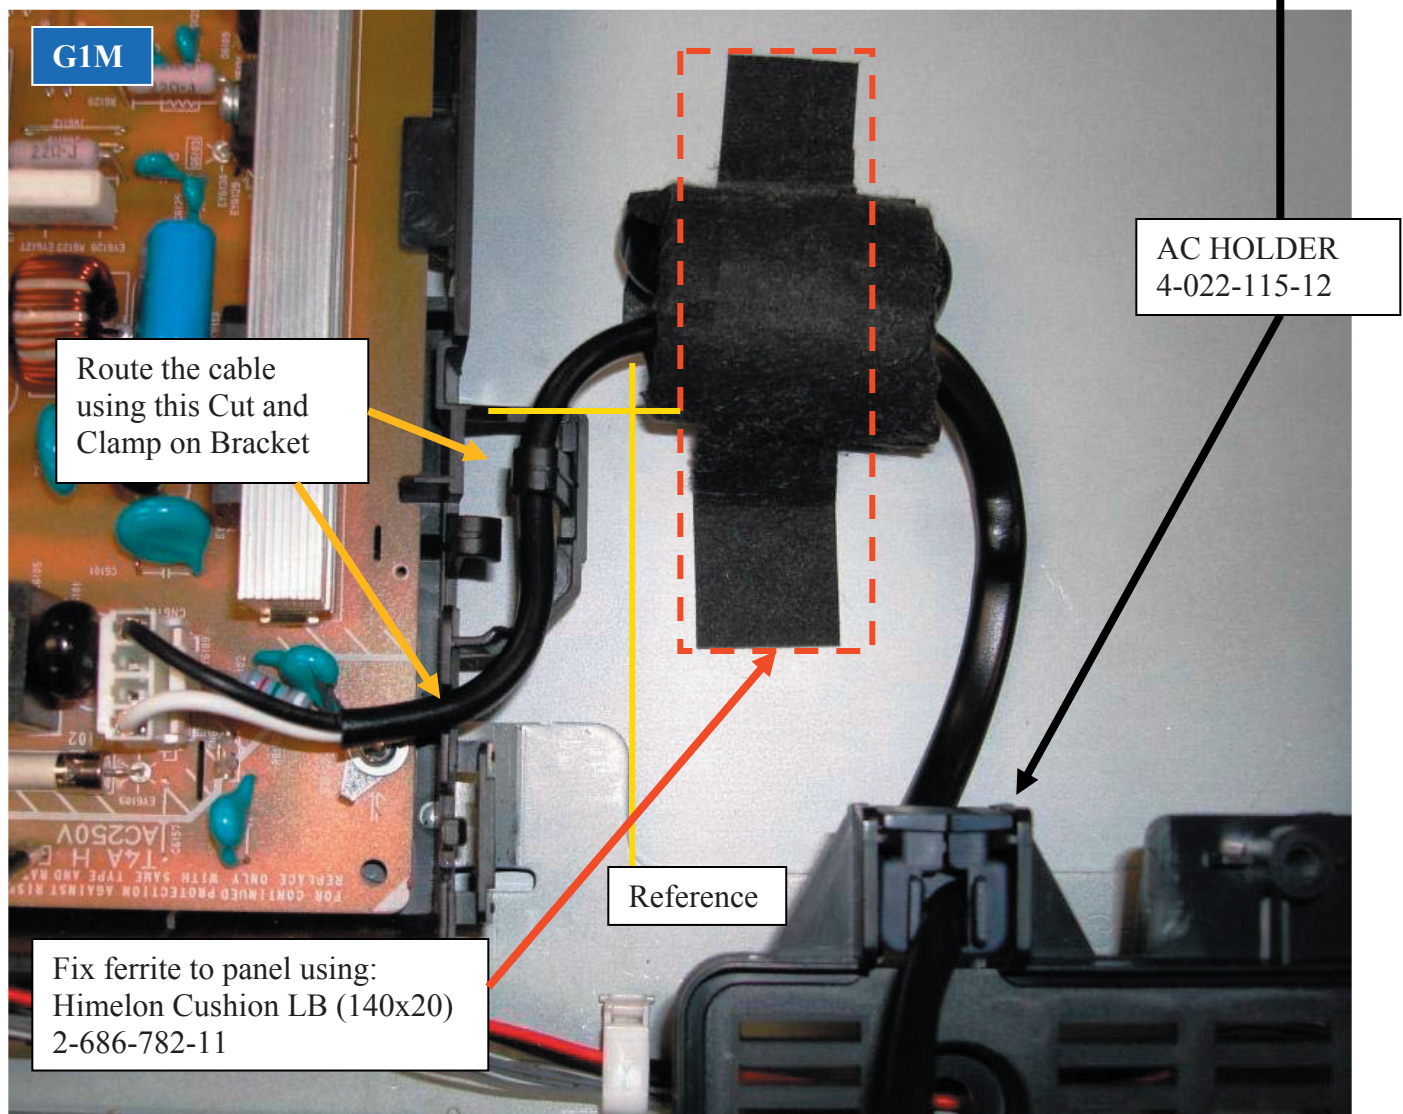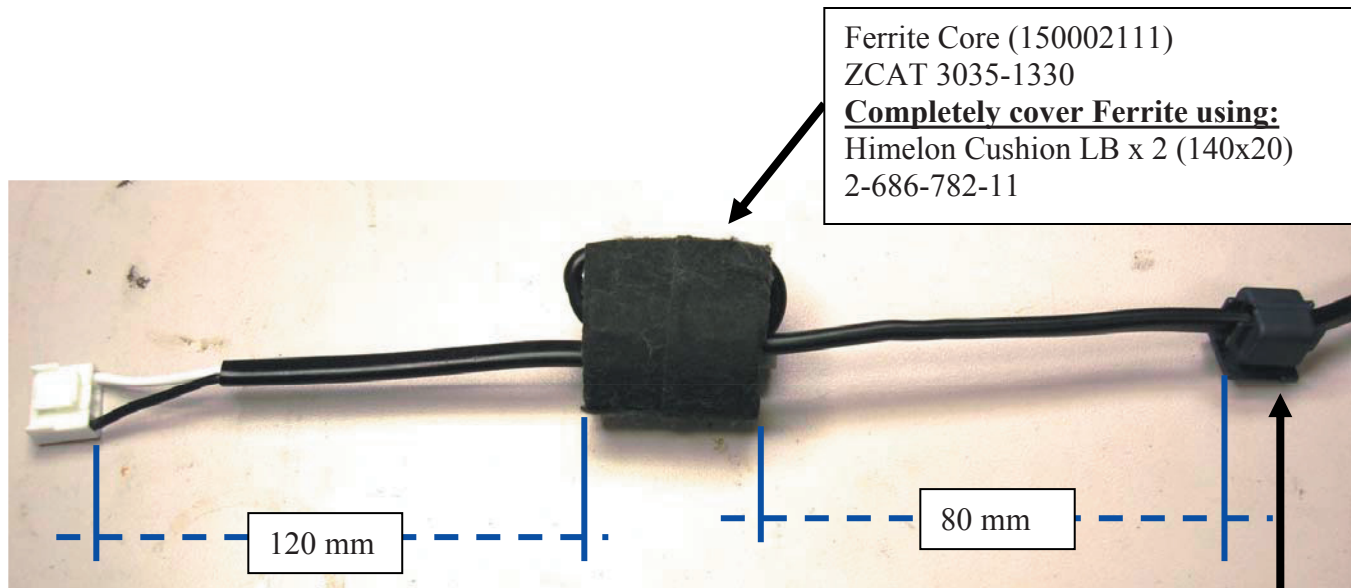

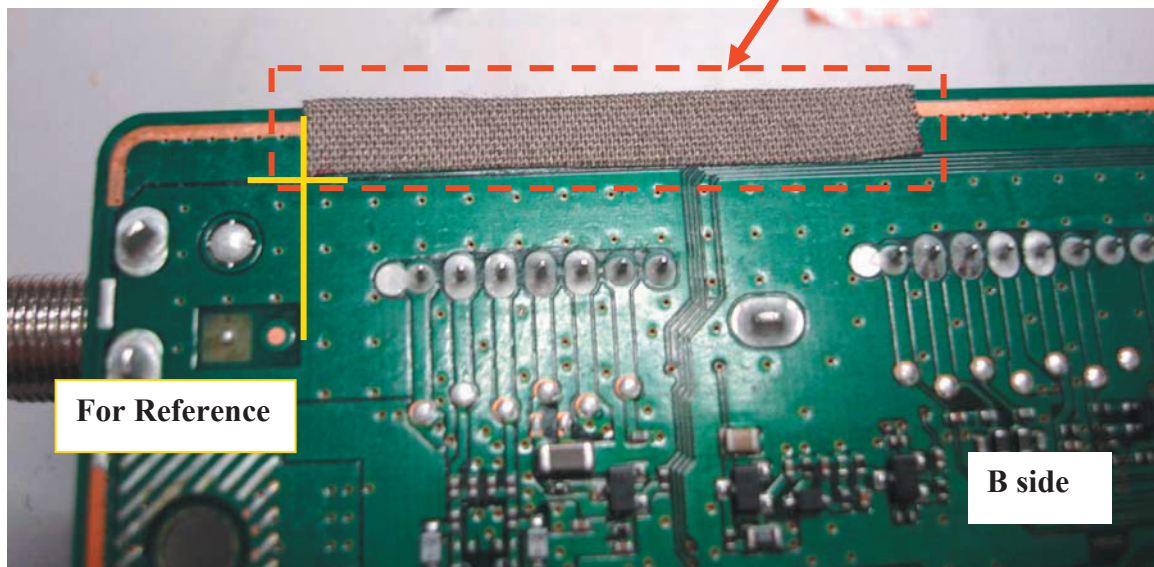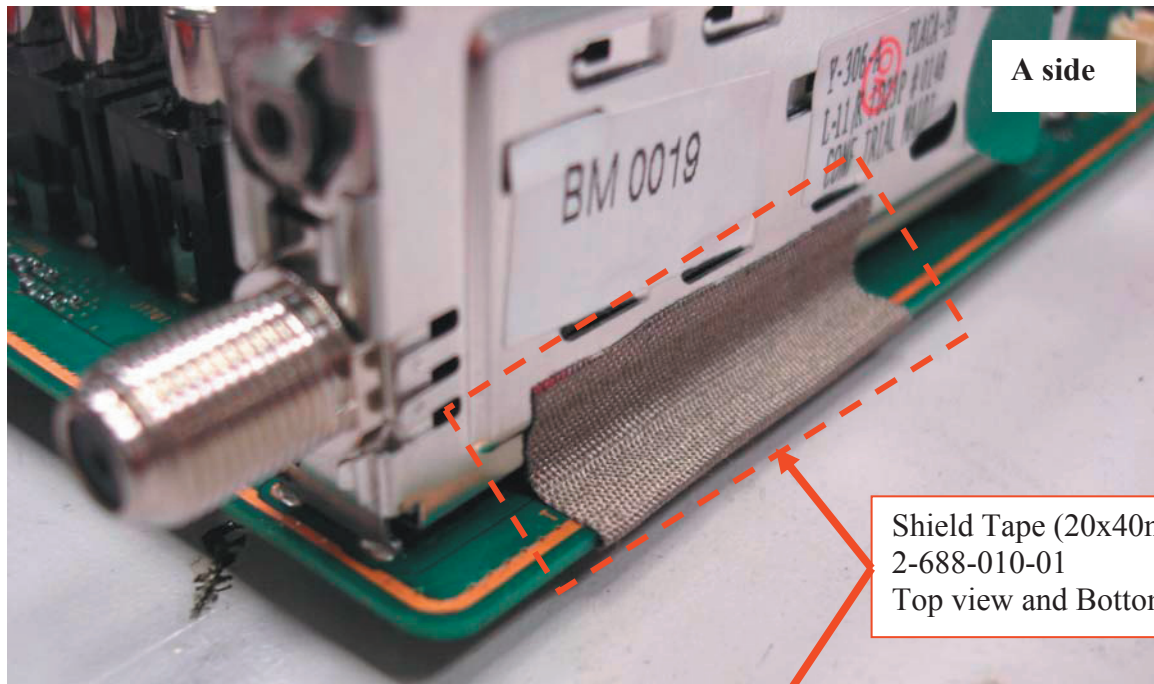KDL-32M3000/32ML130 ONLY**SHIELD TAPE PLACEMENT**

KDL-32M3000/32ML130 ONLY

SHIELD TAPE PLACEMENT (CONTINUED)

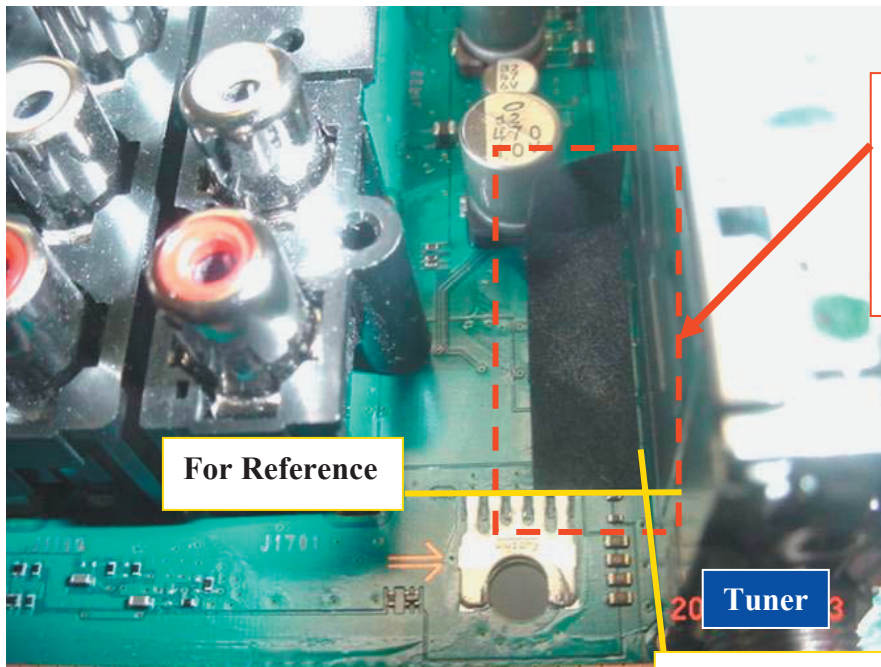**STEP 1:**


Add 1 Himelon Tape (LCD)
PN: 2-688-062-01 (8x30mm)

Note: R7853 should be covered
with himelon.

For Reference

Tuner

For Reference: Edge of Tuner

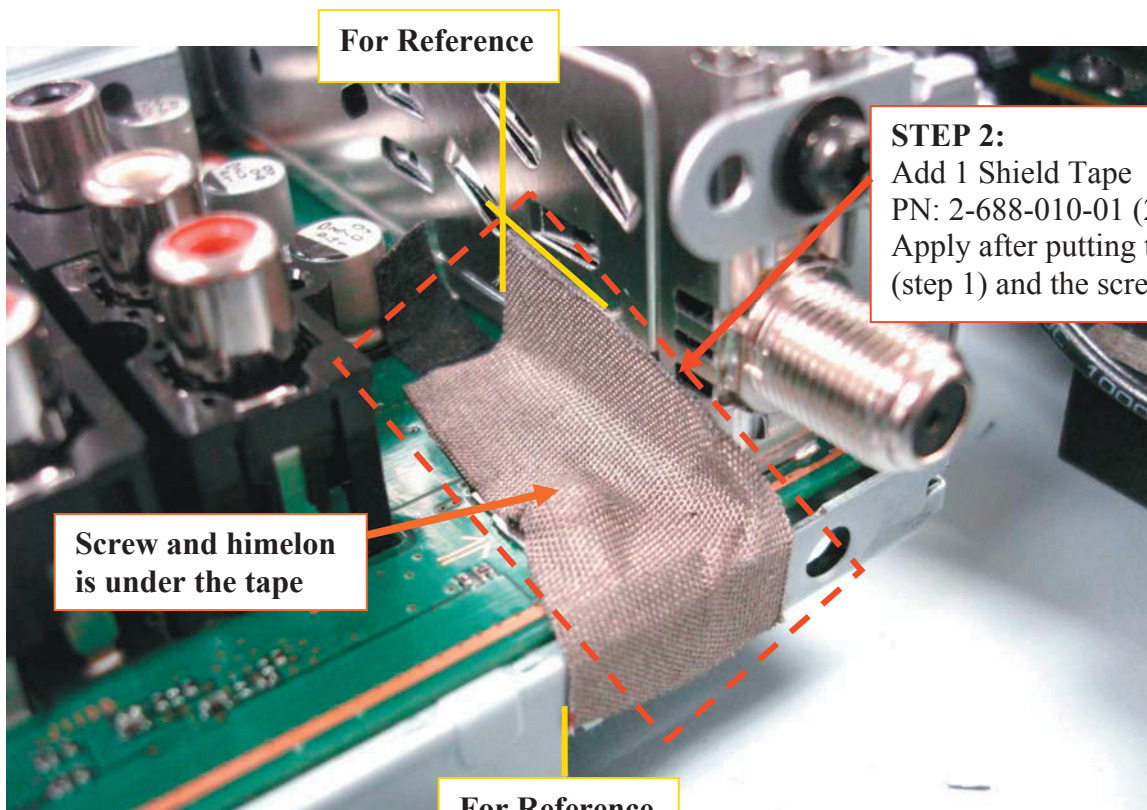

For Reference

STEP 2:

Add 1 Shield Tape
PN: 2-688-010-01 (20x40mm)
Apply after putting the himelon
(step 1) and the screw.


Screw and himelon
is under the tape

For Reference

KDL-32M3000/32ML130 ONLY

SHIELD TAPE PLACEMENT (CONTINUED)

For Reference

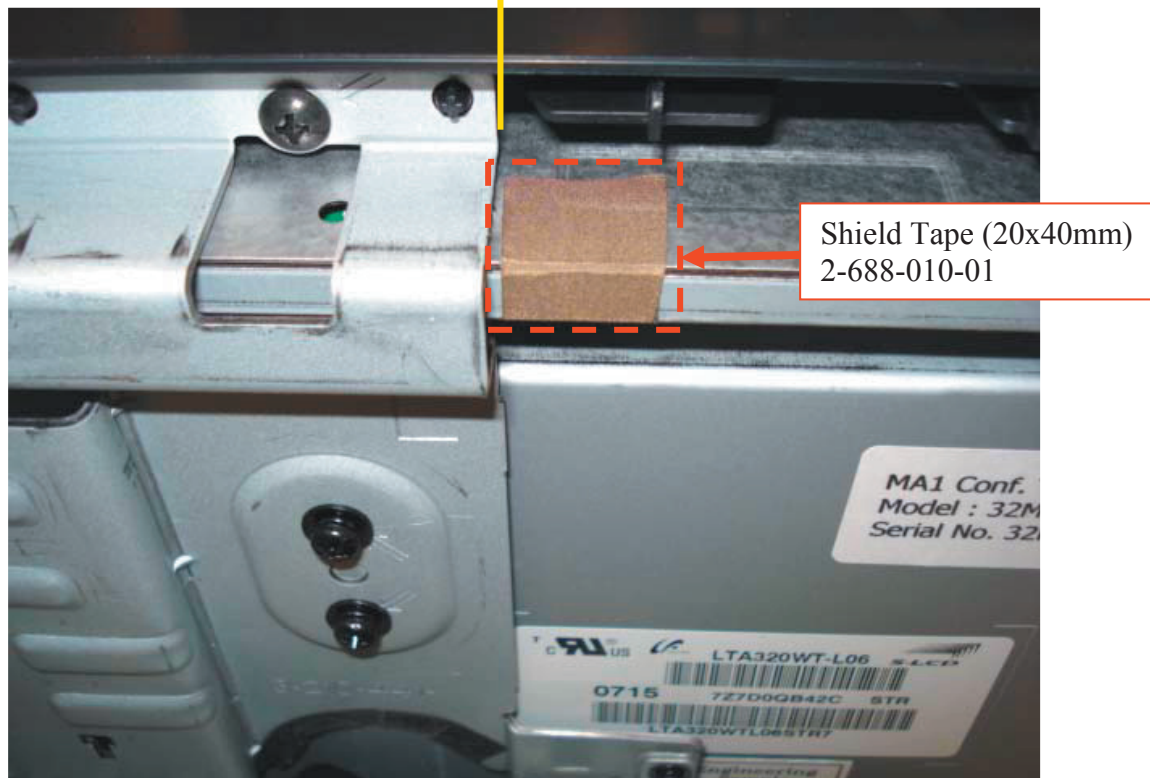

SECTION 2: SERVICE ADJUSTMENTS

2-1. USING THE REMOTE COMMANDER FOR ELECTRICAL ADJUSTMENTS

To adjust various set features, use the Remote Commander to put the set into service mode to display the service menus and categories.


Equipment Needed:

- ✓ Pattern Generator (with component outputs)
- ✓ Oscilloscope
- ✓ Digital multimeter

2-2. ACCESSING SERVICE ADJUSTMENT MODE


1. TV must be in standby mode. (Power off).
2. To display the service menu, press the following buttons on the Remote Commander within a second of each other:

DISPLAY → **Channel 5** → **Volume +** → **POWER**.

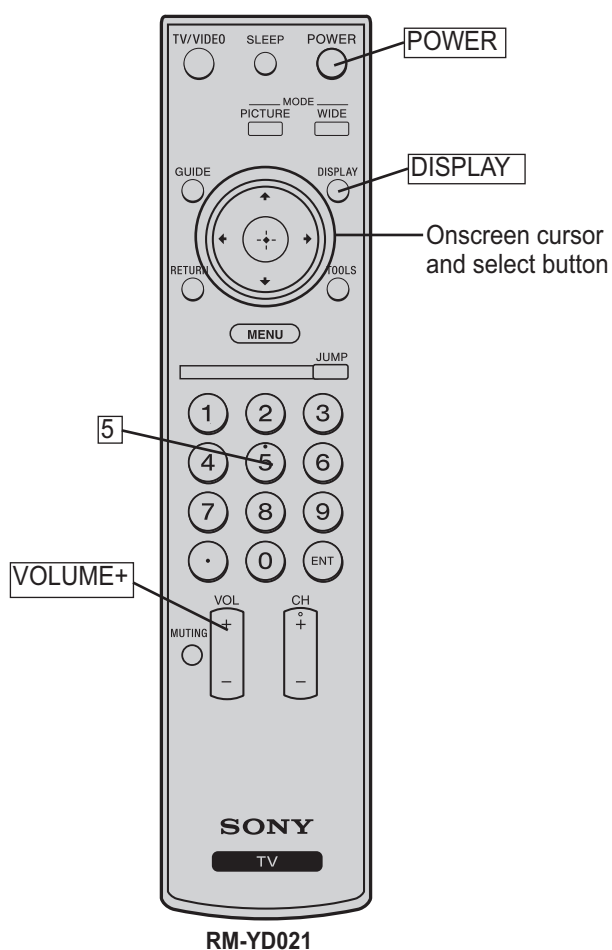

2-3. VIEWING THE SERVICE MENUS

Use the Remote Commander to view the BE and Digital service menus options.

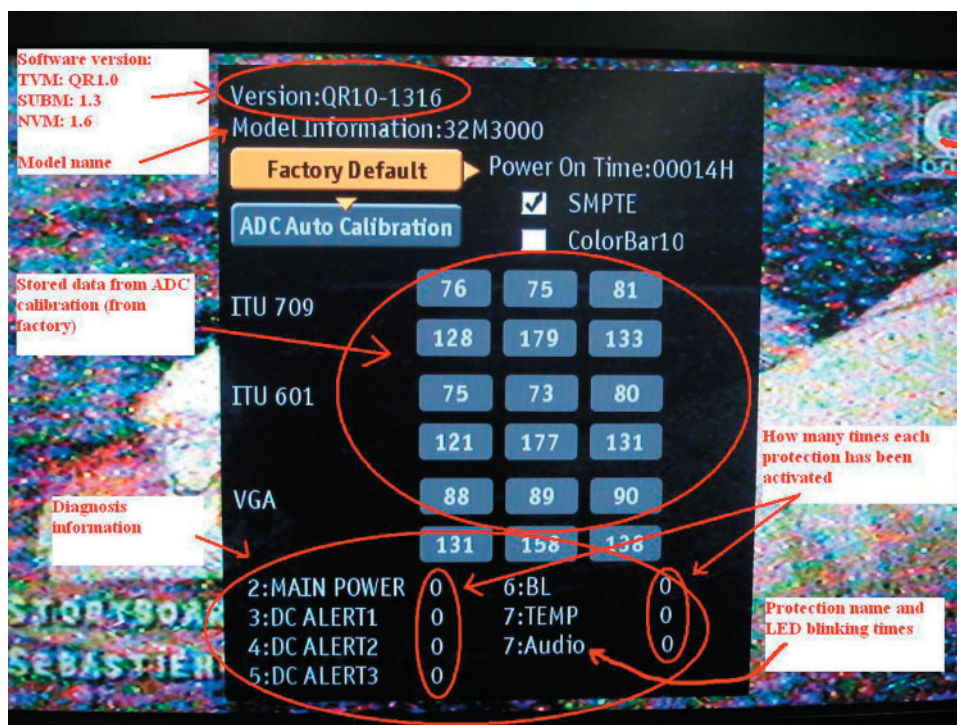

Sample Service Menu


2-4. RESETING TO FACTORY DEFAULTS

The following instructions restore the User Controls and Channel Memory settings to the preset factory conditions.

1. In Service Mode to select **Factory Default** press \oplus , then to select **Yes** press \oplus .

SECTION 3: DIAGRAMS

3-1. CIRCUIT BOARDS LOCATION

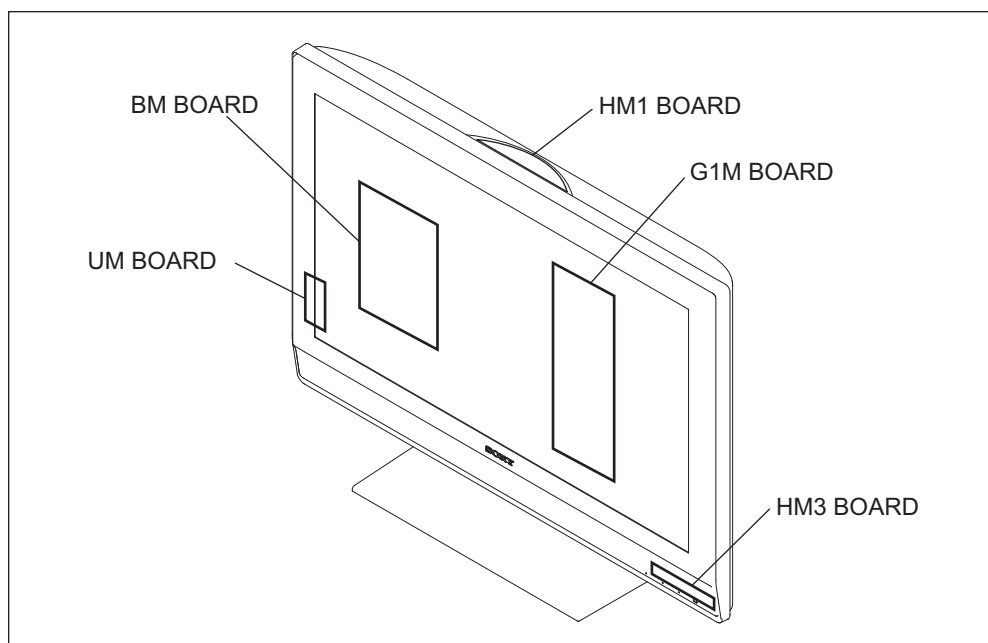

3-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS INFORMATION

All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.

All electrolytics are in 50V unless otherwise specified.

All resistors are in ohms. $\text{k}\Omega=1000\Omega$, $\text{M}\Omega=1000\text{k}\Omega$

Indication of resistance, which does not have one for rating electrical power, is as follows: Pitch : 5mm
Rating electrical power : $\frac{1}{4}\text{W}$

$\frac{1}{4}\text{W}$ in resistance, $\frac{1}{10}\text{W}$ and $\frac{1}{16}\text{W}$ in chip resistance.

: nonflammable resistor

: fusible resistor

: internal component

: panel designation and adjustment for repair

: earth ground

: earth-chassis

All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

Readings are taken with a color-bar signal input.

Readings are taken with a $10\text{M}\Omega$ digital multimeter.

Voltages are DC with respect to ground unless otherwise noted.

Voltage variations may be noted due to normal production tolerances.

All voltages are in V.

S : Measurement impossibility.

: B+line.

: B-line. (Actual measured value may be different).

: signal path. (RF)

Circled numbers are waveform references.

The components identified by shading and are critical for safety. Replace only with part number specified.

The symbol indicates a fast operating fuse and is displayed on the component side of the board. Replace only with fuse of the same rating as marked.

Les composants identifiés par un trame et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Le symbole indique une fusible à action rapide. Doit être remplacé par une fusible de même valeur, comme marqué.

NOTE: The components identified by a red outline and a mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced.
See Appendix A: Encryption Key Components in the back of this manual.

REFERENCE INFORMATION

RESISTOR

: RN METAL FILM

: RC SOLID

: FPRD NONFLAMMABLE CARBON

: FUSE NONFLAMMABLE FUSIBLE

: RW NONFLAMMABLE WIREWOUND

: RS NONFLAMMABLE METAL OXIDE

: RB NONFLAMMABLE CEMENT

: ※ ADJUSTMENT RESISTOR

CAPACITOR

: TA TANTALUM

: PS STYROL

: PP POLYPROPYLENE

: PT MYLAR

: MPS METALIZED POLYESTER

: MPP METALIZED POLYPROPYLENE

: ALB BIPOLAR

: ALT HIGH TEMPERATURE

: ALR HIGH RIPPLE

COIL

: LF-8L MICRO INDUCTOR


Terminal name of semiconductors in silk screen
printed circuit (※)

	Device	Printed symbol	Terminal name	Circuit
1	Transistor		Collector Base Emitter	
2	Transistor		Collector Base Emitter	
3	Diode		Cathode Anode	
4	Diode		Cathode Anode (NC)	
5	Diode		Cathode Anode (NC)	
6	Diode		Common Anode Cathode	
7	Diode		Common Anode Cathode	
8	Diode		Common Anode Anode	
9	Diode		Common Anode Anode	
0	Diode		Common Cathode Cathode	
!i	Diode		Common Cathode Cathode	
!TM	Diode		Anode Anode Cathode Anode	
!£	Transistor (FET)		Drain Source Gate	
!Ç	Transistor (FET)		Drain Source Gate	
!?	Transistor (FET)		□ Source □ Drain □ Gate	
!§	Transistor		□ Emitter □ Collector □ Base	
!¶	Transistor		C2(B1)E1 E2(B2)C1	
!•	Transistor		C1(B2)E2 E1(B1)C2	
!a	Transistor		C1 B2 E2 E1 B1 C2	
@°	Transistor		C1 B2 E2 E1 B1 C2	
@ı	Transistor		E2 B1 E1 C2 C1(B2)	
@TM	Transistor		(B2) B1 E1 E2 C1 C2	
@£	Transistor		(B2) E2 E1 B1 C2 C1	
—	Discrete semiconductot			


(Chip semiconductors that are not actually used are included.)

Ver.1.6


3-3. BLOCK DIAGRAM

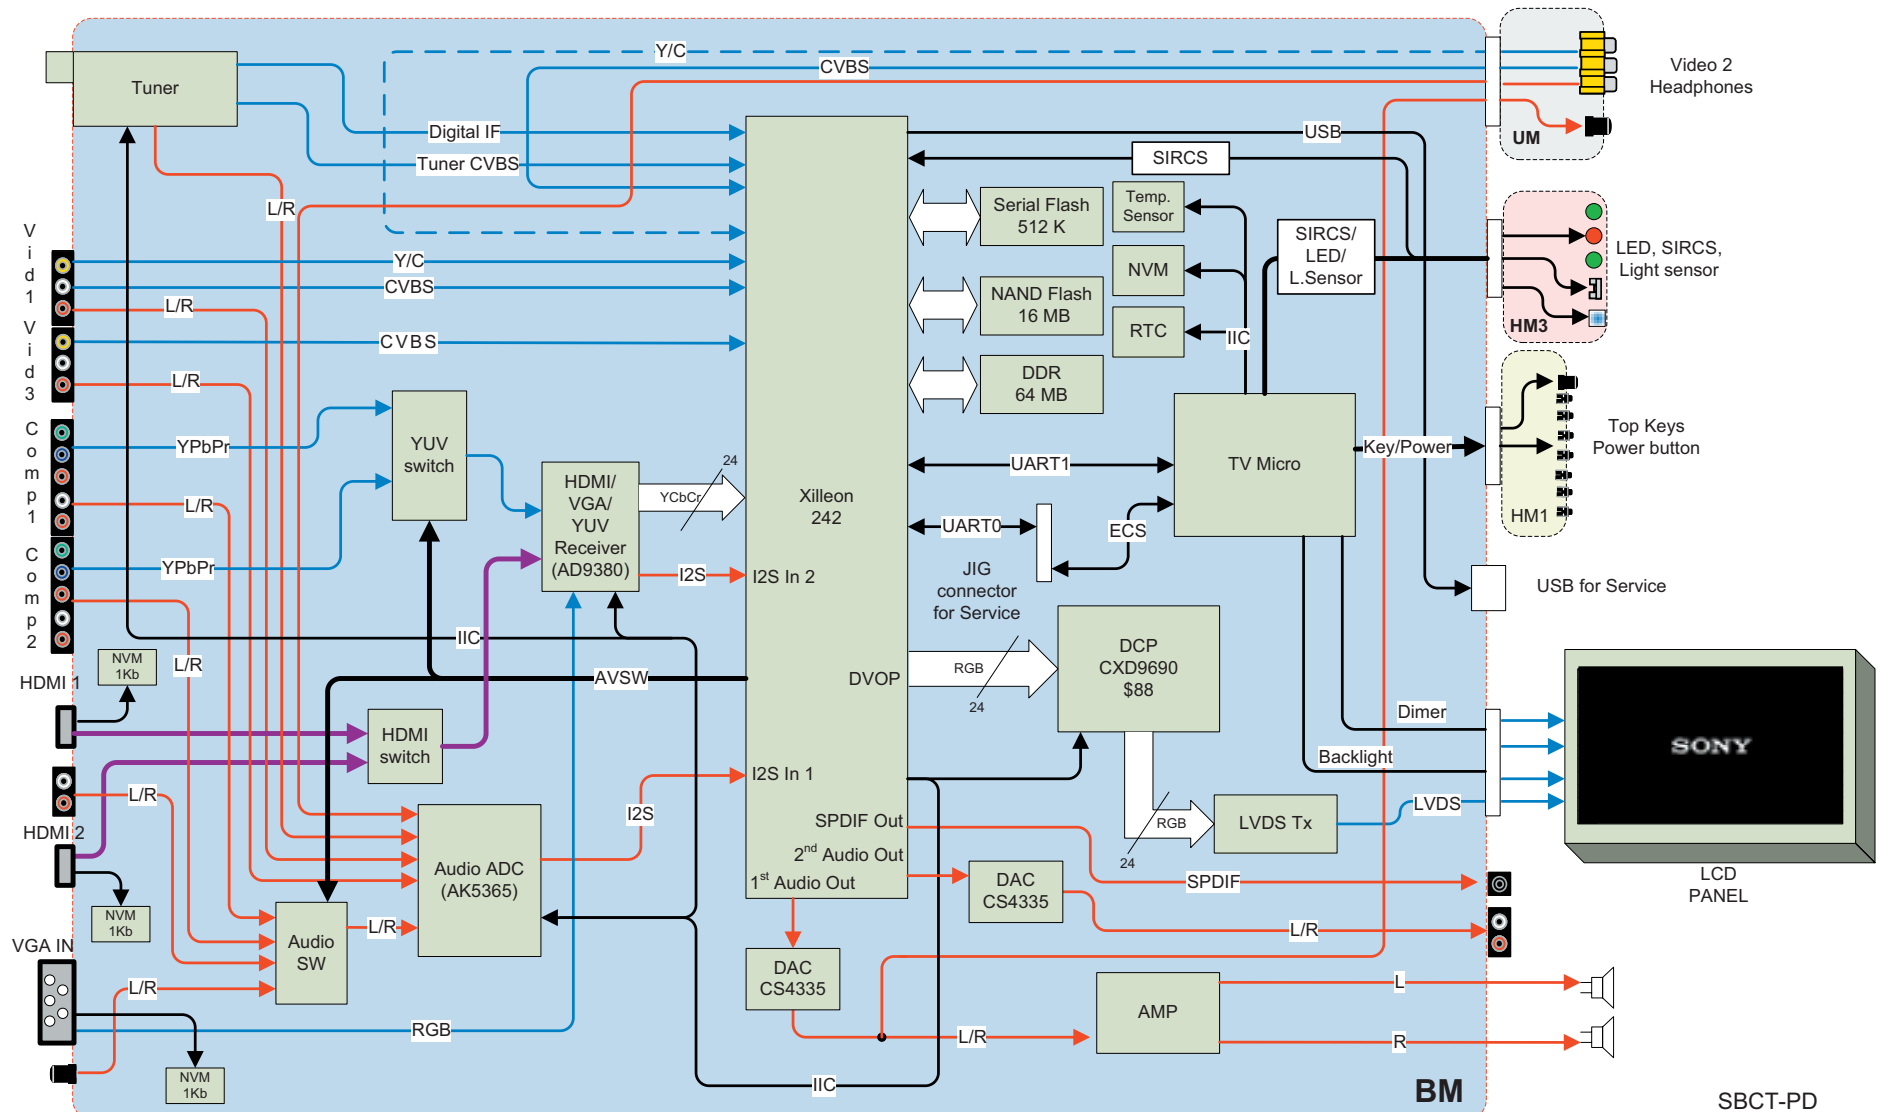

3-4. CONNECTION DIAGRAM

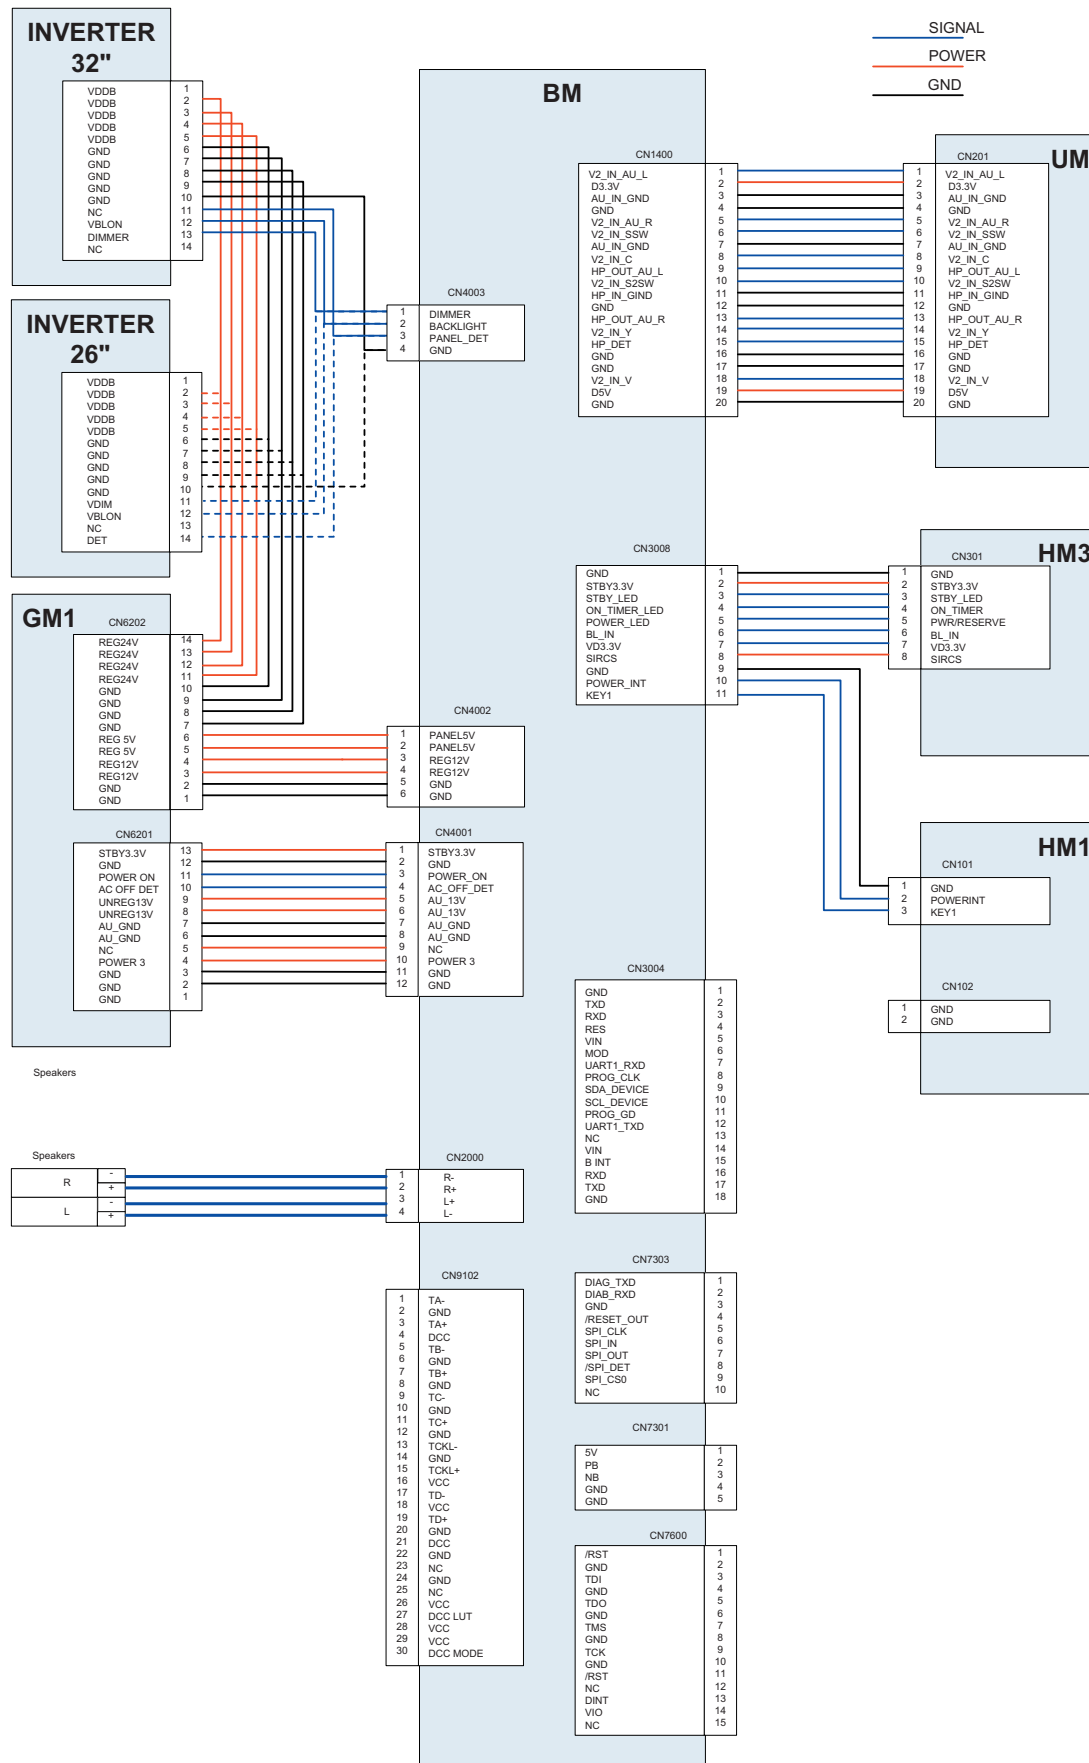


3-5. SCHEMATICS AND SUPPORTING INFORMATION
BM BOARD SCHEMATIC DIAGRAM (1 OF 12)

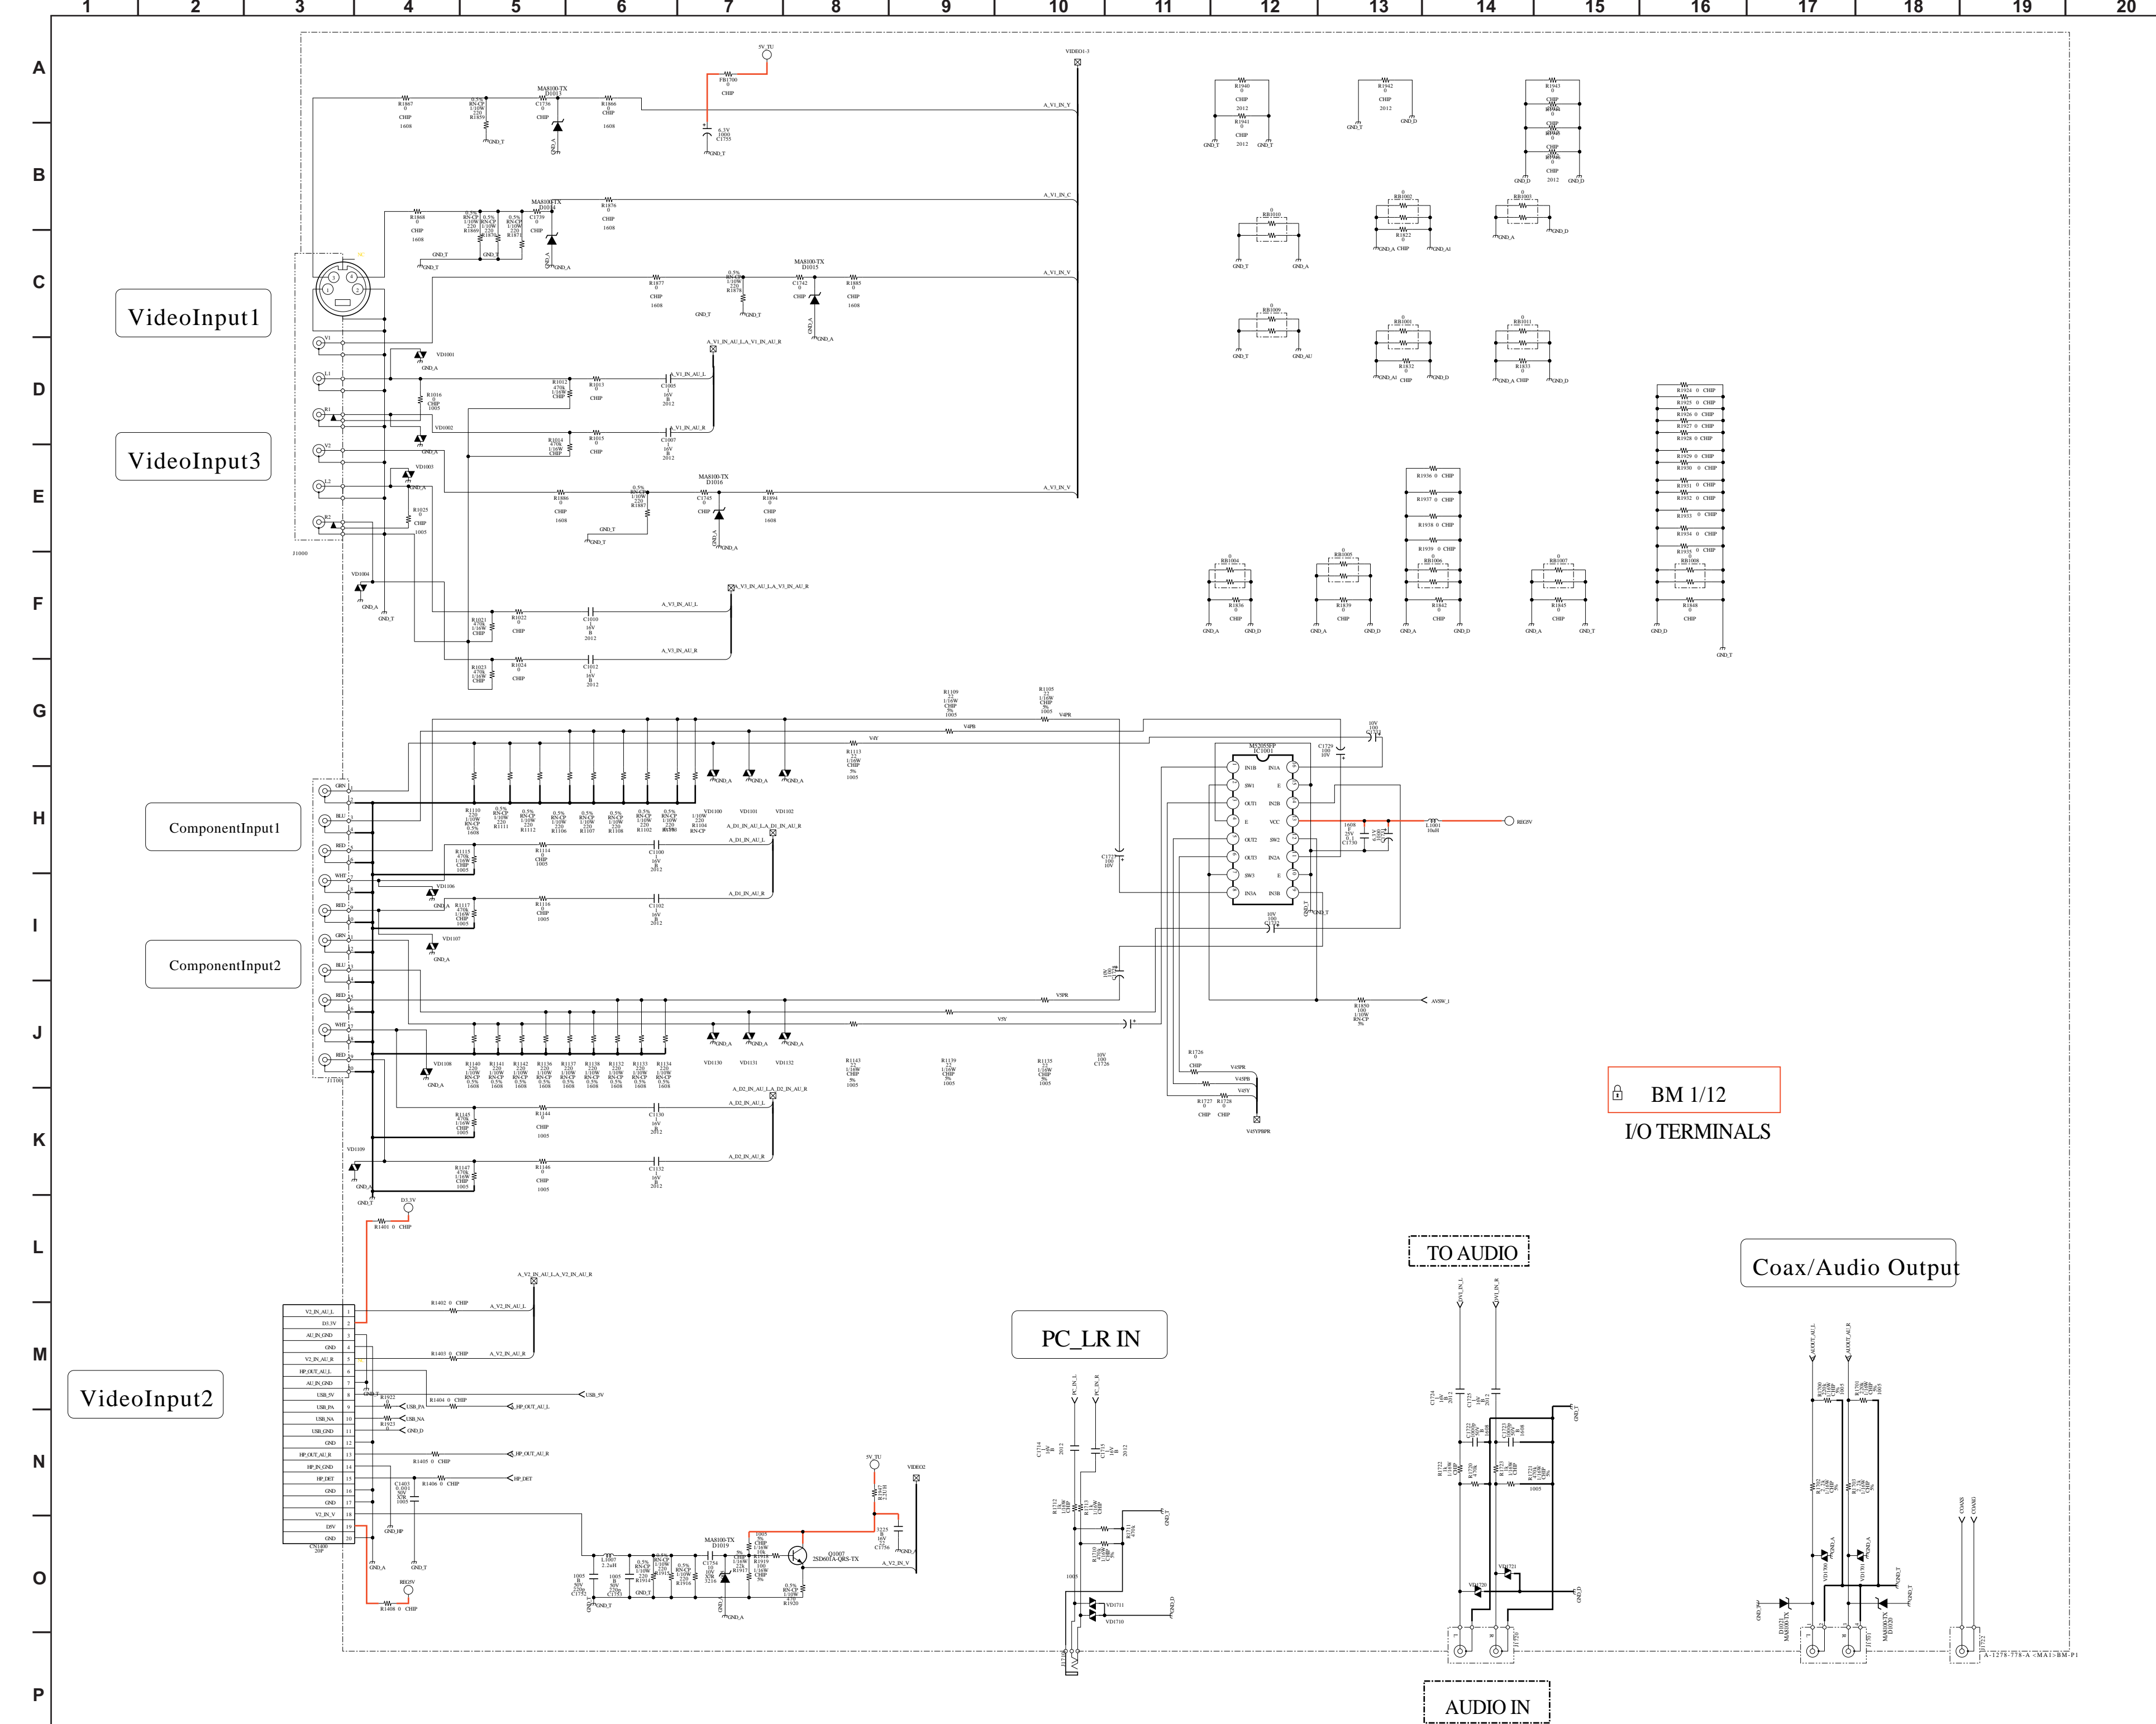



BM 1/12
I/O TERMINALS



[illegible]



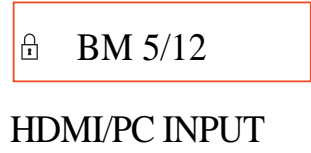




BM 6/12


POWER/DC ALERT



BM BOARD SCHEMATIC DIAGRAM (8 OF 12)

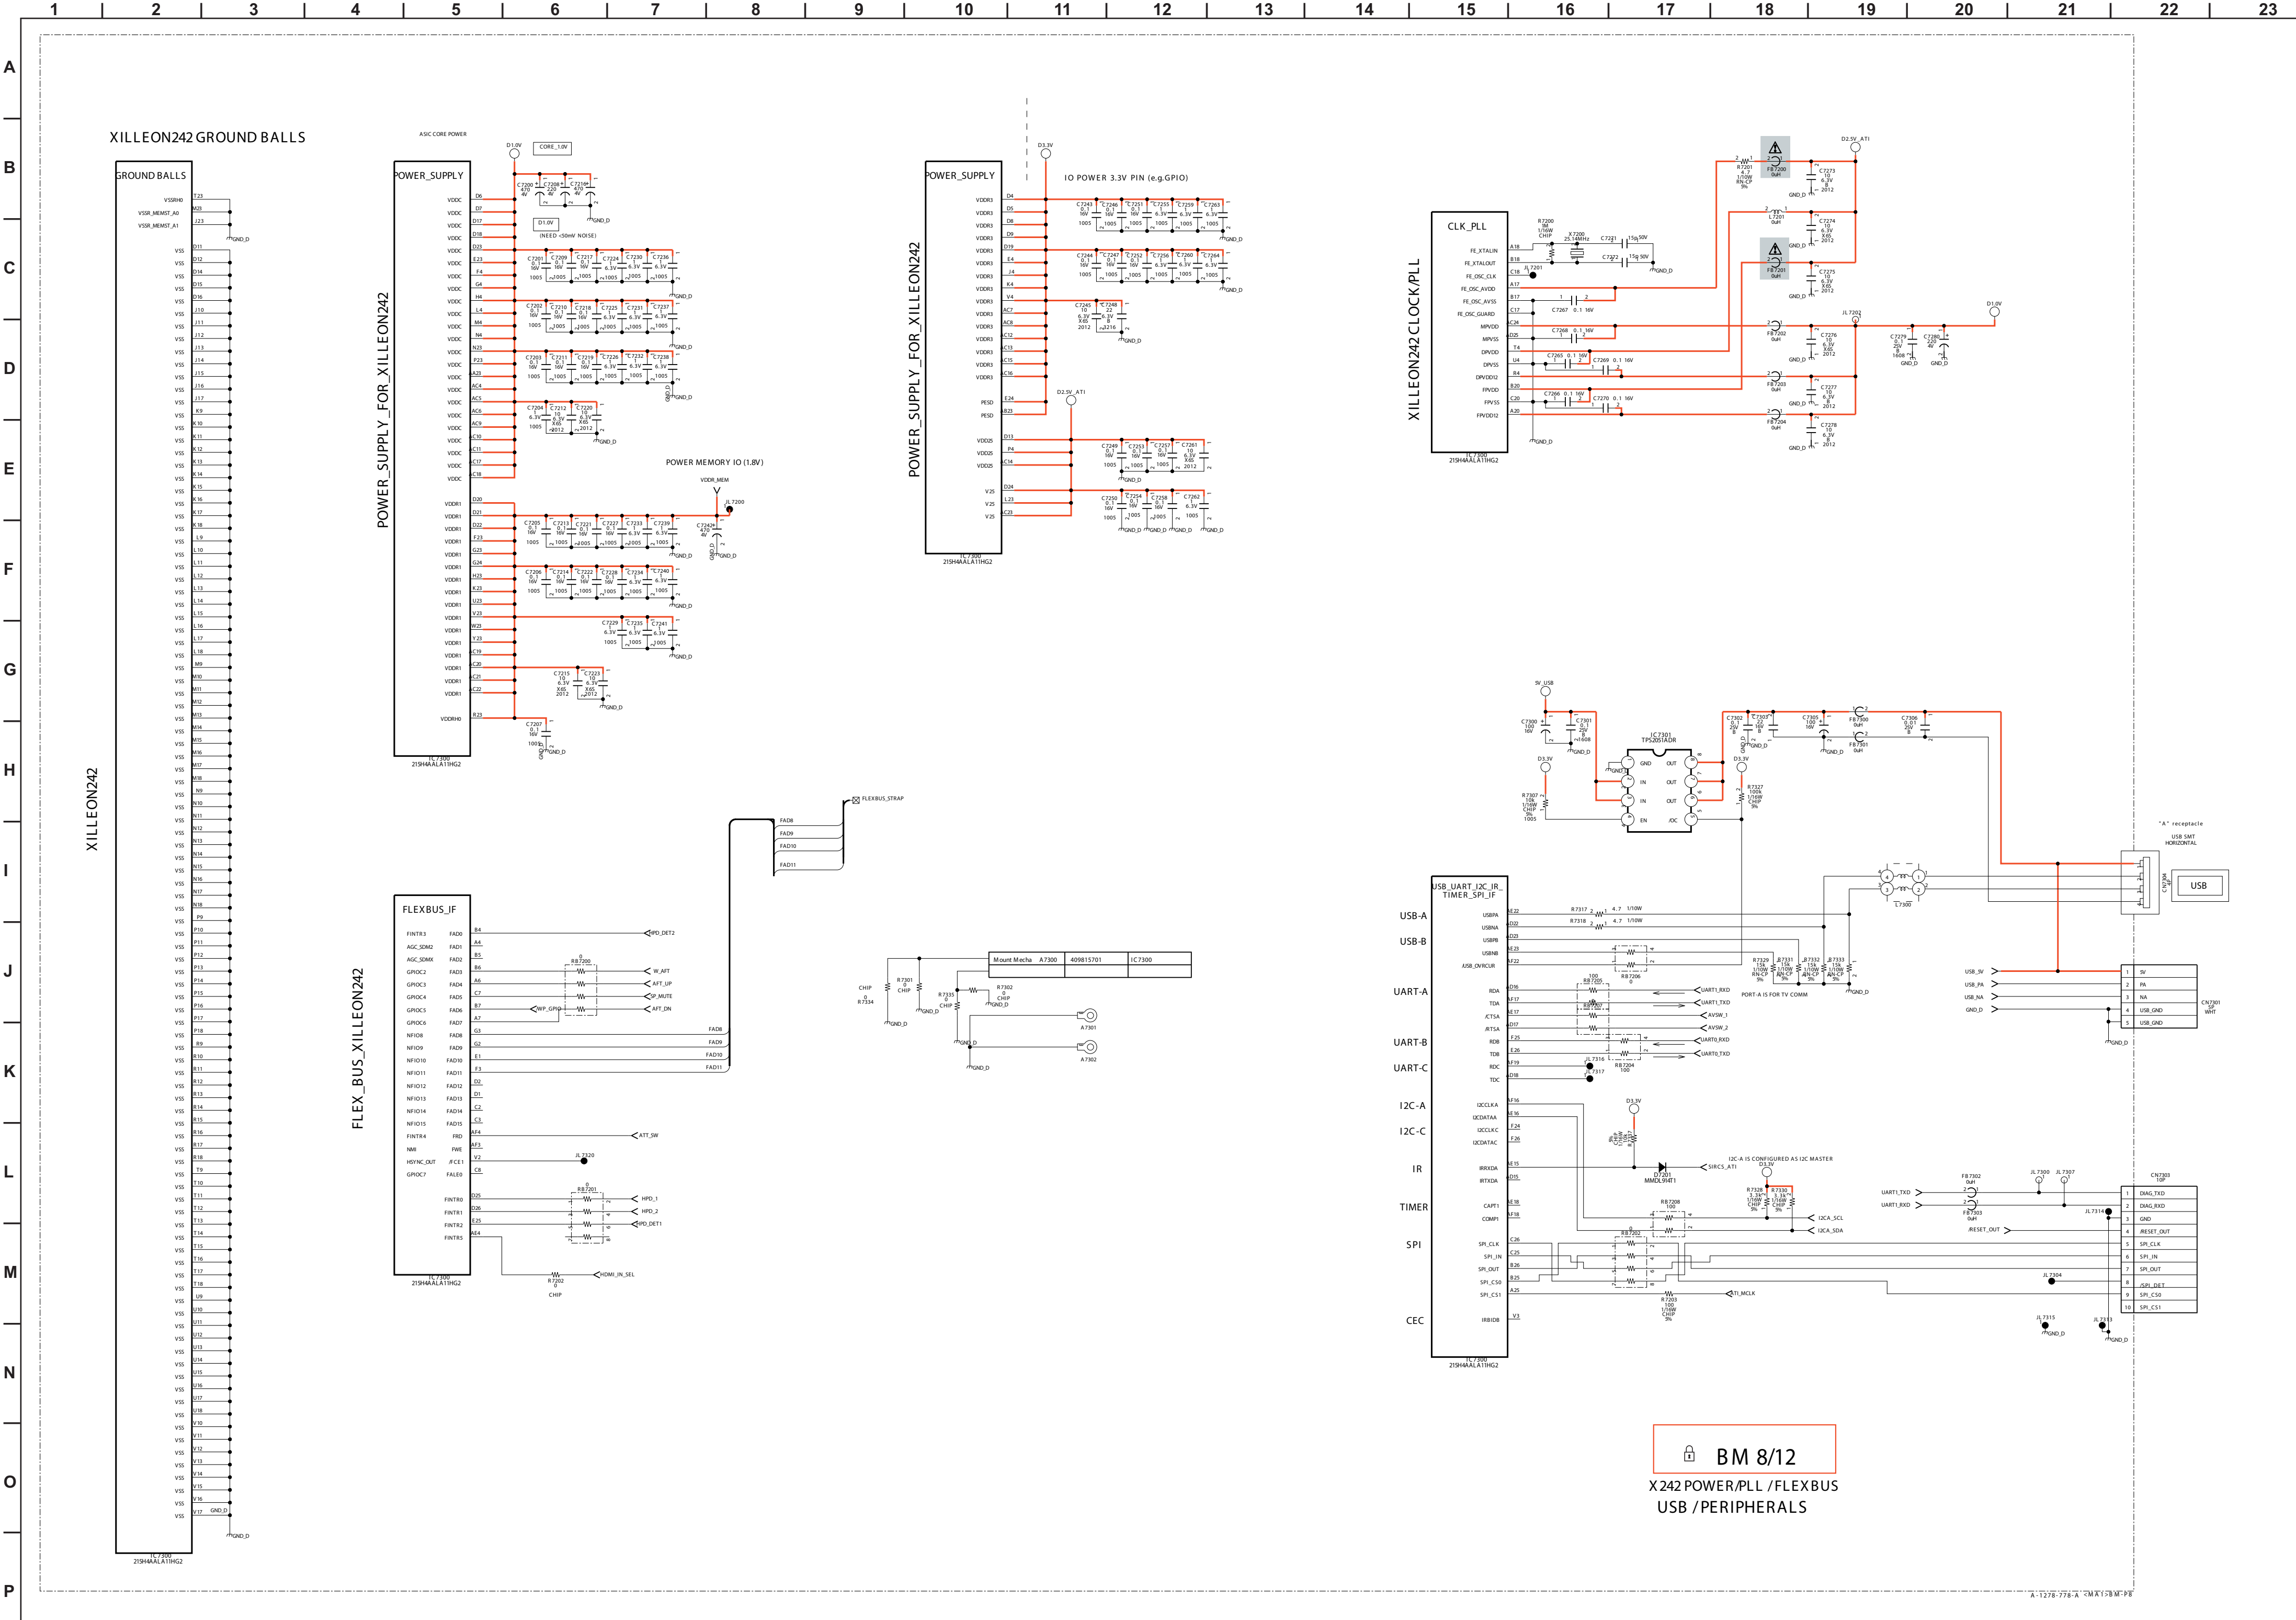

BM BOARD SCHEMATIC DIAGRAM (9 OF 12)

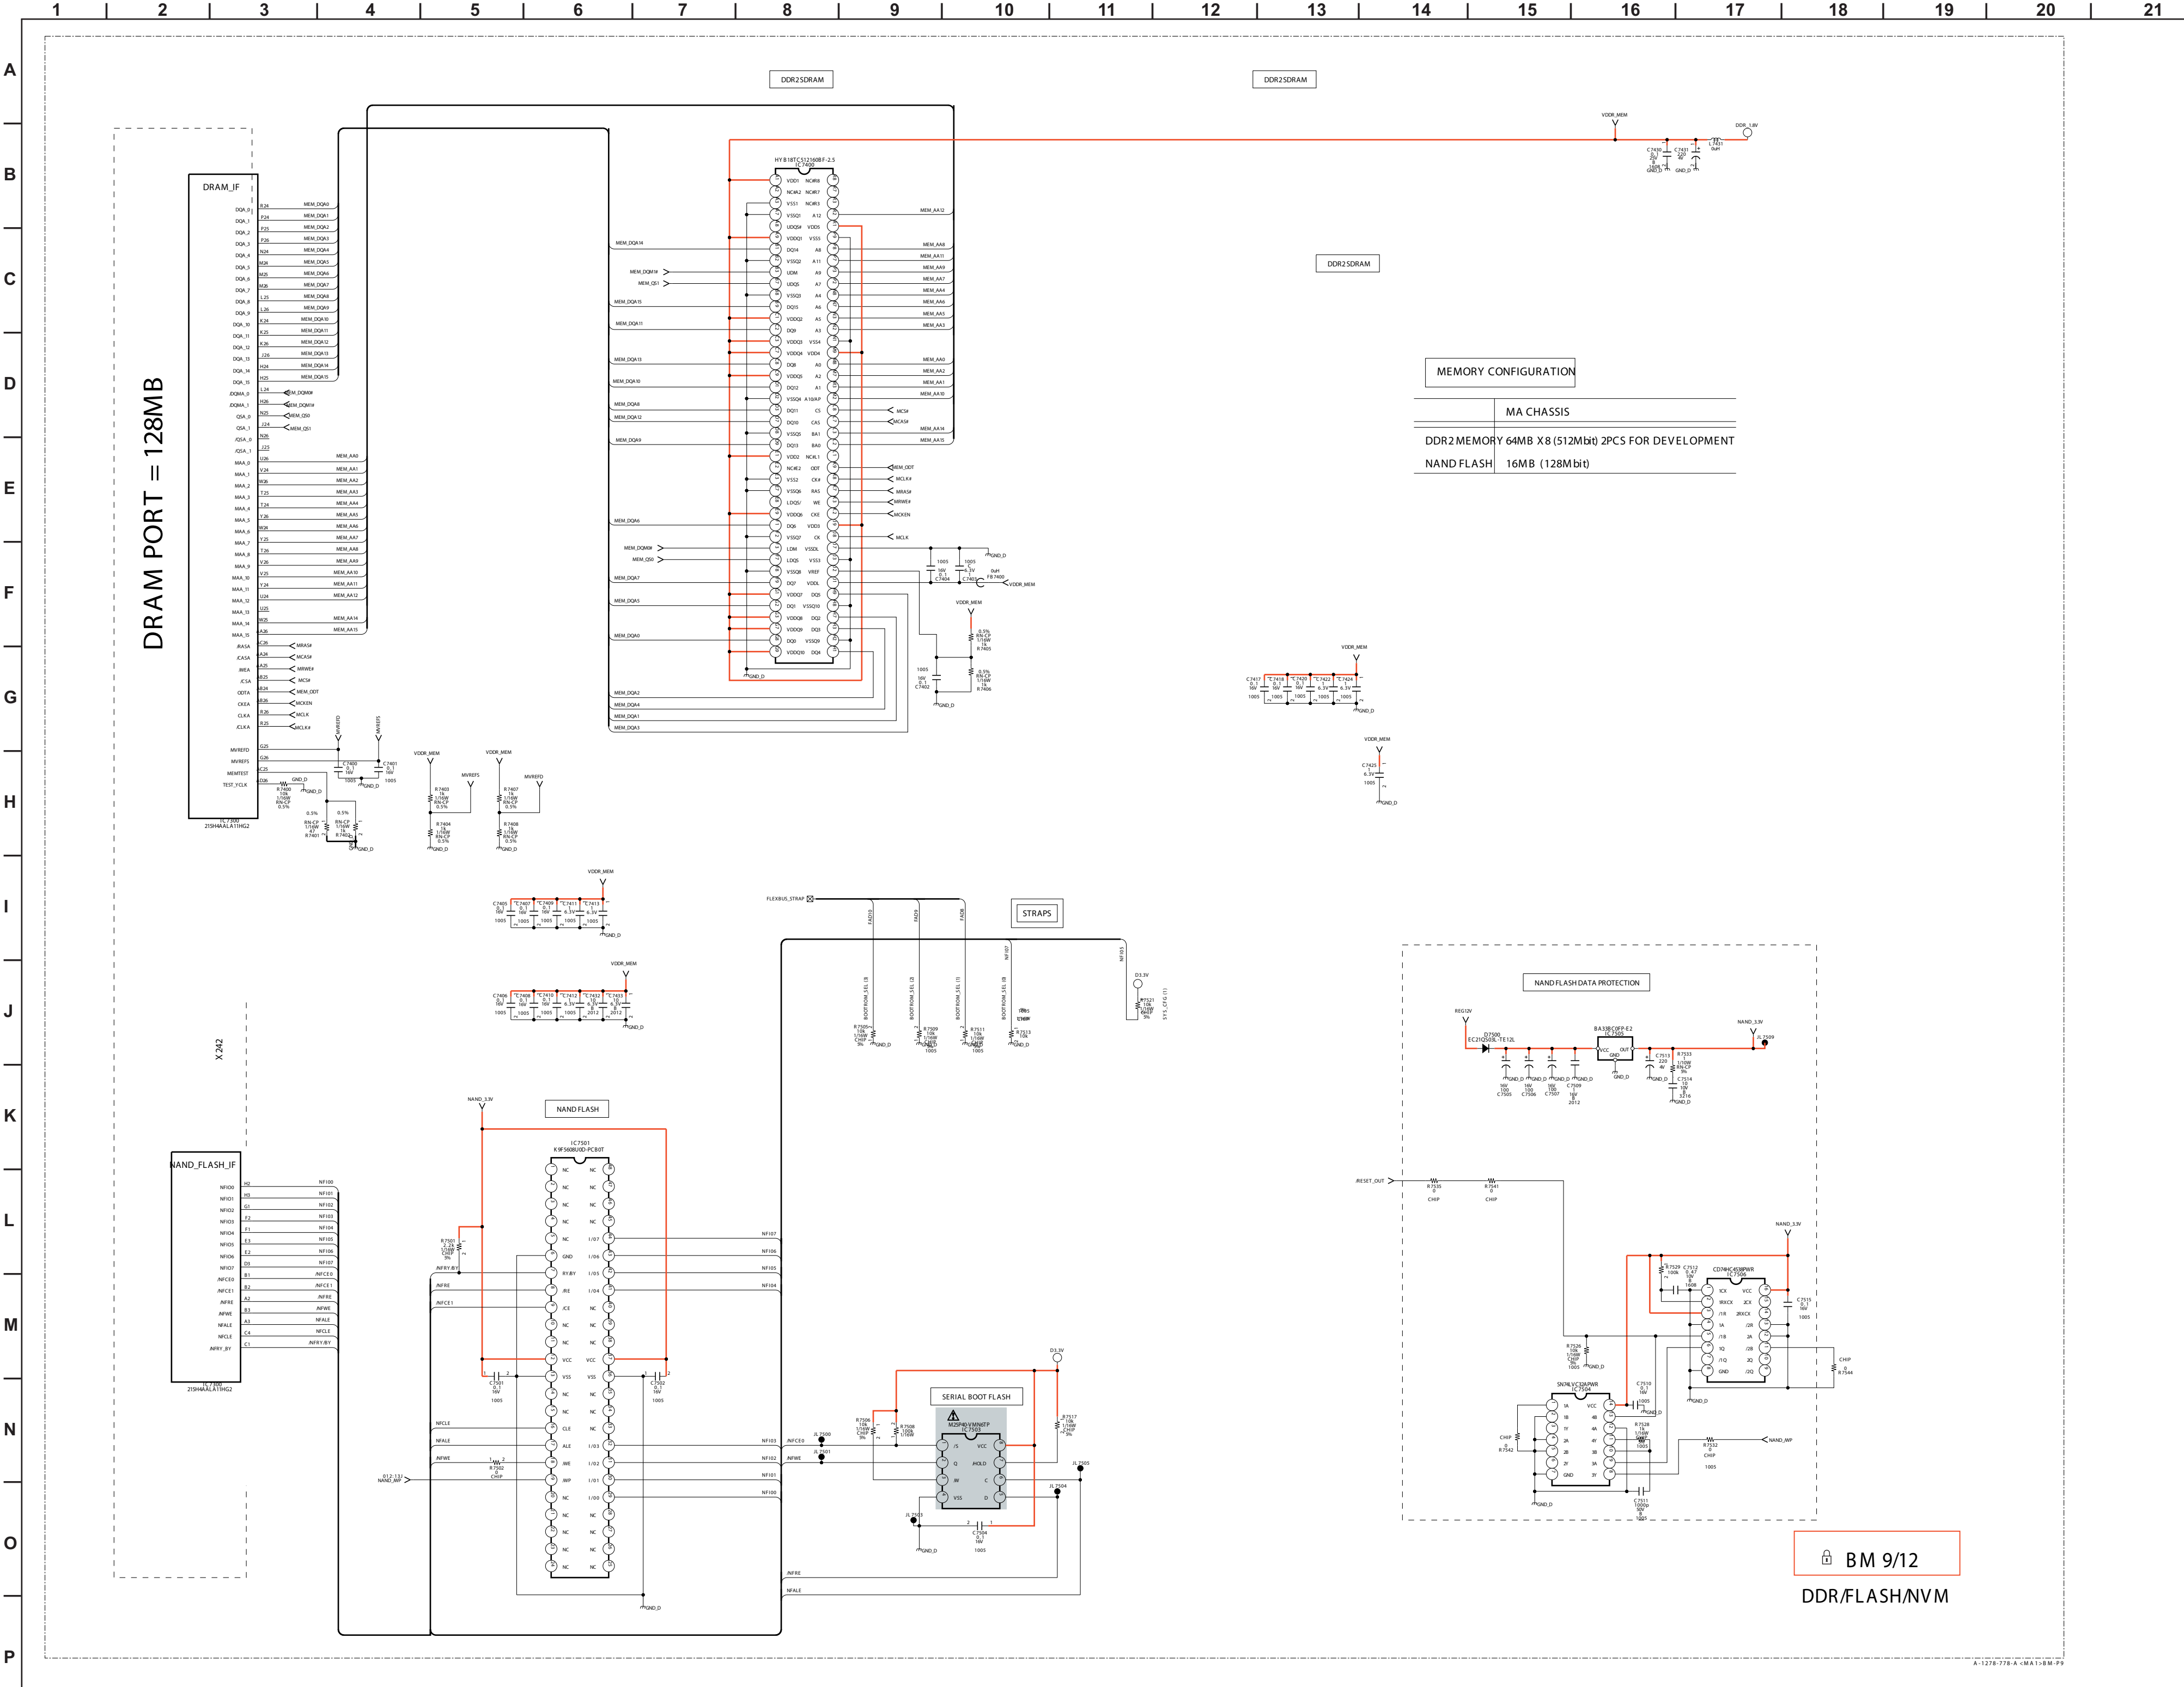










COMPONENT SIDE

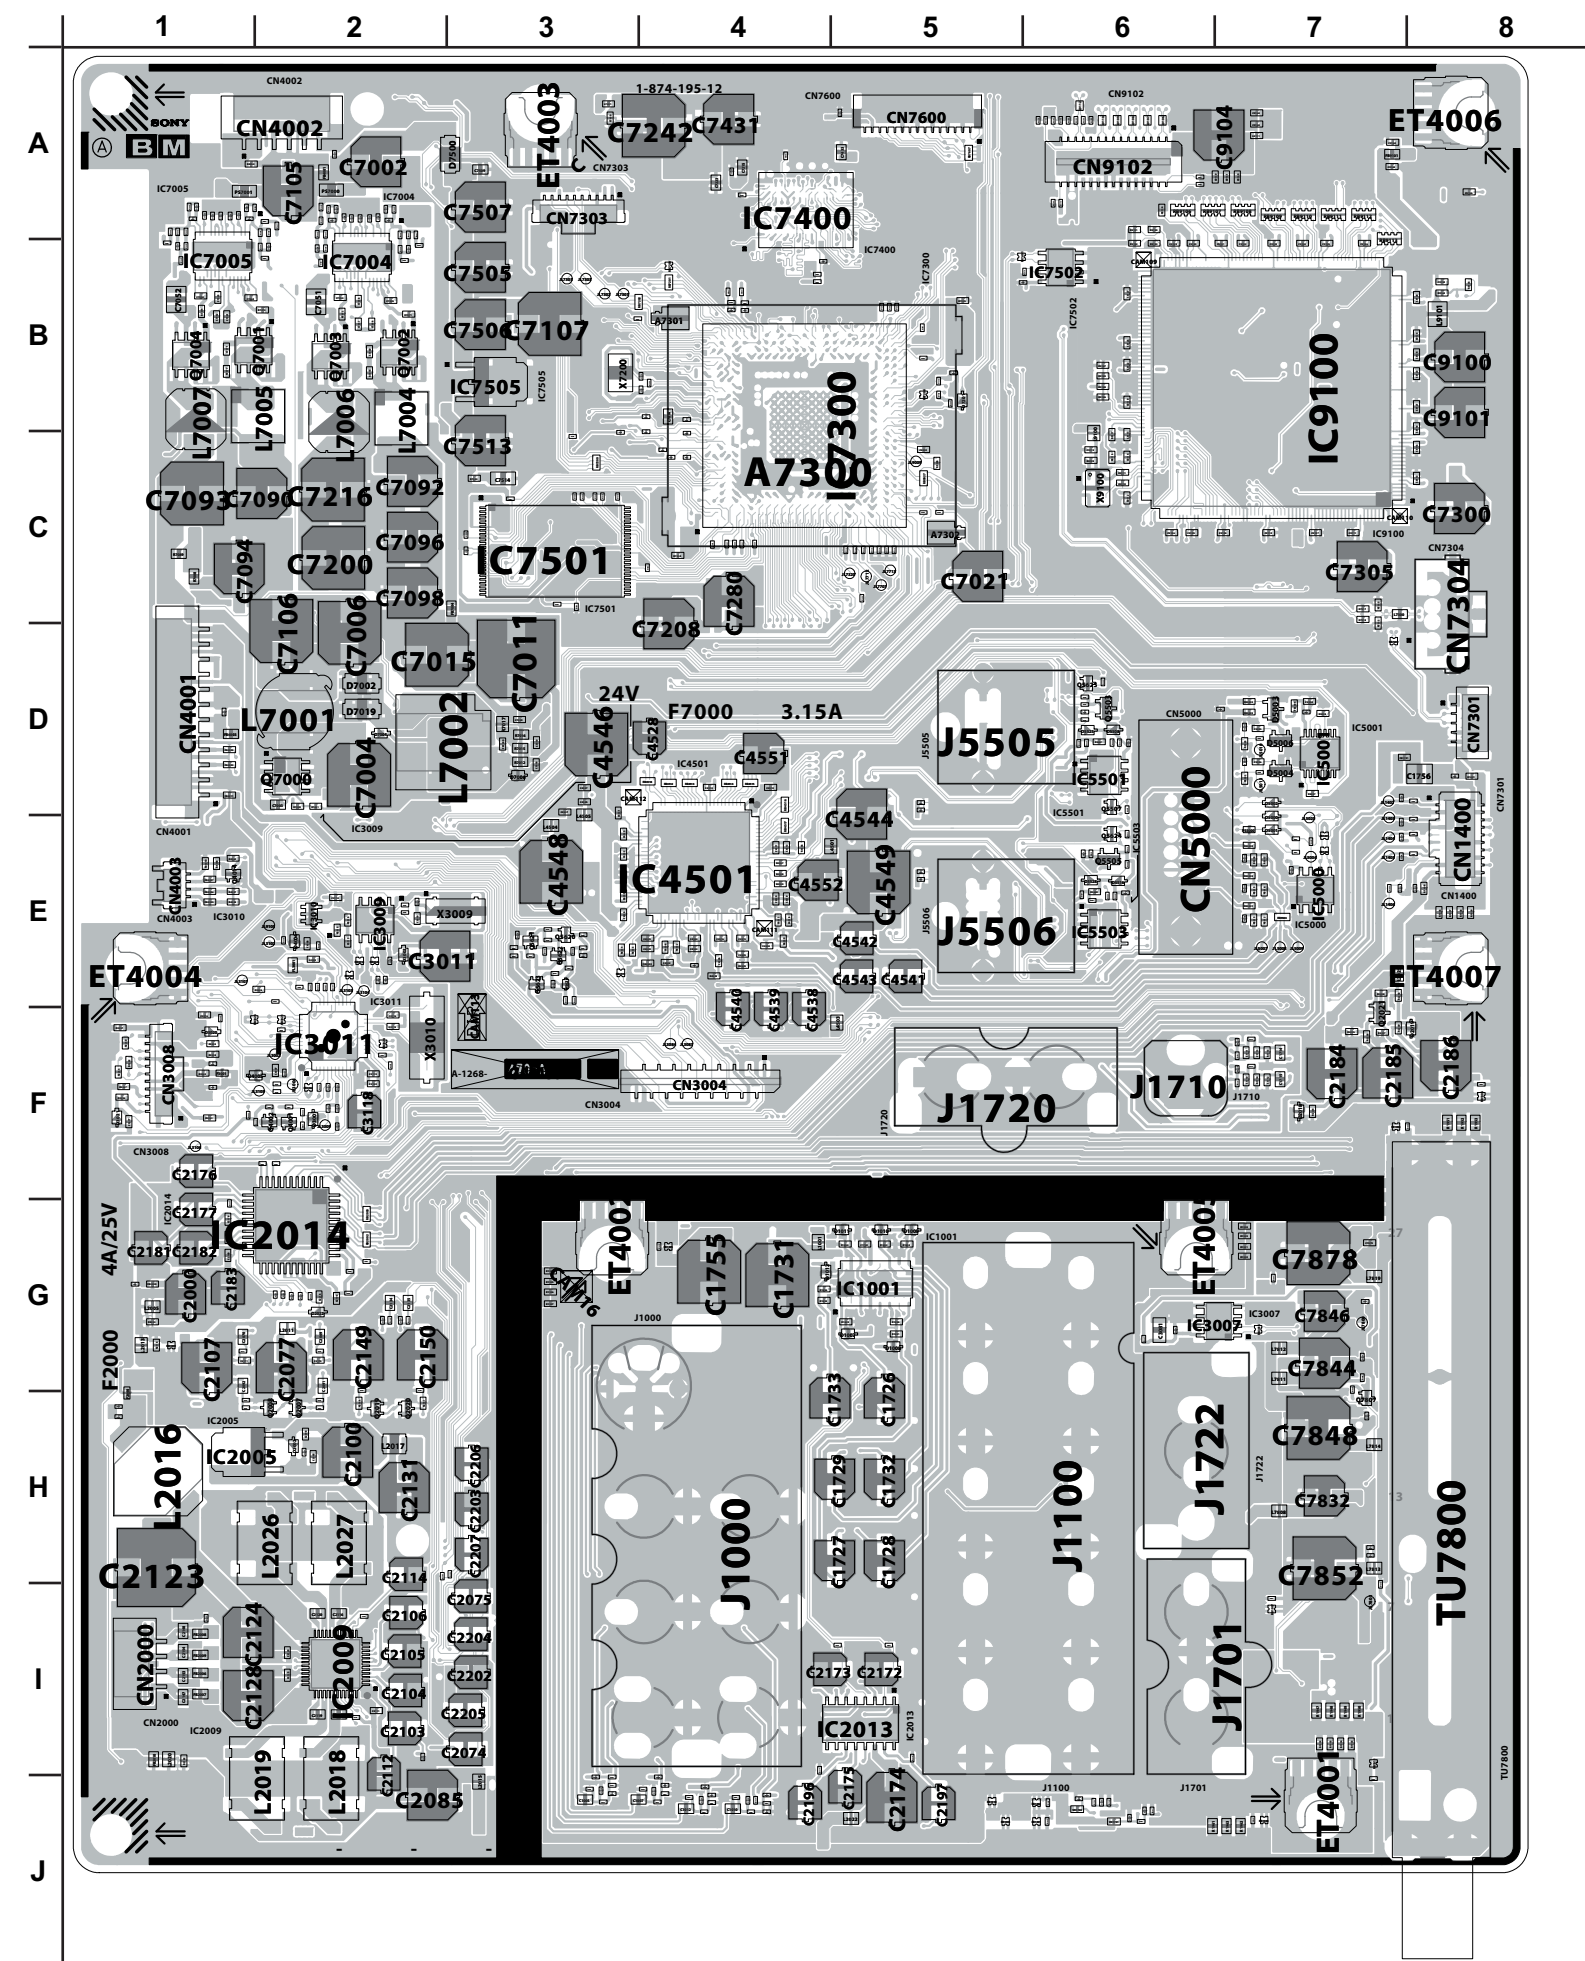

CONDUCTOR SIDE

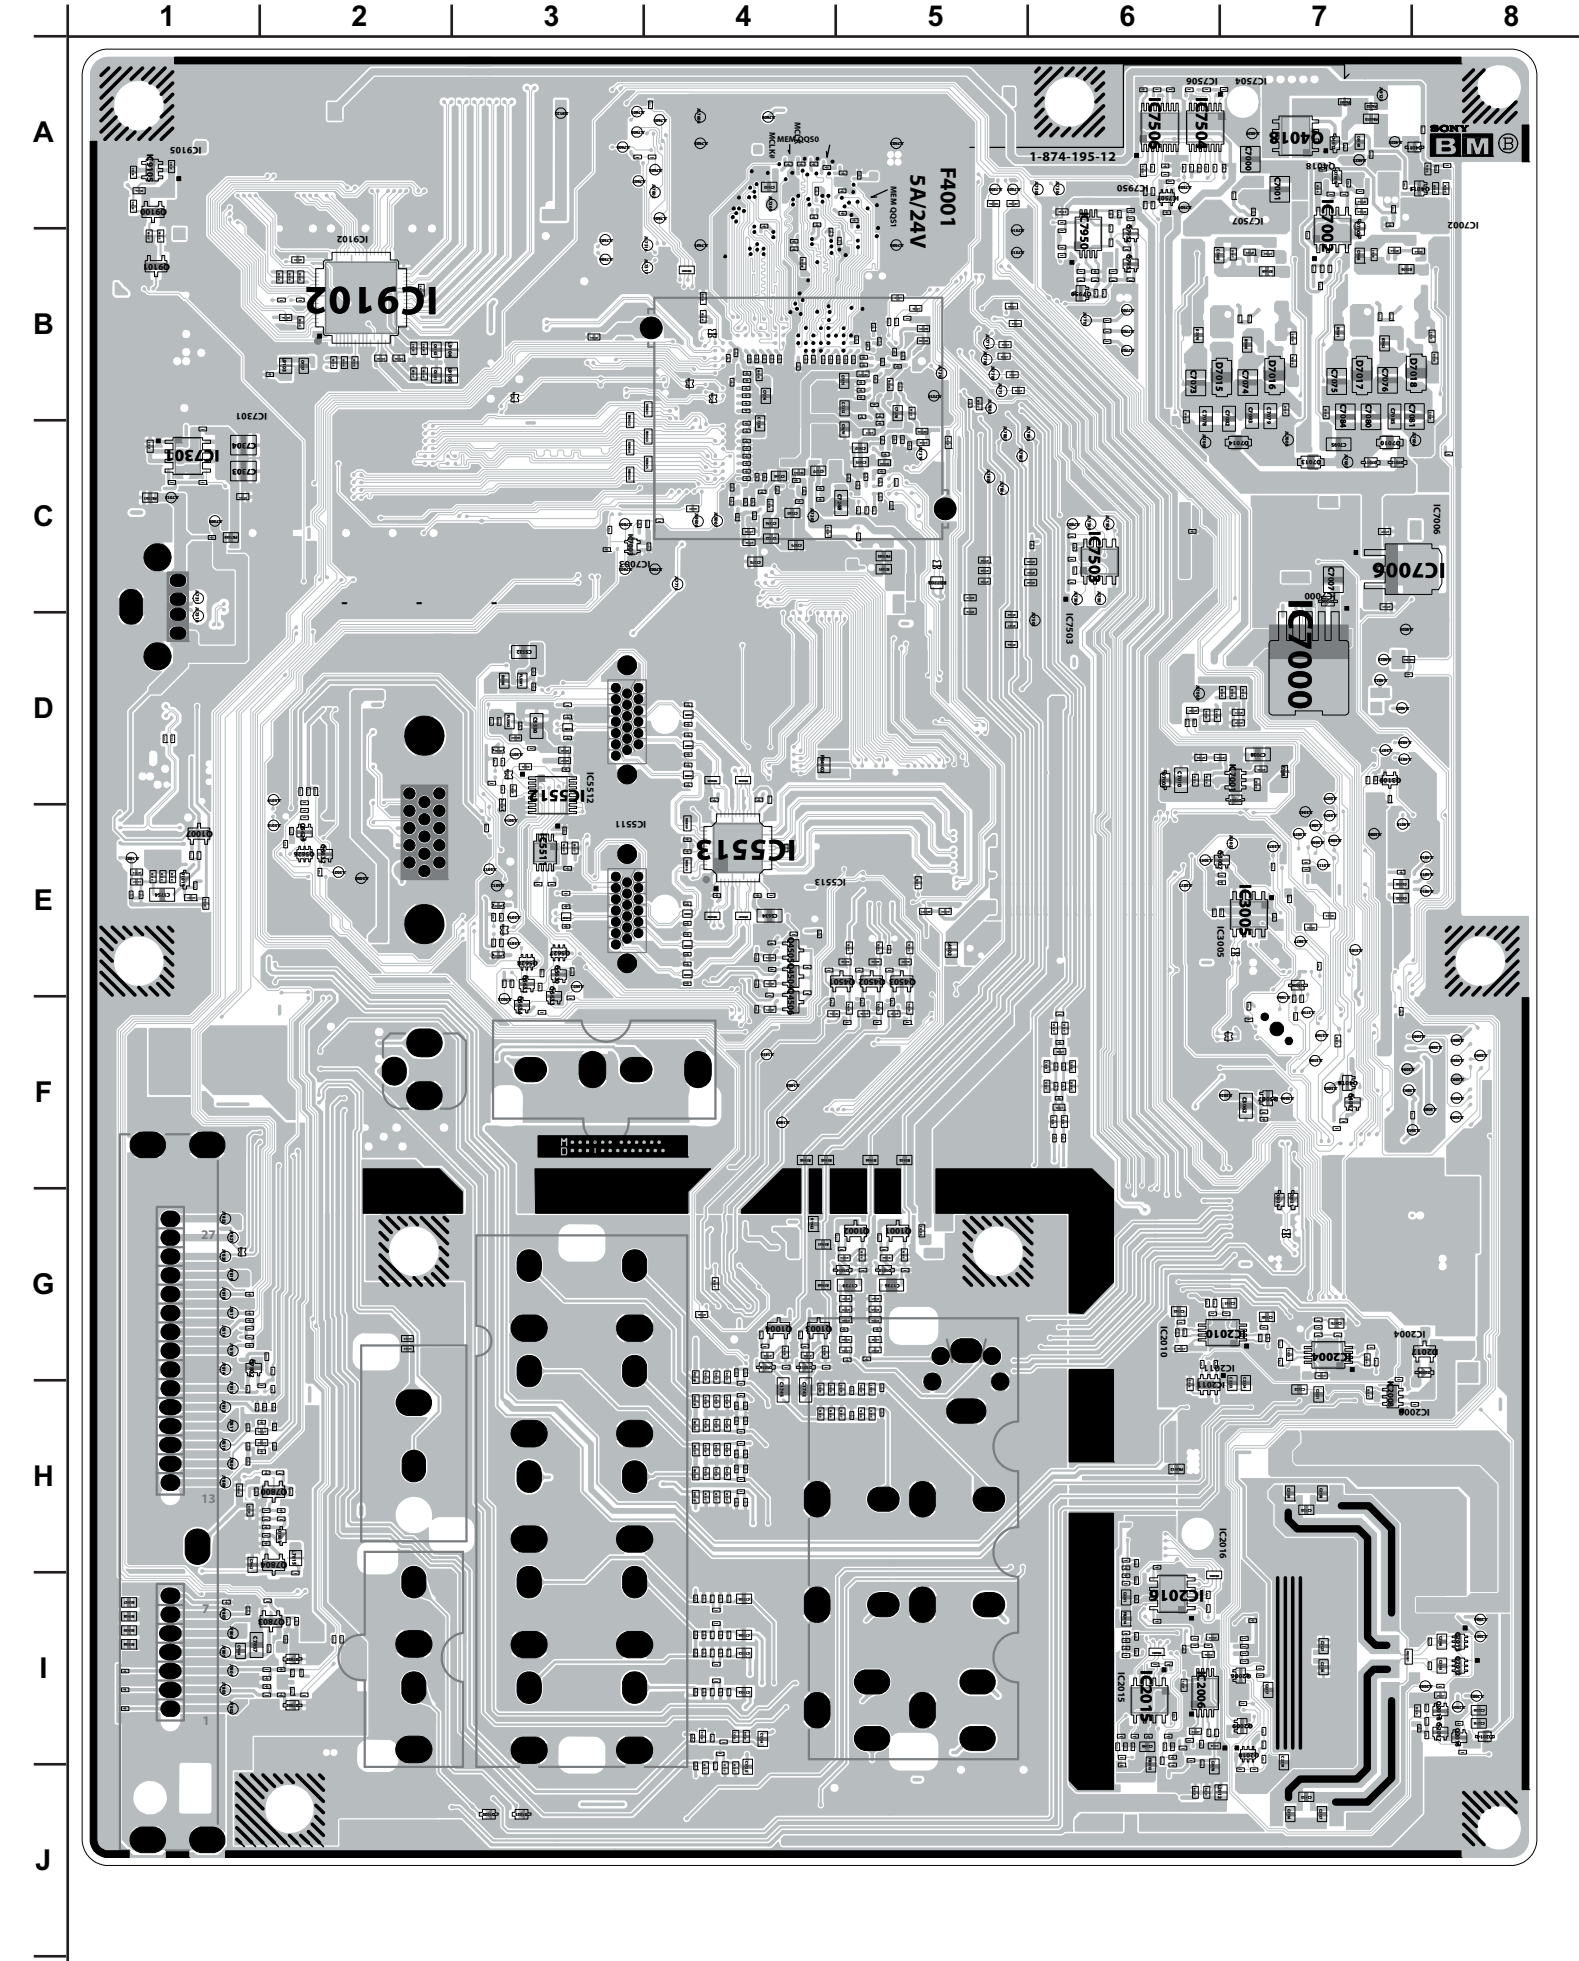


G1M BOARD SCHEMATIC DIAGRAM

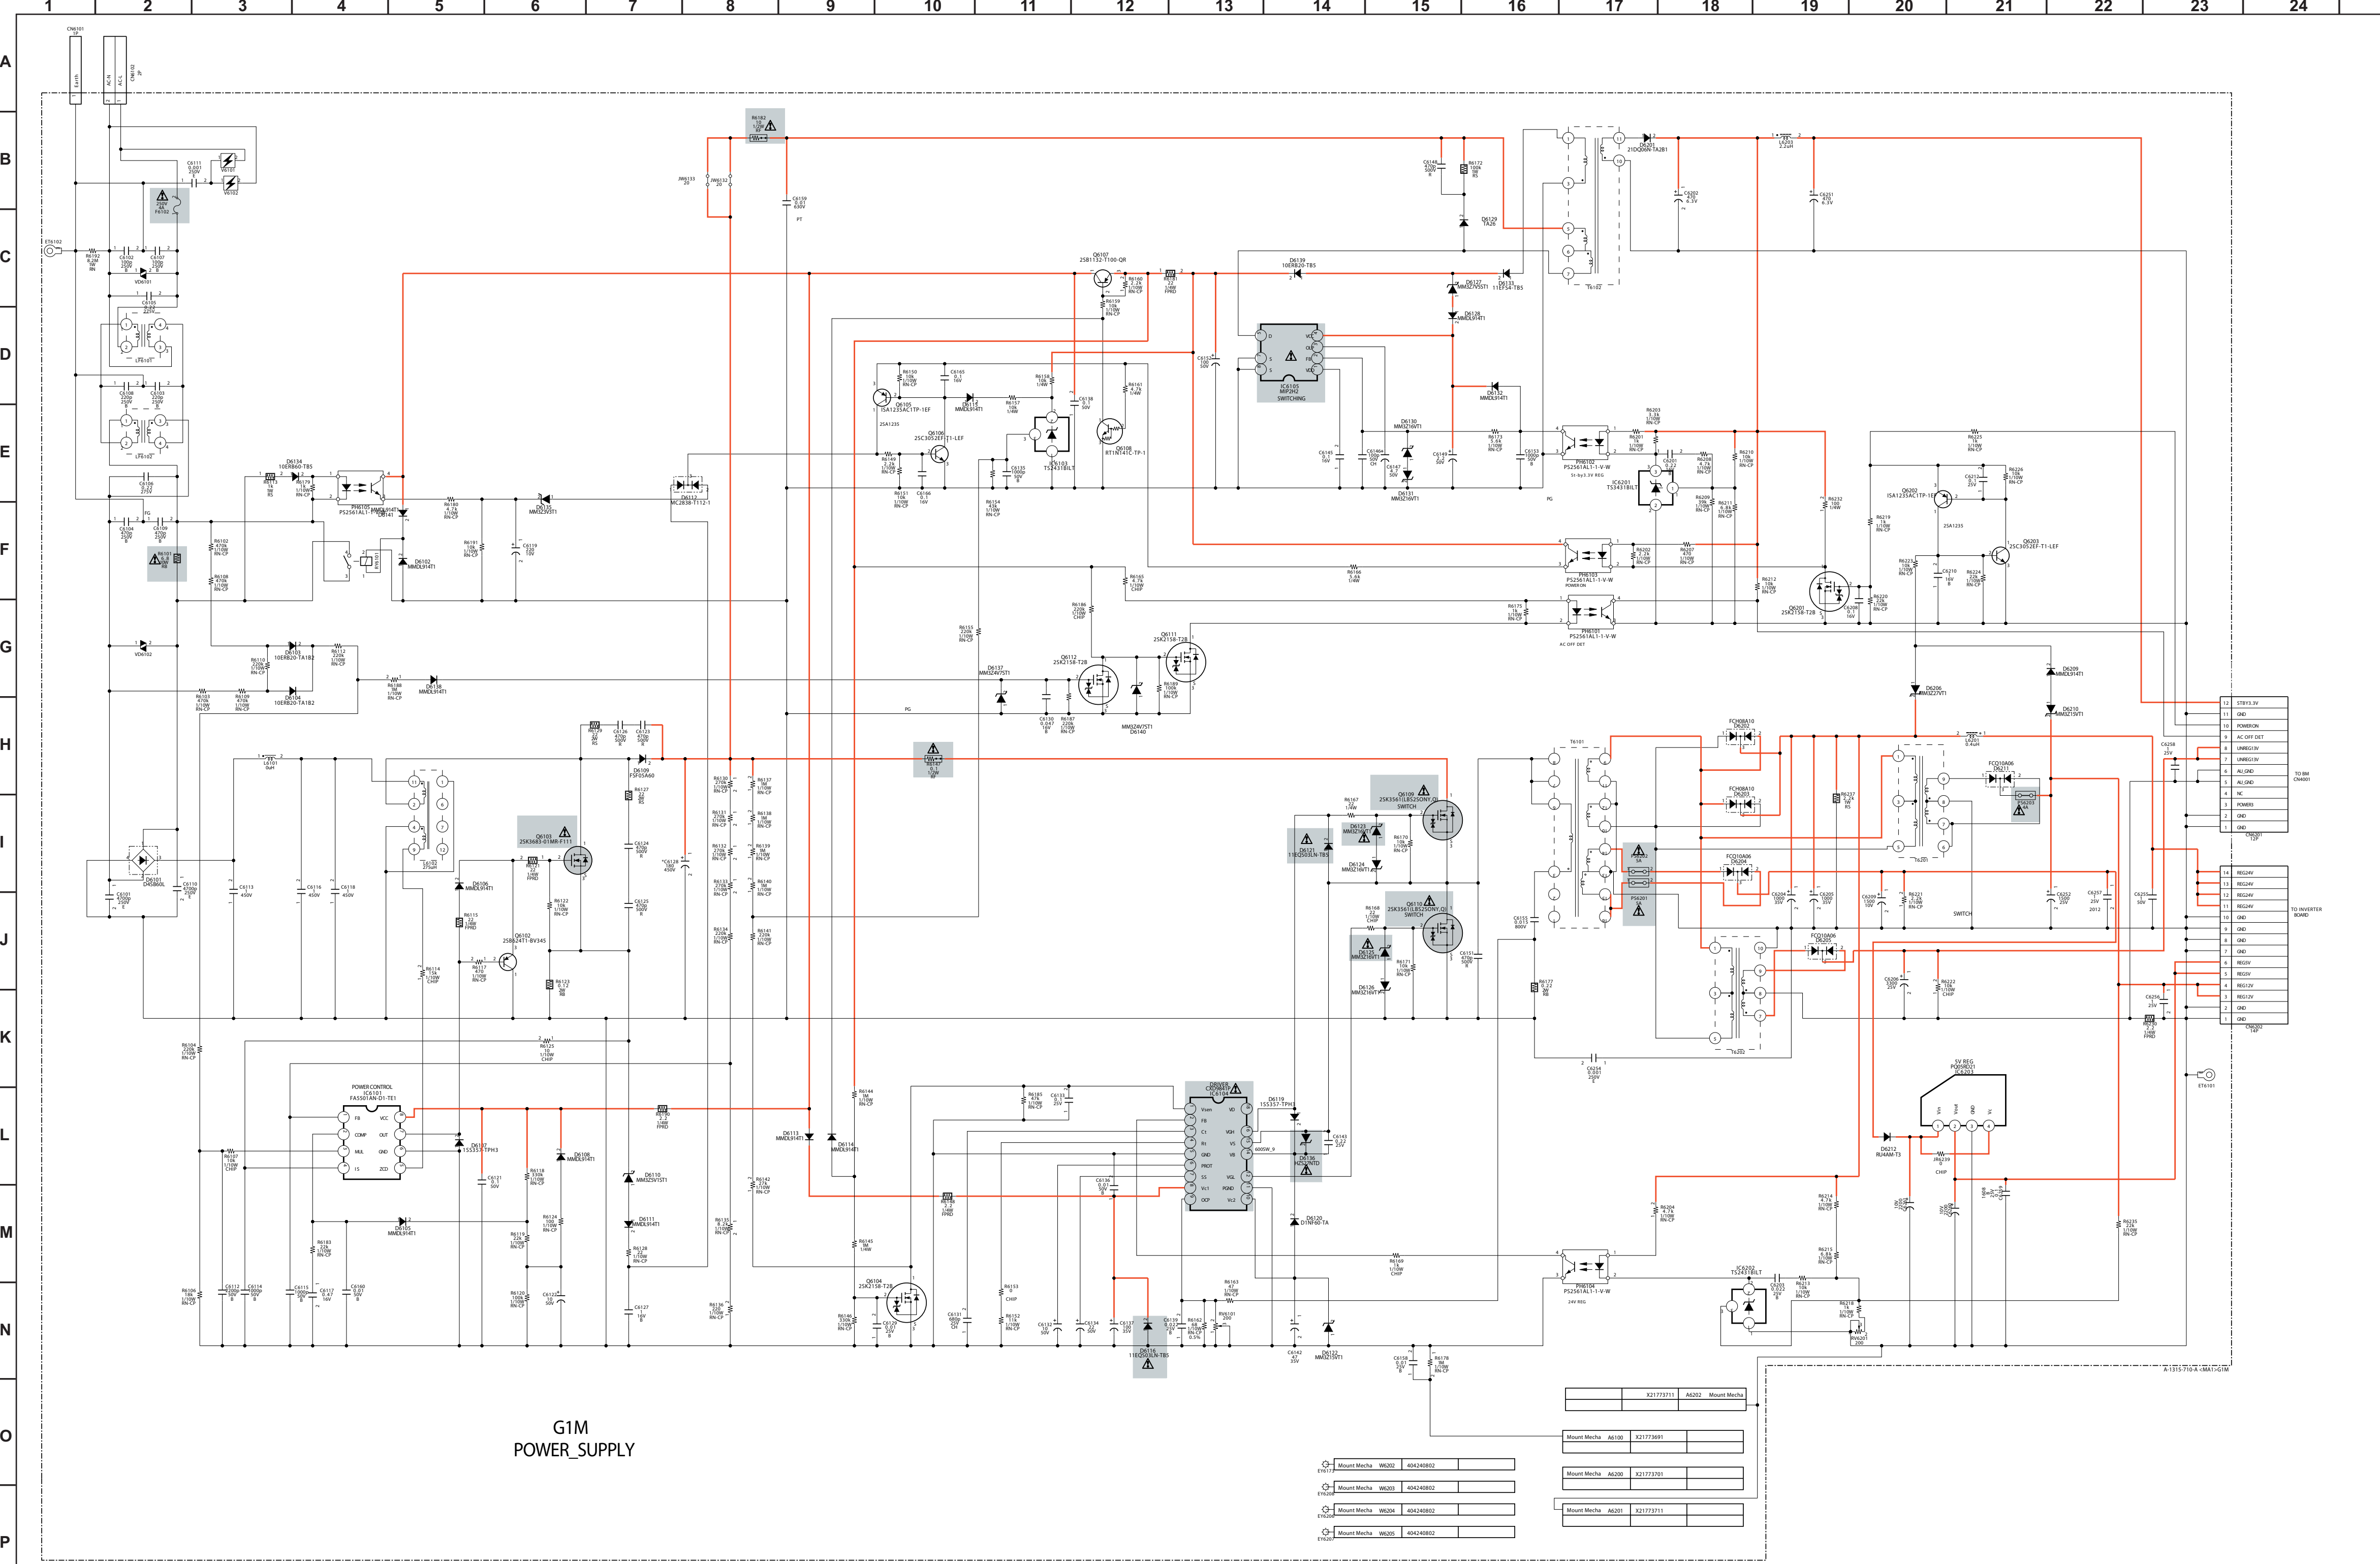




[POWER SUPPLY] COMPONENT SIDE

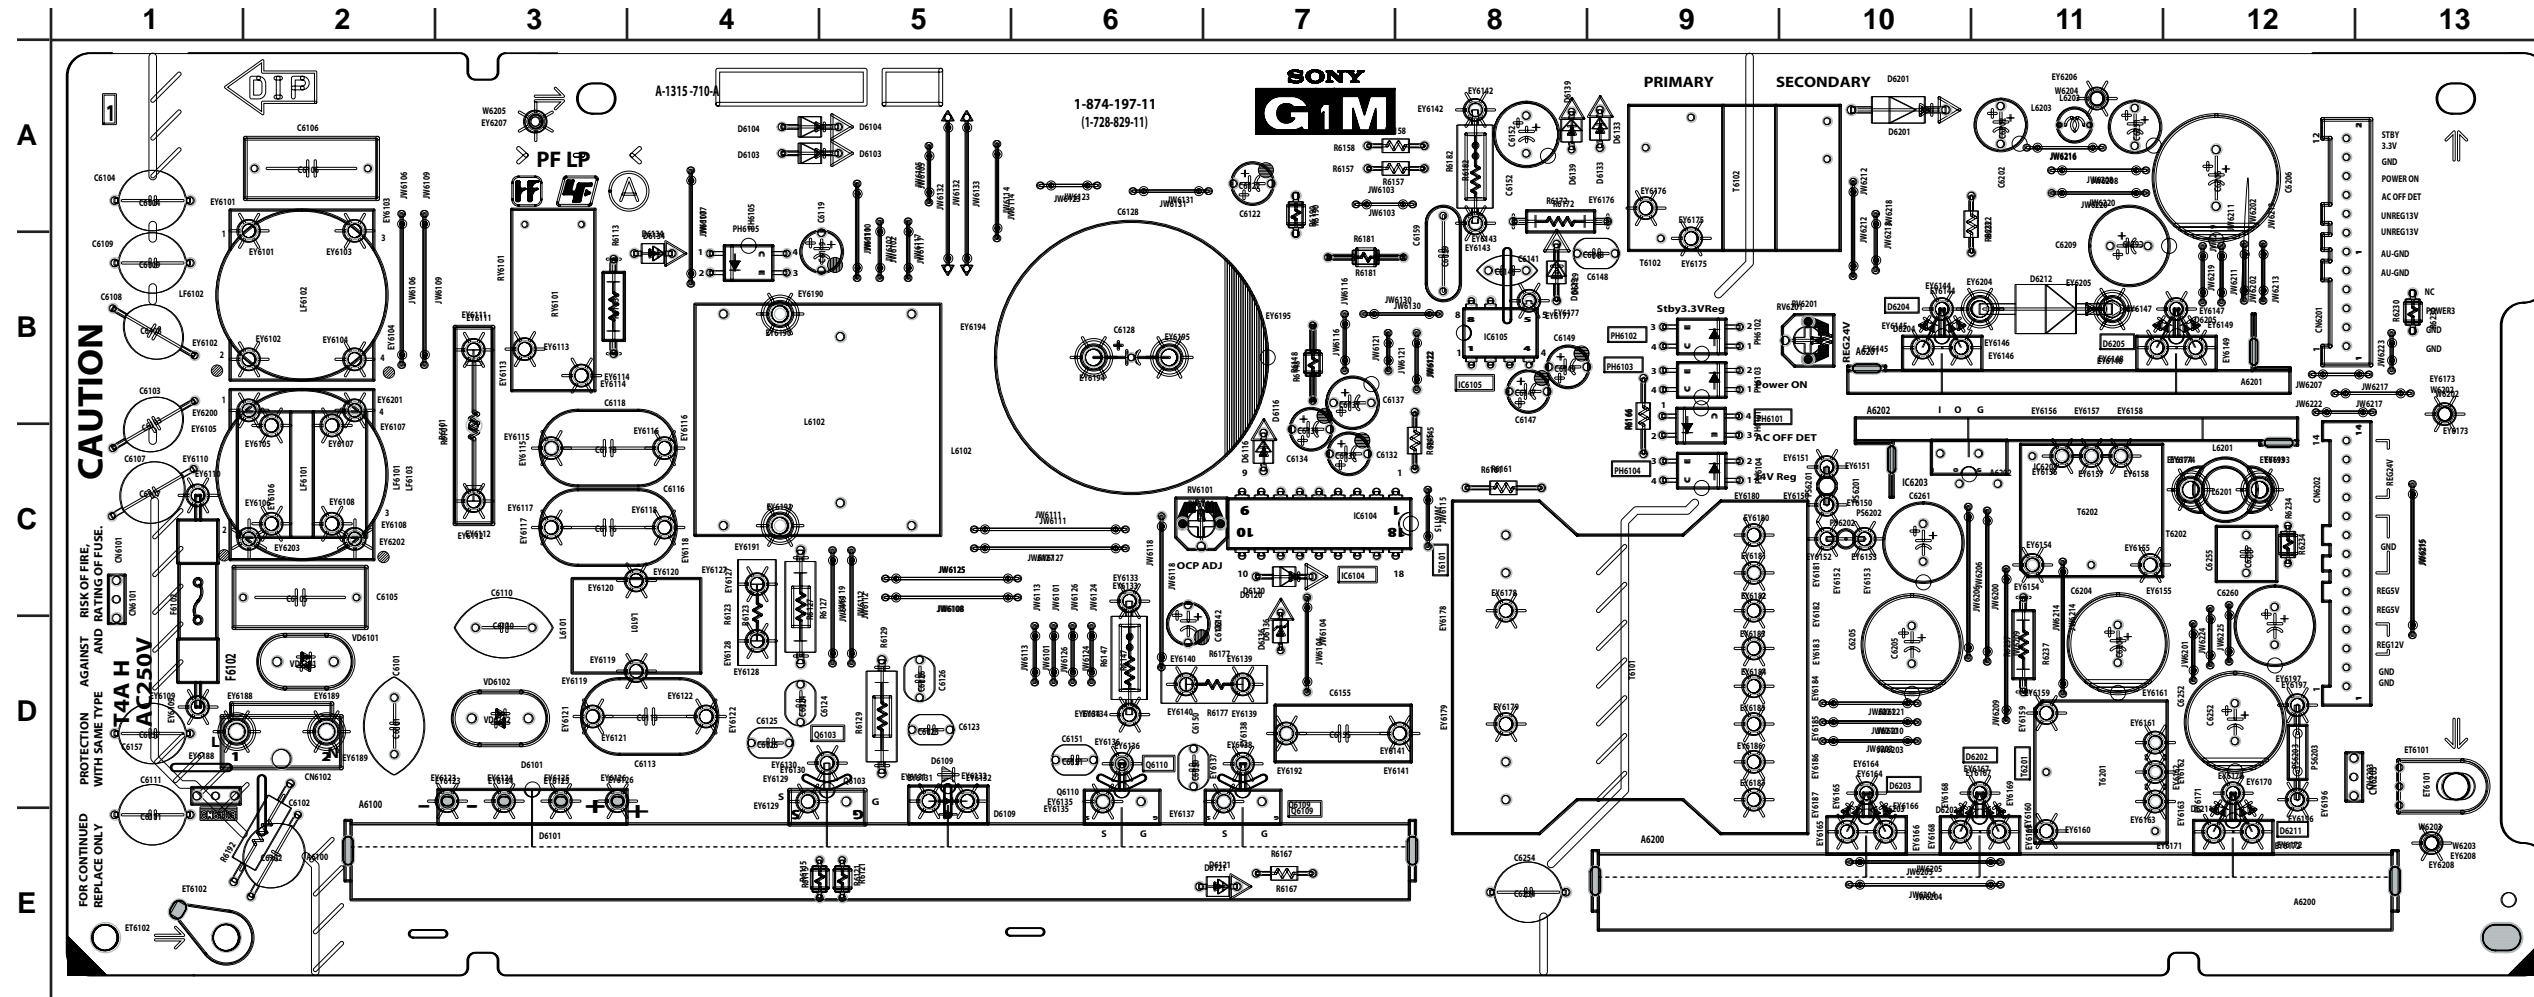


G1M



[POWER SUPPLY]
CONDUCTOR SIDE

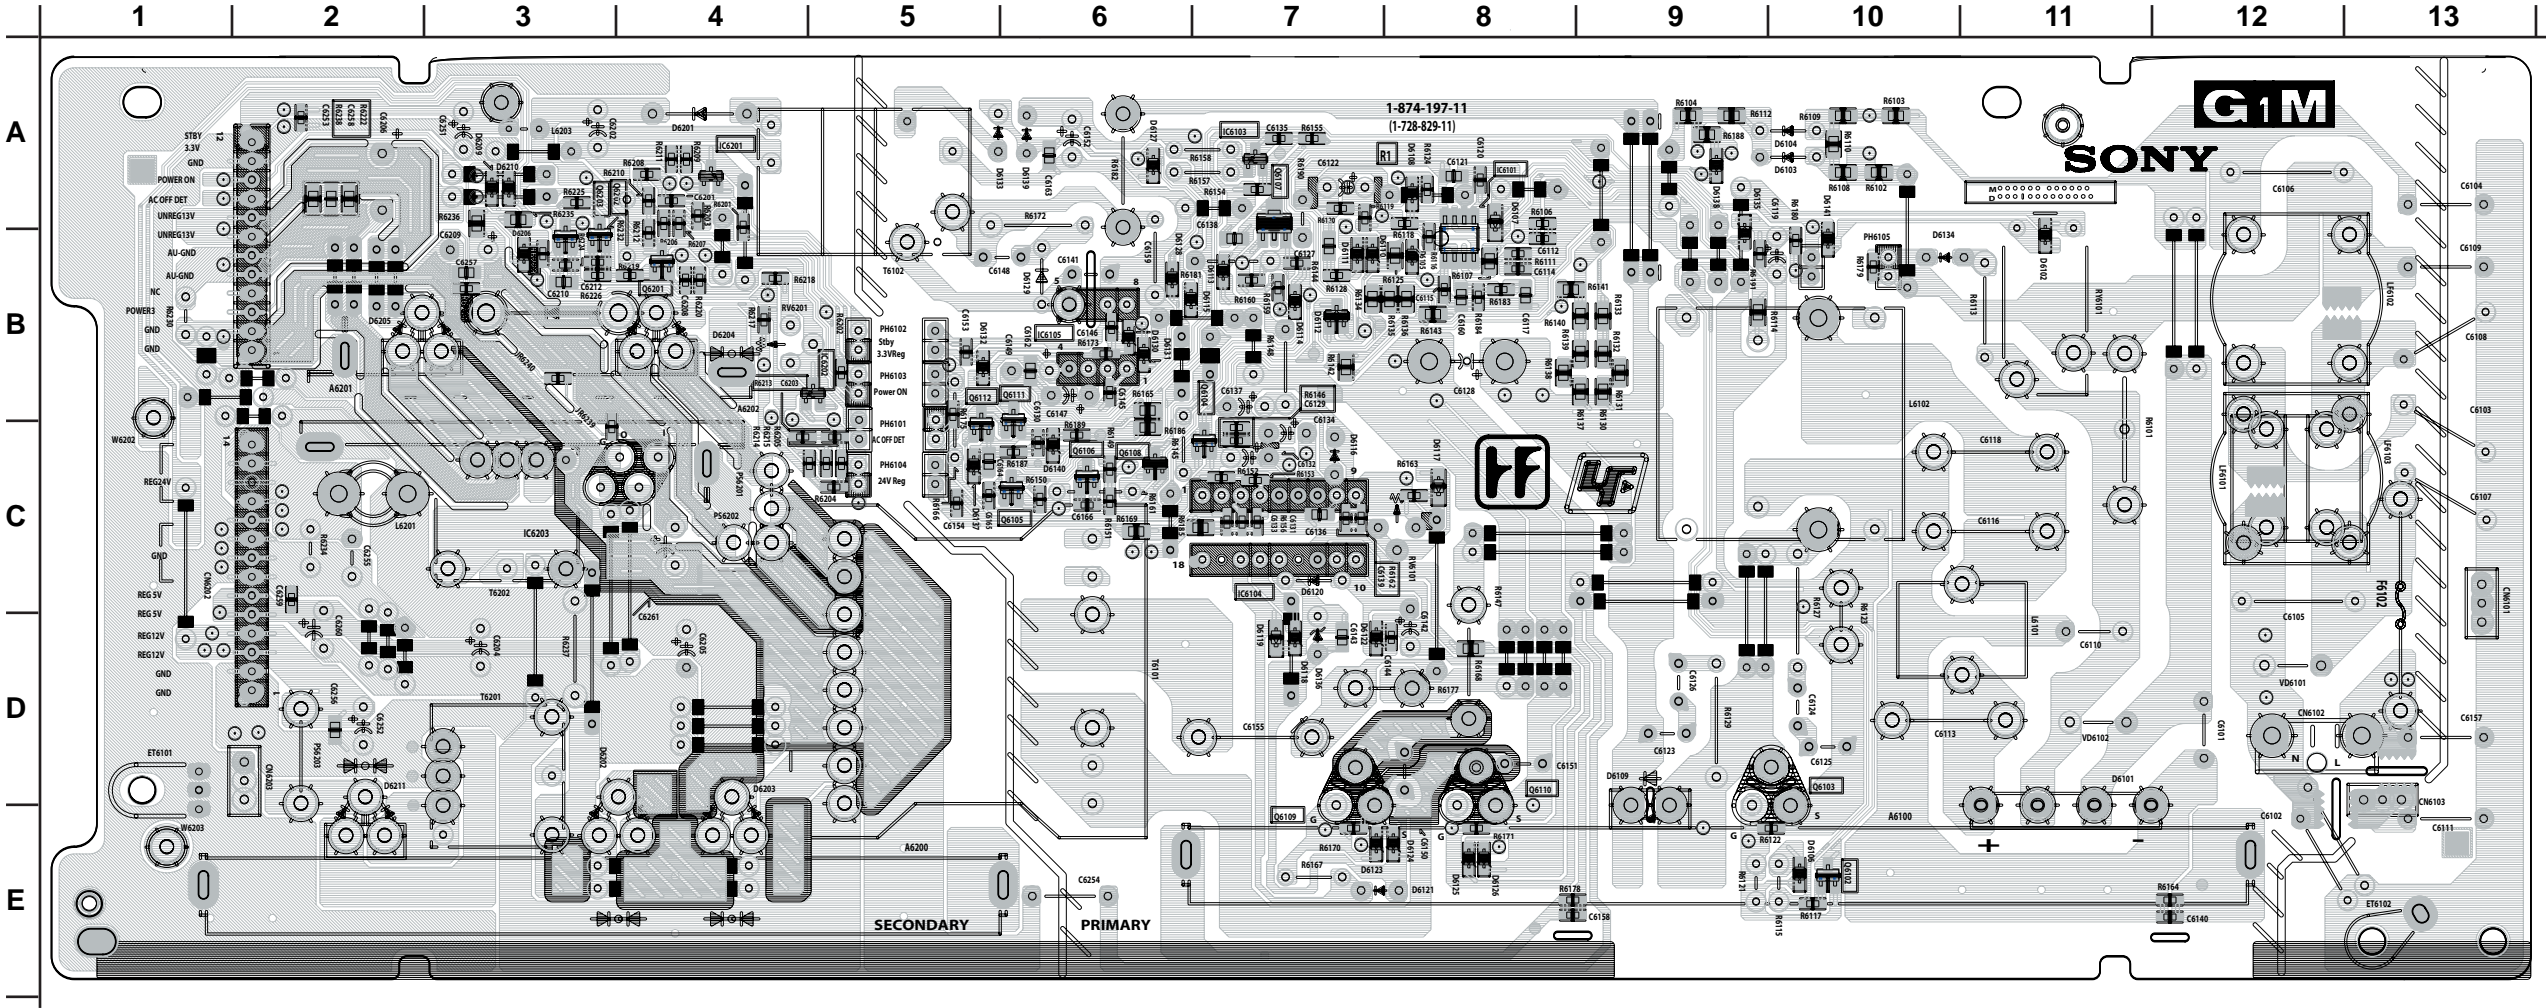


HM1 BOARD SCHEMATIC DIAGRAM

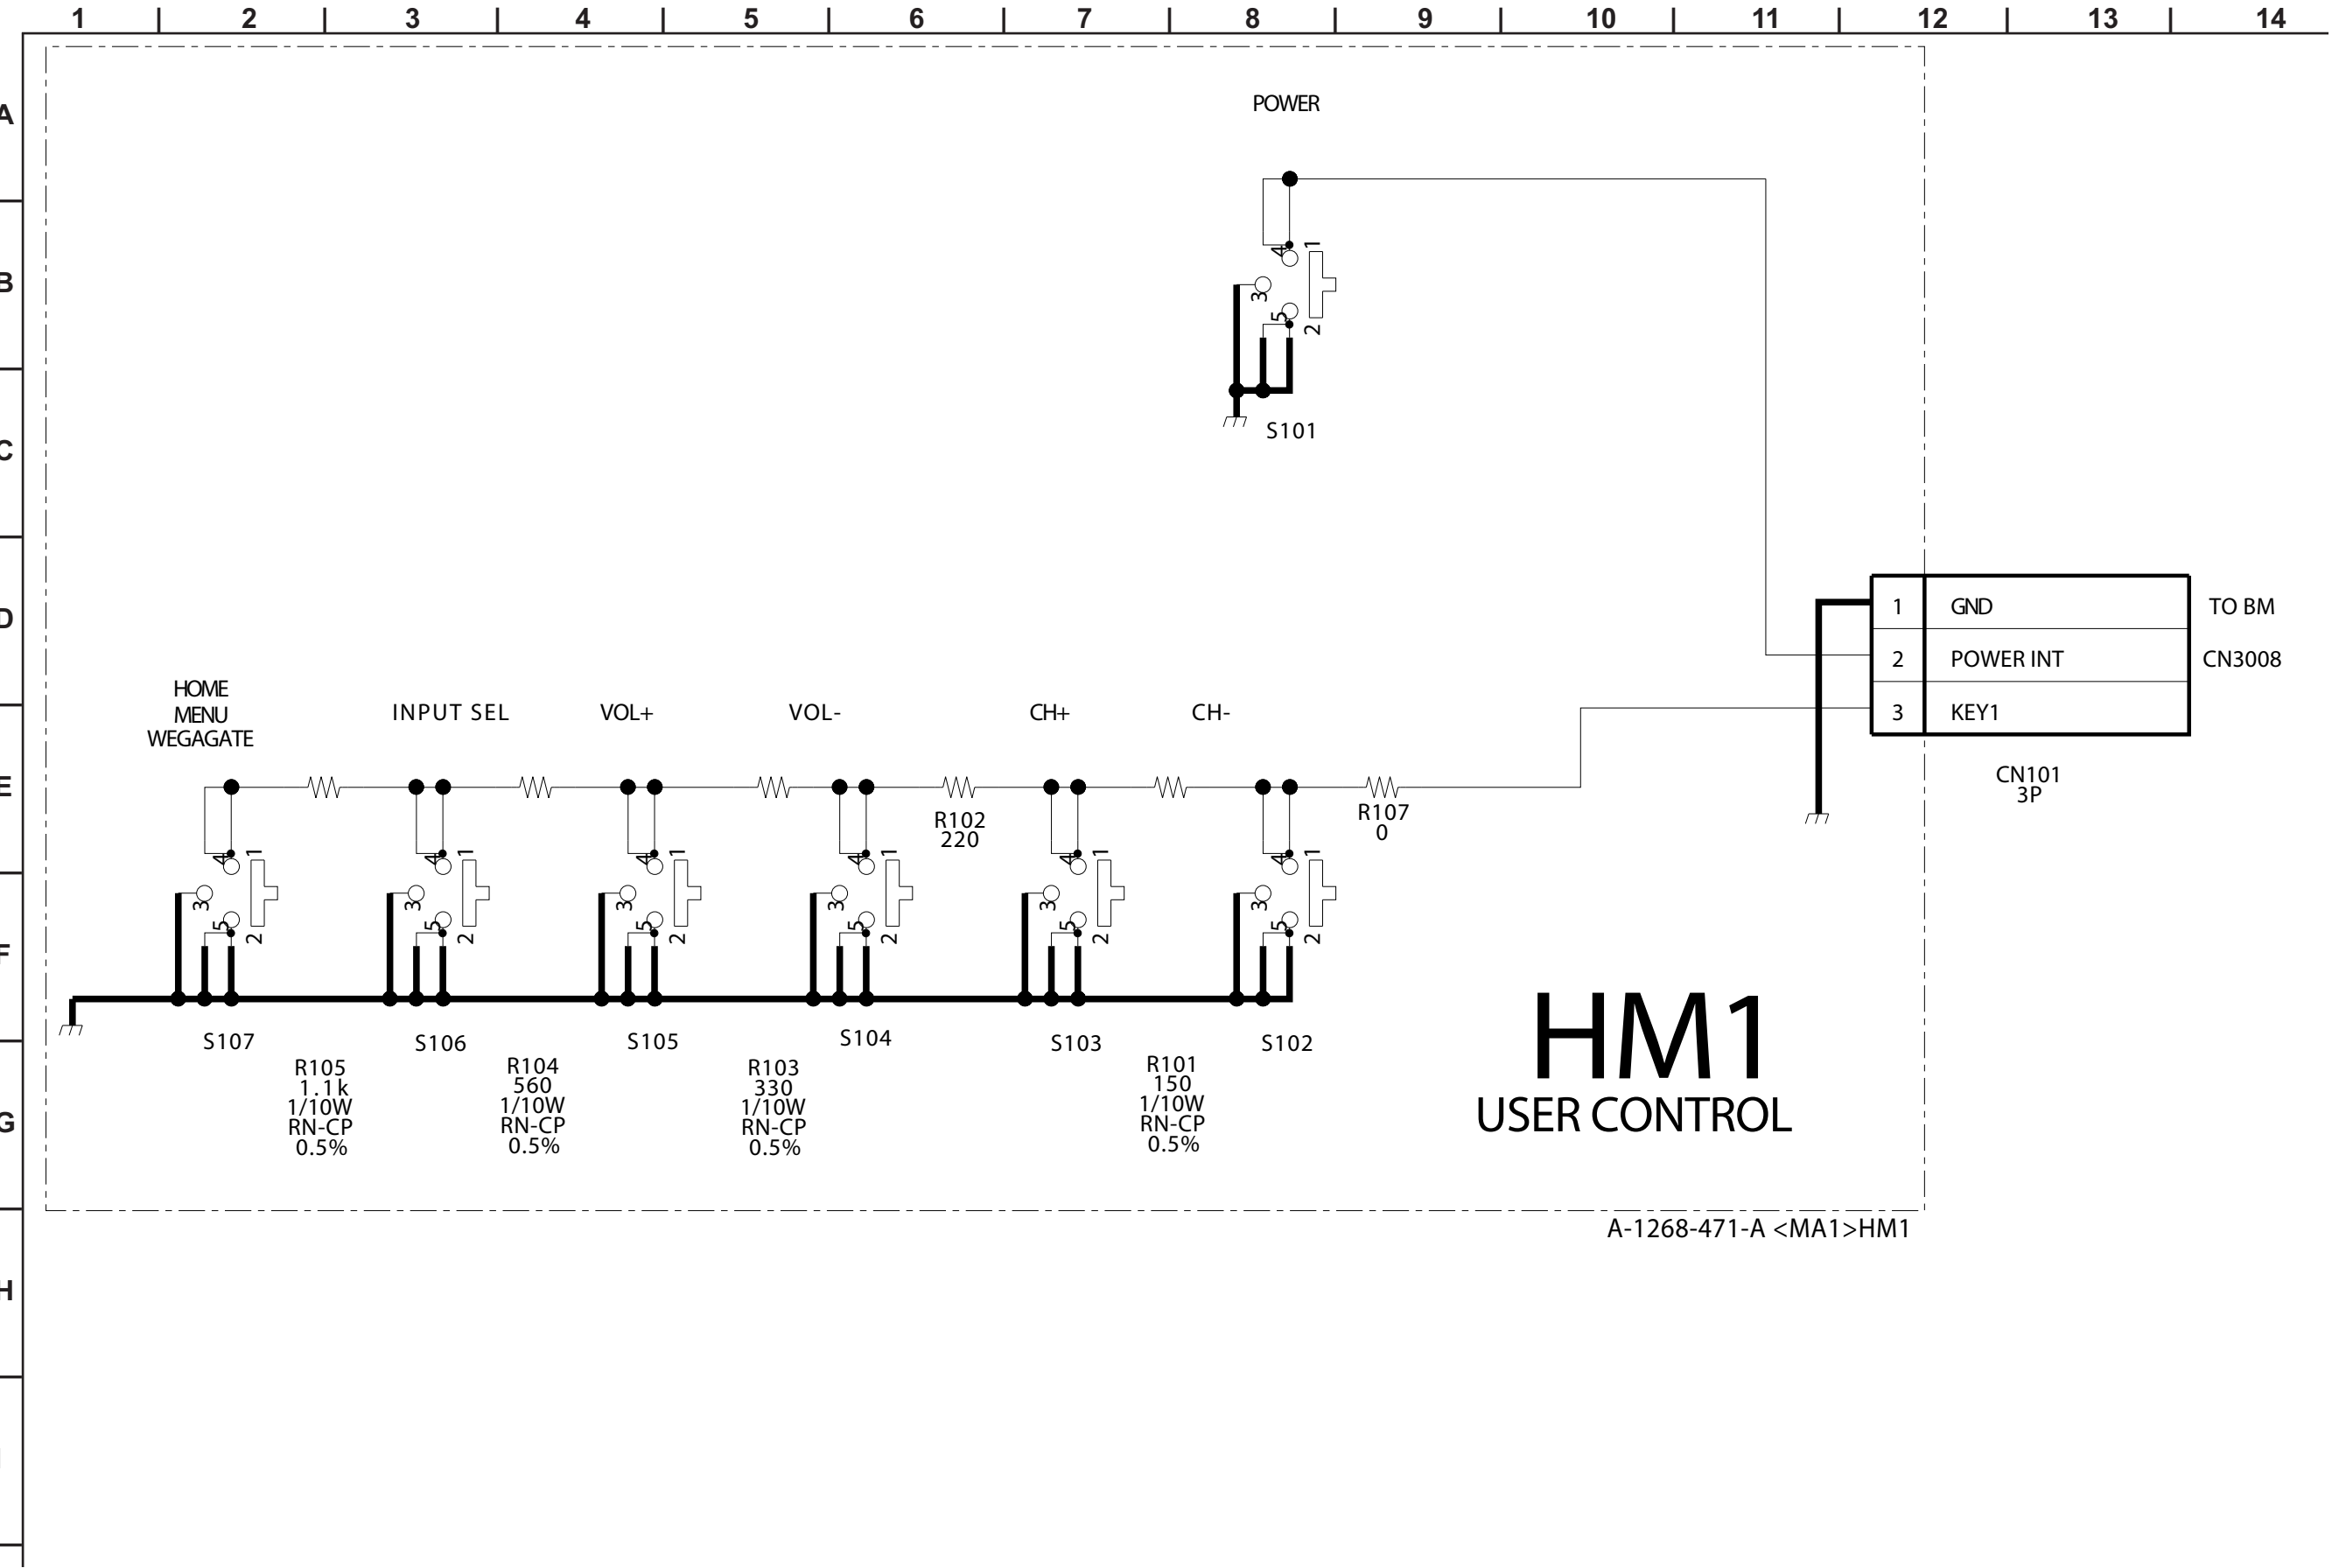


A-1268-471-A <MA1>HM1

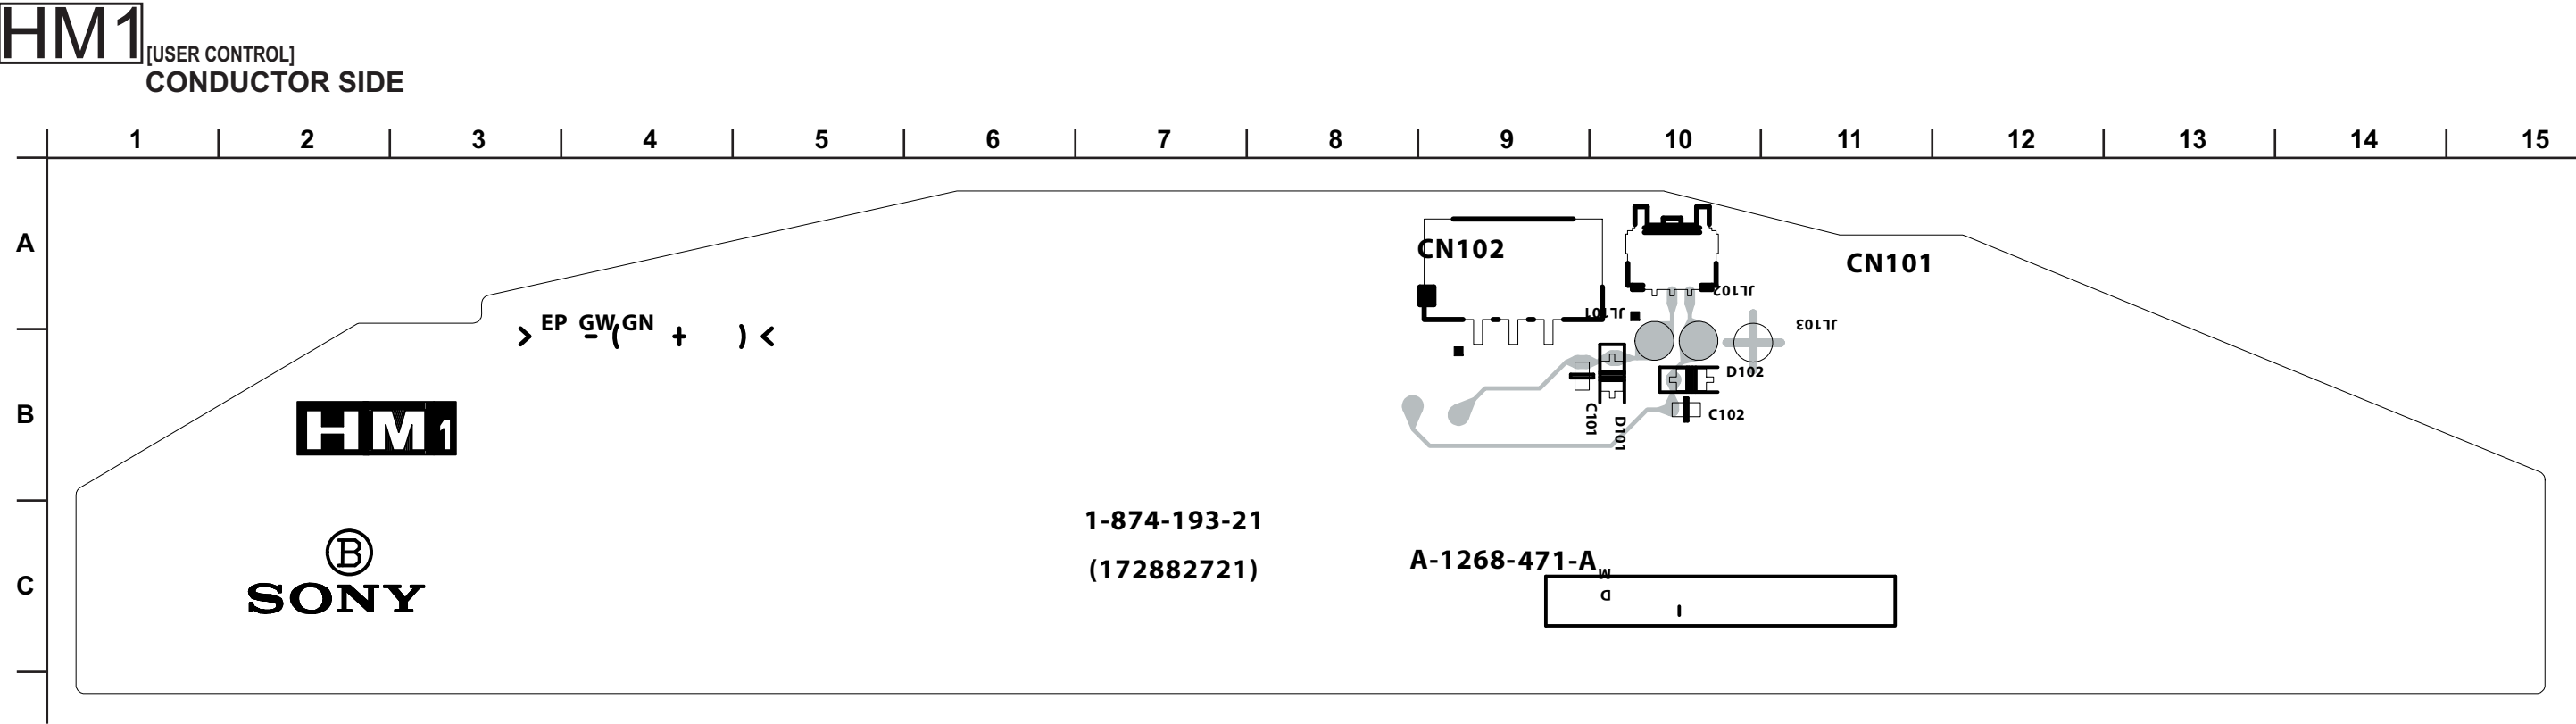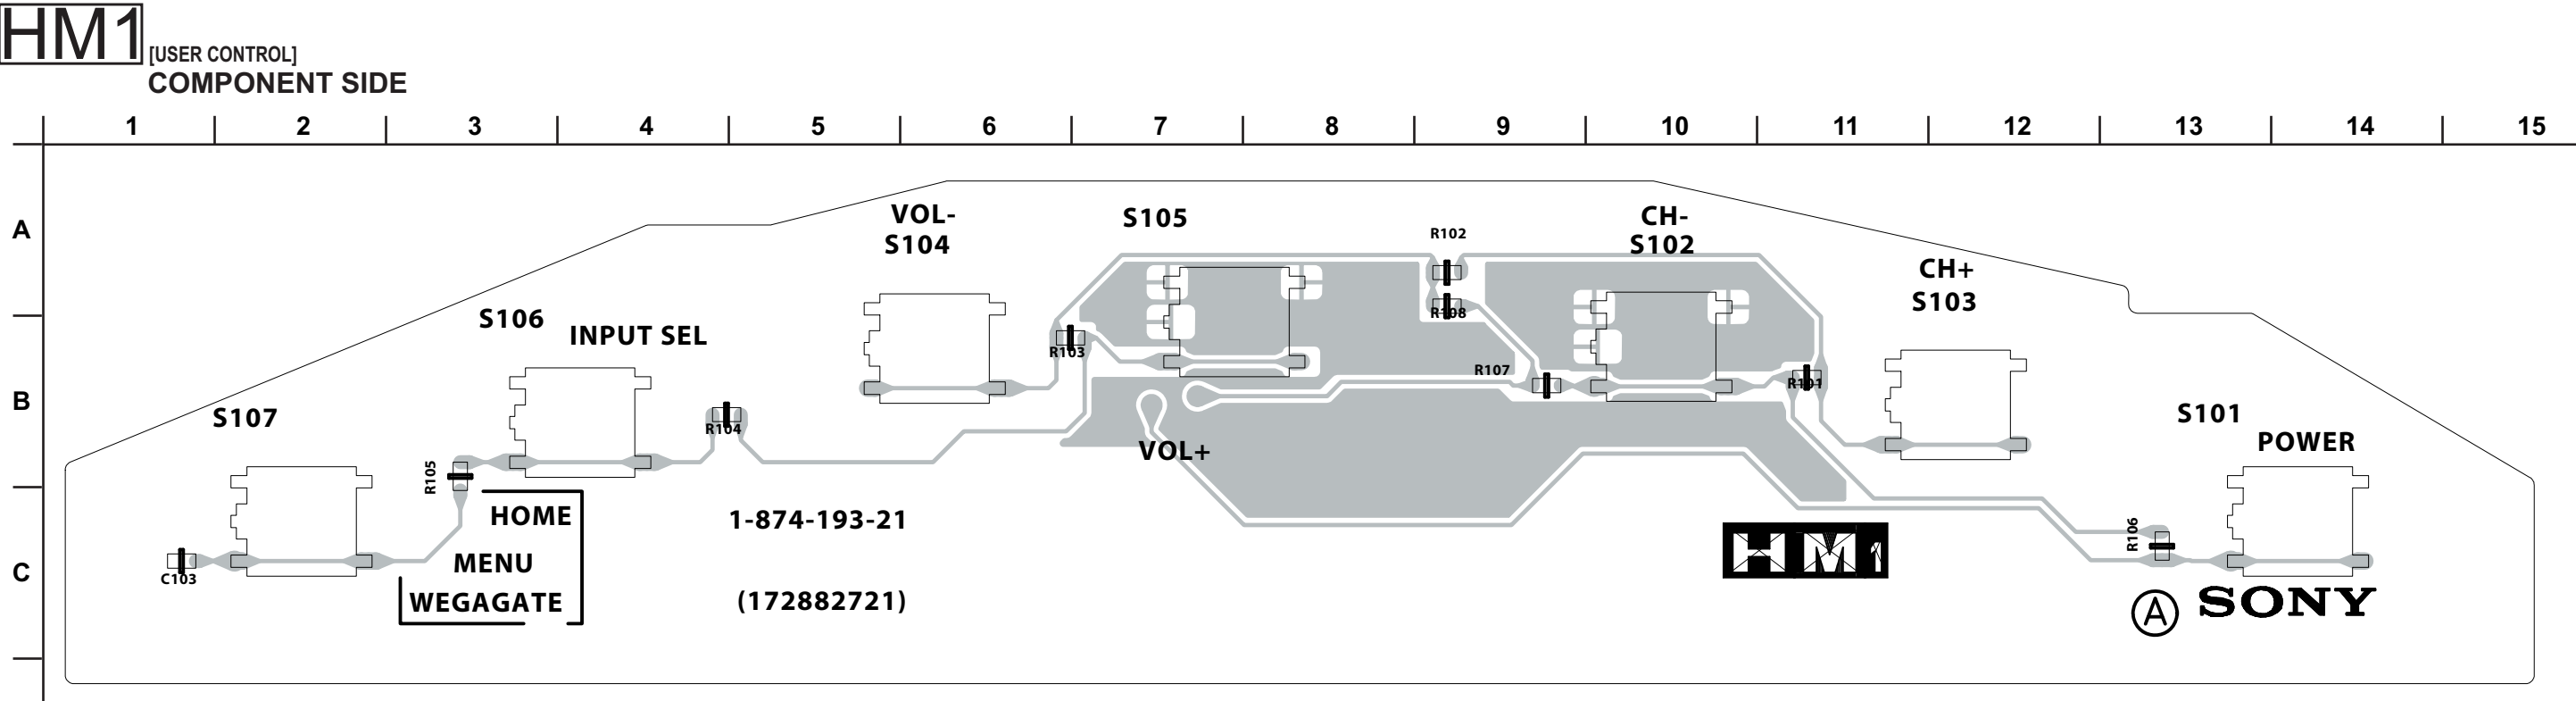

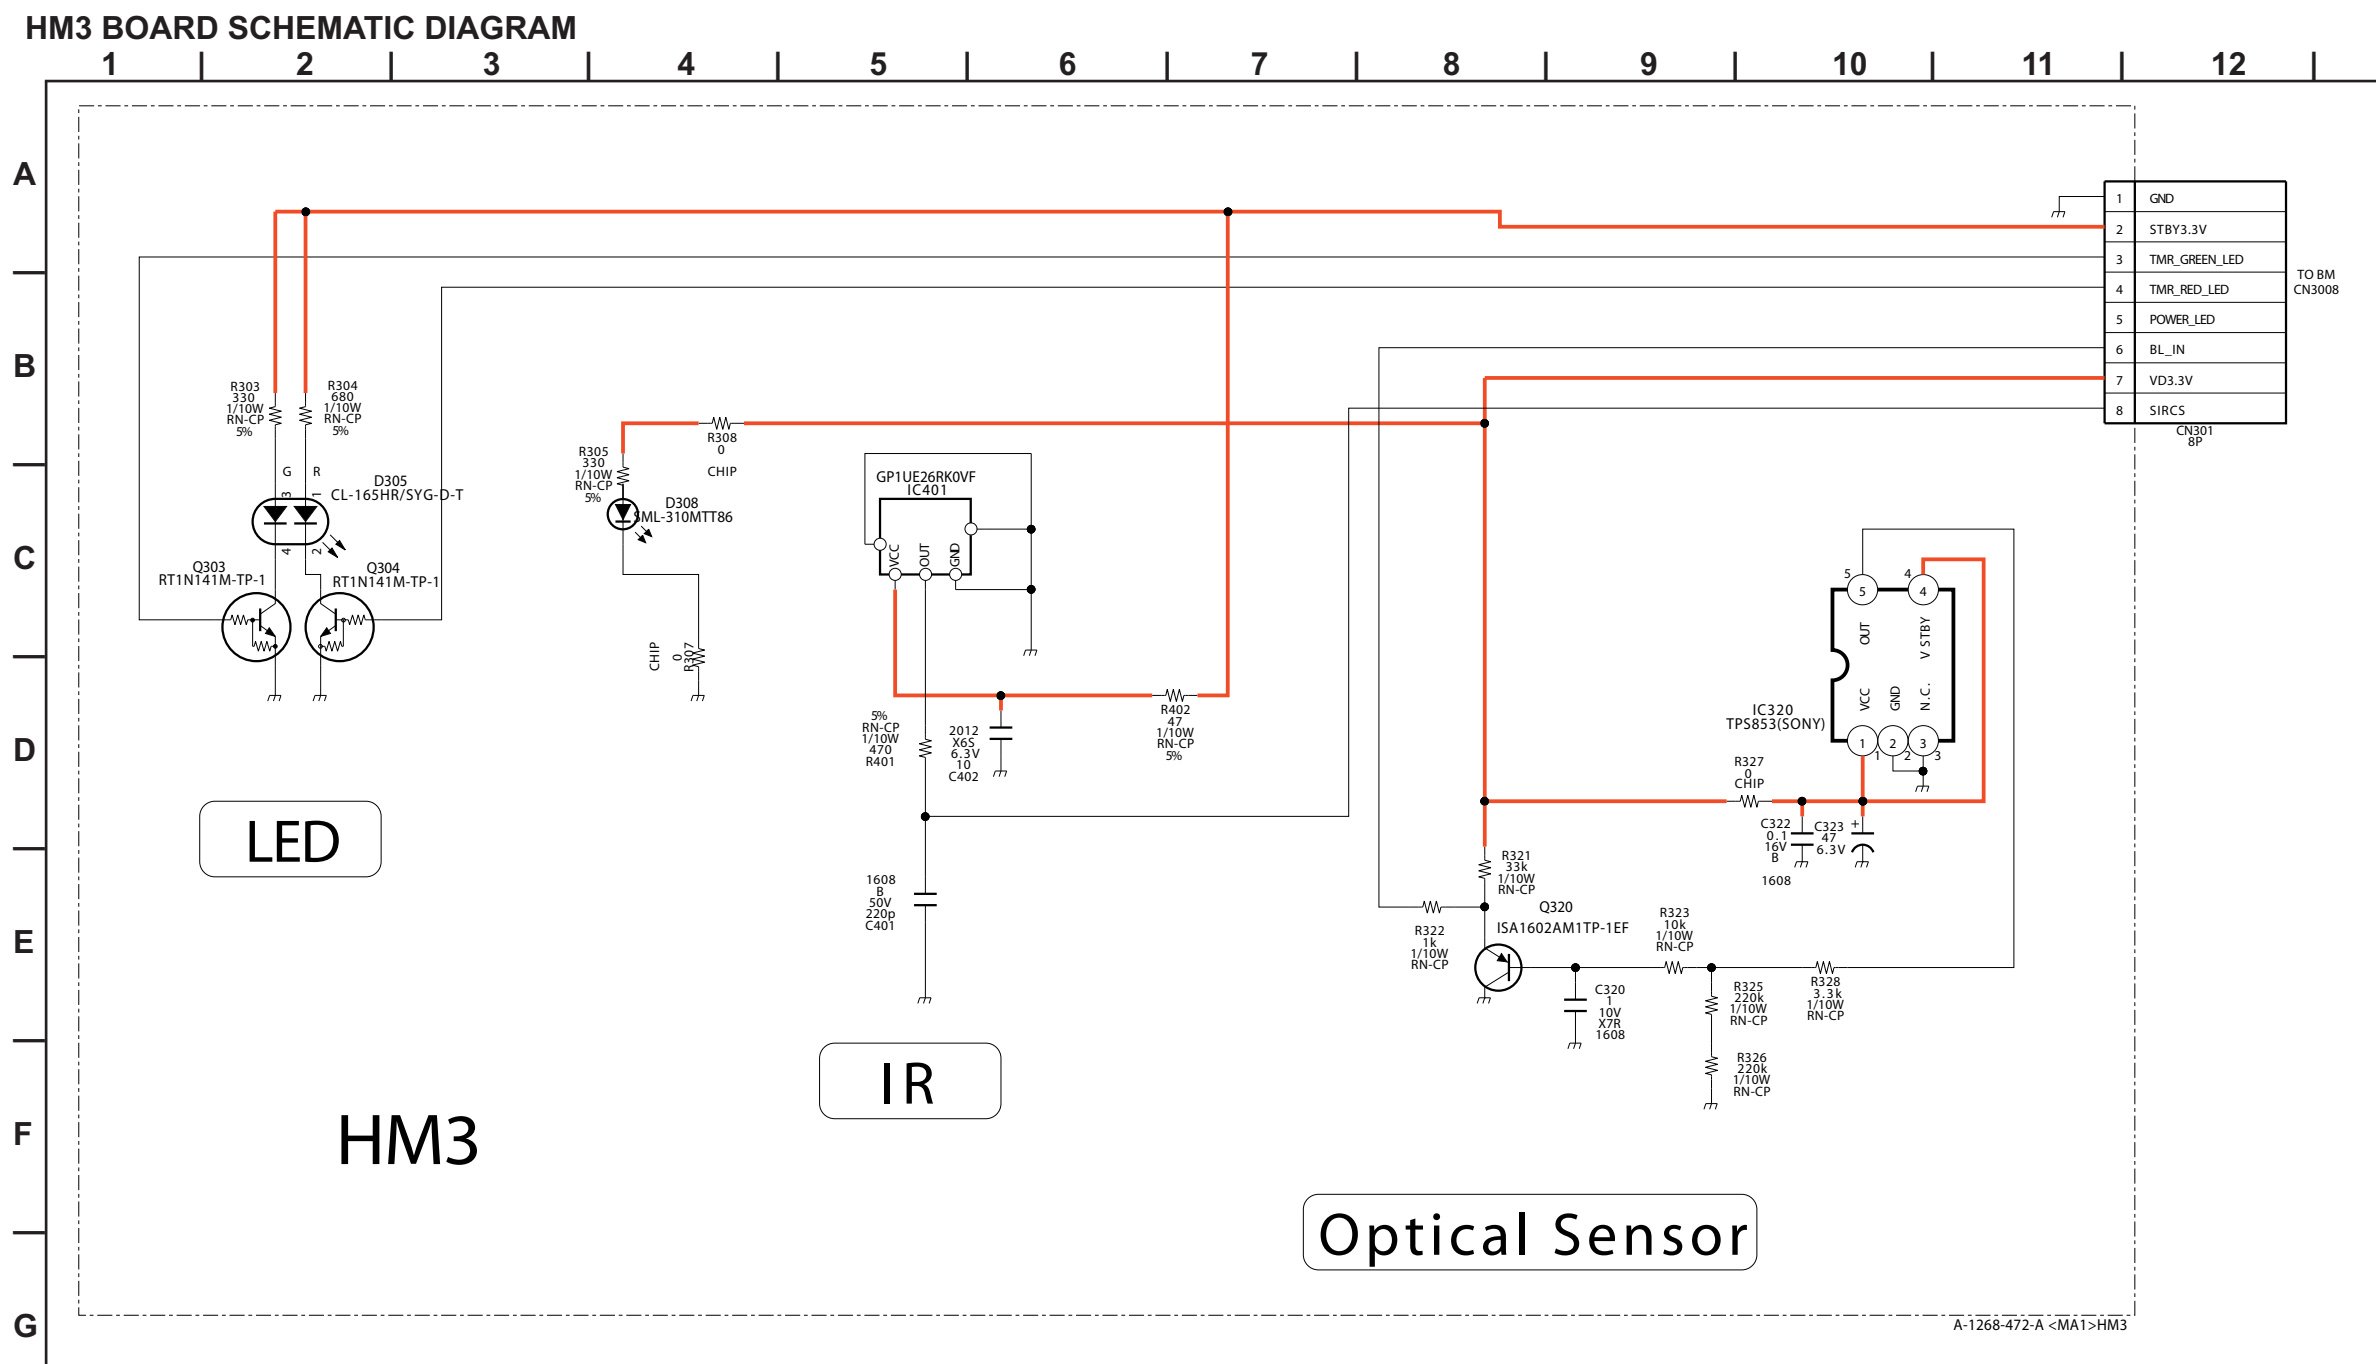


HM3

[OPTICAL SENSOR]
COMPONENT SIDE

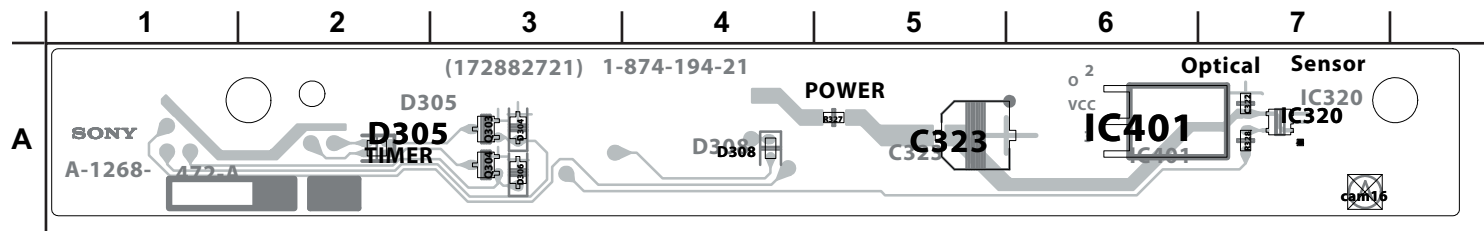


HM3

[OPTICAL SENSOR]
CONDUCTOR SIDE

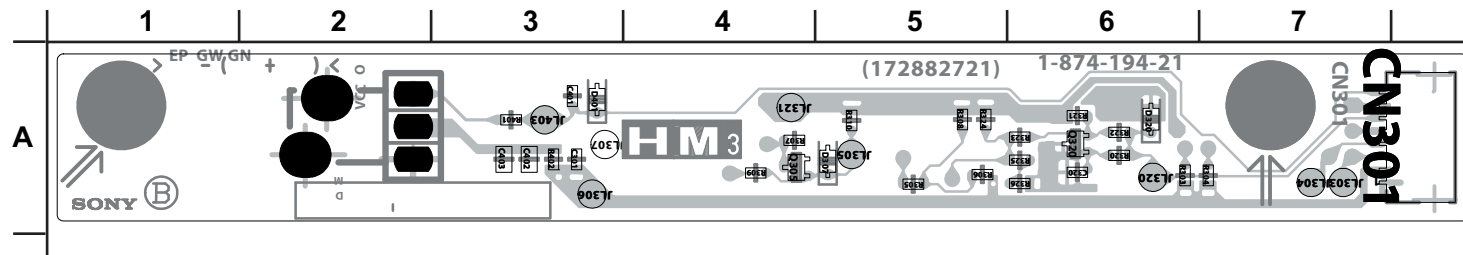


UM BOARD SCHEMATIC DIAGRAM

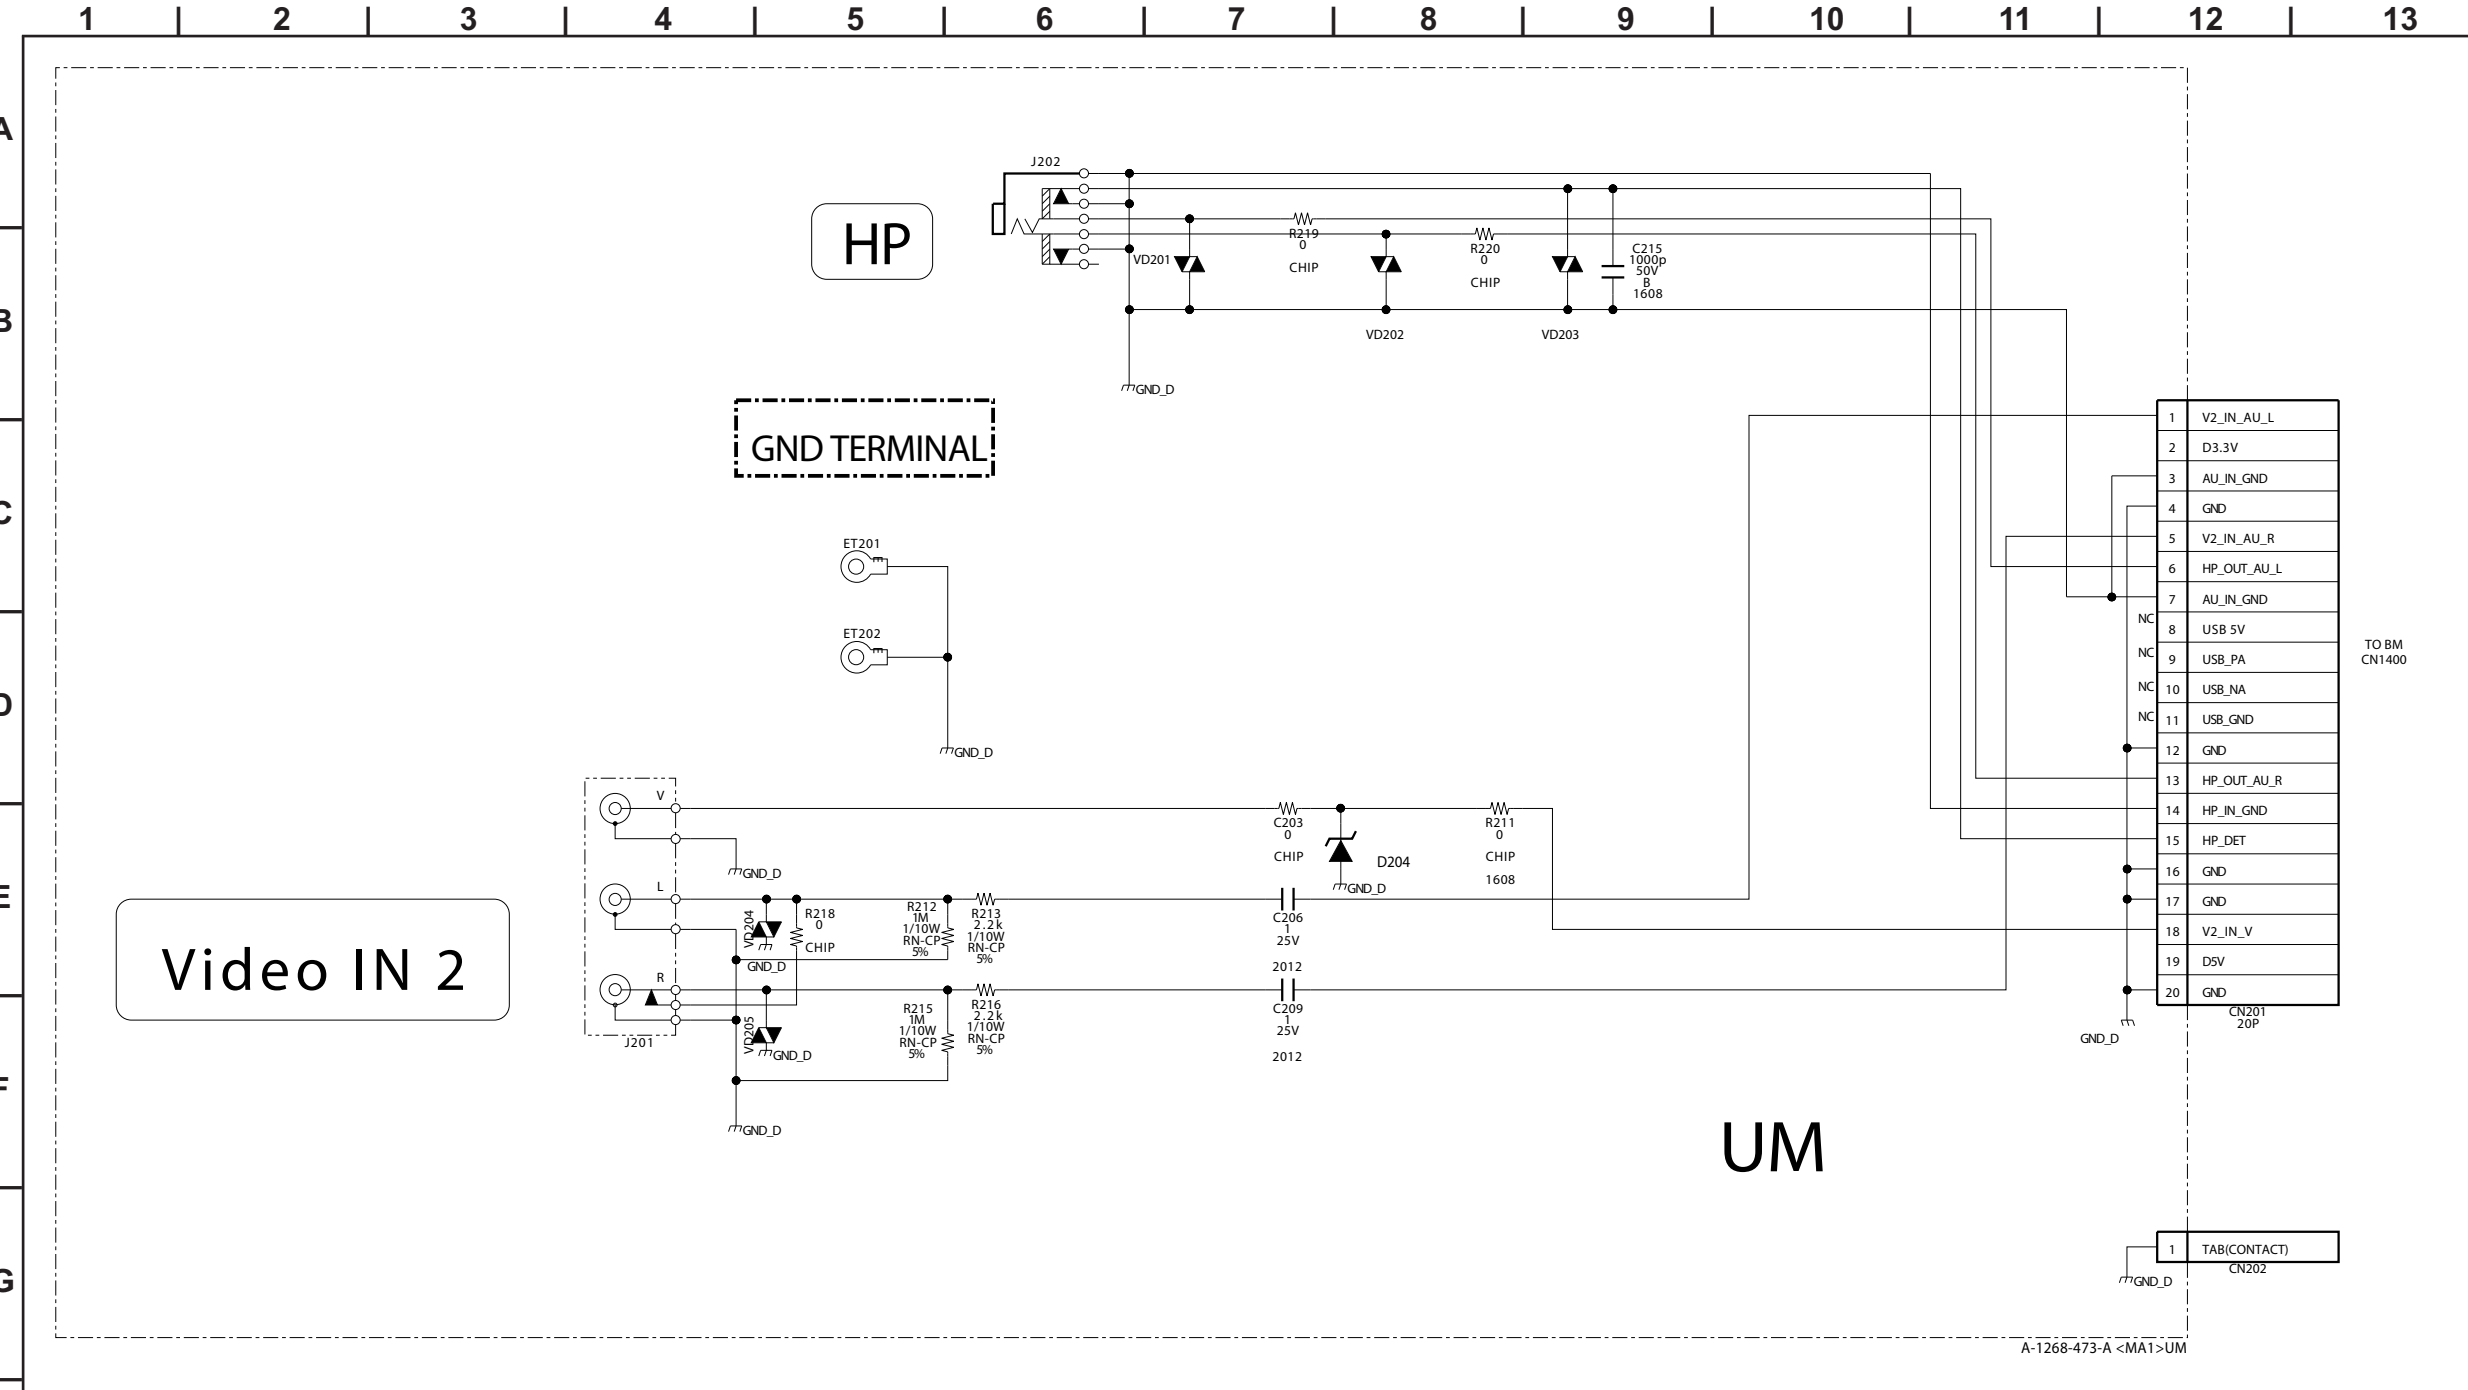


UM

[VIDEO 2 IN]

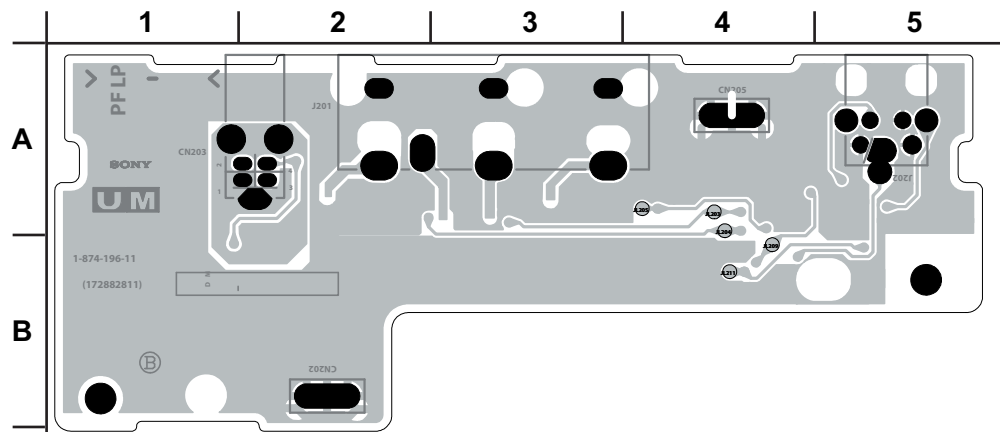COMPONENT SIDE**UM**


[VIDEO 2 IN]

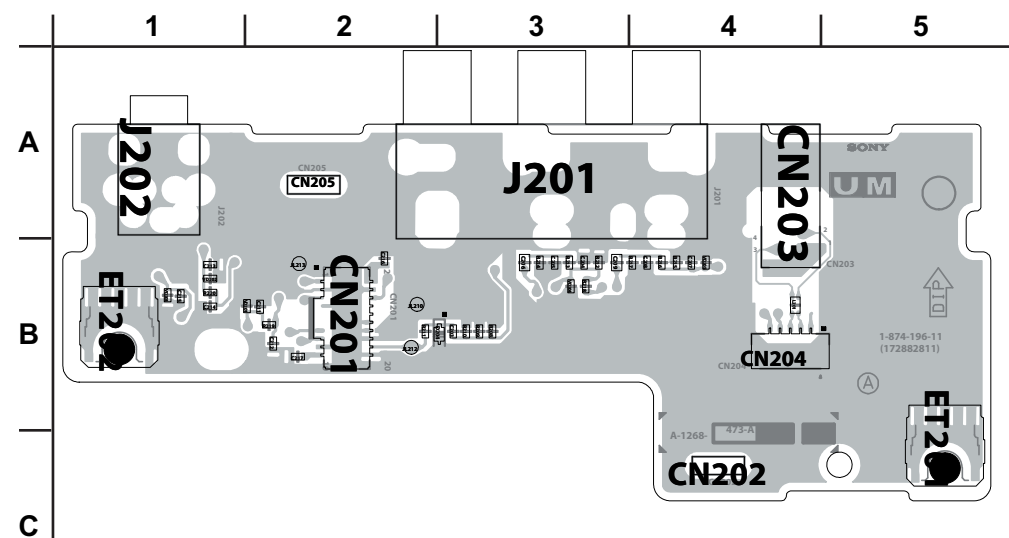CONDUCTOR SIDE


3-6. SEMICONDUCTORS

IC

BA00AST-V5




BA05FP-E2
BA09FP-E2
S-1111B33MC-NYSTFG
S-80928CNMC-G8YT2G
TC7SZ125FU(TE85R)




5Pin CHIP

BA18BC0FP-E2
BA25BC0FP-E2




BR24L02F-WE2
CS4335-KSZR
FA5501N-TE1
LM75CIMX-3
M24128-BWMN6T(A)
M24C02-WMN6T(B)
NJM2521V(TE2)
NJM3414AV(TE2)
RC4558DR
RC4558PWR




8Pin SOP

CD4052BNSR
FMS6418AM16X




16Pin SOP

CXA2188Q-T4




40Pin QFP

EM6A9320BI-5MG

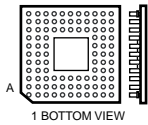


144Pin PGA

HD6433692A39FXV
HD64F3694FXV-DA4
TPA3004D2PHPR




48Pin QFP

HD64F2378-12681-01




144Pin QFP

L88M05T-FA-TL



M52347FP-TE




20Pin SOP


MM1431ATT




NJW1149AFH1

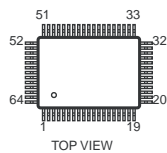


PQ1CY1032ZP




PQ1CZ41H2ZPH

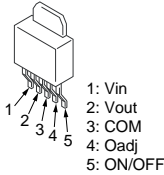

RV5C387A-E2-FB




SIH9993CTG100



100Pin QFP

SN74LV132APWR
SN74LVC14APWR




14Pin SOP

STR-A6169



8Pin DIP


TK11819MTL




6Pin CHIP

TRANSISTOR


DTC114EU
DTC114EUAFT106




DTC114EUA-T106
DTC115EUA-T106
DTC144WKA-T146
DTC314TK-T-146
DTC323TK
DTC323TKT146
MUN2211T1
MUN2212T1
MUN5213T1
PDTC114EK-115
UN2211
2PA1576R-115
2PC4081R-115
2PD601AR-115
2SA1037AK-T146-QR
2SA1037AK-T146-R
2SA1576A-T106-QR
2SA1774R
2SA1774TL-QR
2SC1623-L5L6
2SC2412K-T-146-QR
2SC4081-R
2SC4081T106R
2SC4617R
2SC4617TL-QR
2SD2114K
2SD601A-Q-TX




FDS6690A

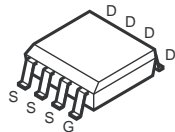


HN1B01FU-TE85R

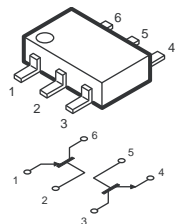


SSM6N15FU(TE85R)

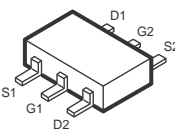


2SB1122-S
2SB1122-ST-TD-E
2SD1621-ST
2SD1621ST-TD-E

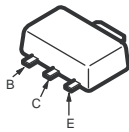

2SD2114KT146




2SK2158-T2B




DIODE


BAS316-115
EP05FA20
MM3Z10VT1
MM3Z11VT1
MM3Z13VT1
MM3Z18VST1
MM3Z22VT1
MM3Z2V4T1
MM3Z5V6ST1
MM3Z6V2ST1
MM3Z6V8ST1
MM3Z8V2ST1

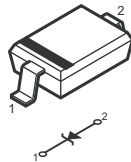

BAT54HT1
DTZ10B
HZU5.6GTRF
MA113-(TX)
MMDL914T1
RD5.6SB-T1
UDZ-TE-17-18B
UDZ-TE-17-6.2B
UDZ-TE-17-6.8B

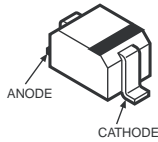


D10SBS4
D10SBS4F
D2SB60A-F04
D4SB60L

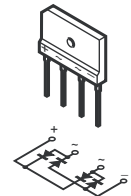


D10SC6M




D1NL40-TA2
D1NL40-TR2
ERA22-08




D1NS6
D1NS6-TR
ERA22-06AVRBT
UF4005PKG23
10ERB20-TB3
1N5404TU



EC10QS-04
EC10QS04-TE12L5

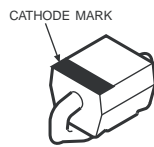


EC21QS03L-TE12L
P6SMBJ30A-5
PTZ-TE25-3.9B

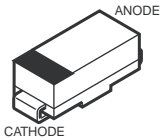


ERA22-08KFLB




FSF05A60




HN1D03FU-TE85L
HN1D03FU-TE85R

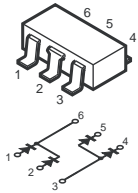


M1FM3

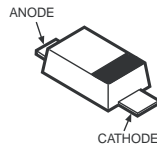


MA132WK
MA132WK-TX
MA151WK-TX
1SS184




UDZSTE-1710B

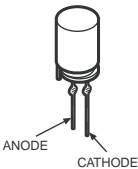


UMZ16NT106




1PS302



SML-020MVT-T86

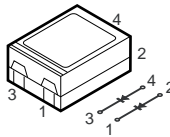

SML-310LTT86

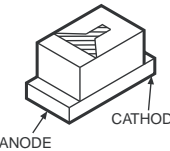



SECTION 4: EXPLODED VIEWS


Components not identified by a part number or description are not stocked because they are seldom required for routine service.

The component parts of an assembly are indicated by the reference numbers in the far right column of the parts list and within the dotted lines of the diagram.

* Items marked with an asterisk are not stocked since they are seldom required for routine service. Expect some delay when ordering these components.


NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.



NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a  mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

4-1. REAR COVER ASSEMBLY AND STAND ASSEMBLY

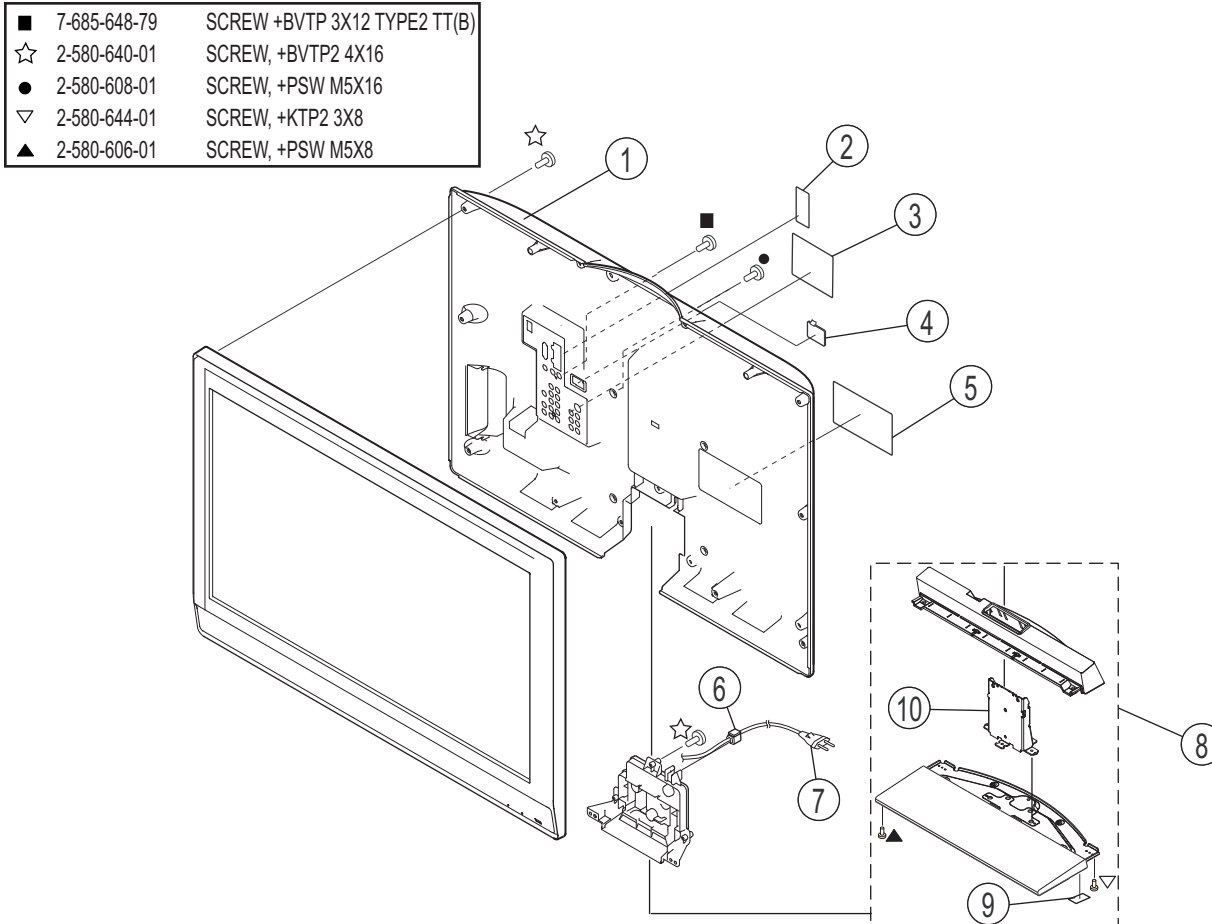(Check the [Sony Electronics Service Information](#) website for any additional service related issues for this model.)



REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
1	3-210-430-01	COVER, REAR (26) (KDL-26M3000/26ML130 ONLY)		* 5	3-270-543-01	LABEL, INFORMATION (KDL-32ML130 ONLY)	
1	3-210-439-01	COVER, REAR (32) (KDL-32M3000/32ML130 ONLY)		* 5	3-272-478-01	LABEL, INFORMATION (KDL-32M3000 LN/LS MODELS ONLY)	
2	3-217-797-01	LABEL, HDMI		6	4-022-115-00	HOLDER, AC CORD	
3	3-213-435-01	LABEL, REAR TERMINAL		 7	1-834-555-11	AC POWER CORD (WITH CONNECTOR) (KDL-26M3000/26ML130/32M3000/32ML130 US/CND MODELS ONLY)	
4	3-210-448-01	COVER, ECS		 7	1-834-554-11	AC POWER CORD WITH CONNECTOR (KDL-26M3000/32M3000 LN/LS MODELS ONLY)	
* 5	3-270-540-01	LABEL, INFORMATION (KDL-26M3000 US/CND MODEL ONLY)		8	A-1274-853-A	STAND ASSEMBLY (MA) (KDL-26M3000/32M3000 ONLY)	[9-10]
* 5	3-270-542-01	LABEL, INFORMATION (KDL-26ML130 ONLY)		8	A-1318-635-A	STAND ASSEMBLY (MA) (KDL-26ML130/32ML130 ONLY)	[9-10]
* 5	3-272-480-01	LABEL, INFORMATION (KDL-26M3000 LN/LS MODELS ONLY)		9	3-213-762-01	FOOT (15X30)	
* 5	3-213-436-01	LABEL, INFORMATION (KDL-32M3000 US/CND MODEL ONLY)		10	3-106-486-01	NECK (M)	

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.


NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a \triangle mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.


4-2. CHASSIS


(Check the [Sony Electronics Service Information](#) website for any additional service related issues for this model.)


■	7-685-648-79	SCREW +BVTP 3X12 TYPE2 TT(B)
★	2-580-629-01	SCREW, +BVST 3X8
\triangle	2-580-591-01	SCREW, +PSW M3X5
●	2-580-608-01	SCREW, +PSW M5X16
□	2-674-965-31	SCREW, +PSW 3SG
☆	4-635-966-01	SCREW (HEX)

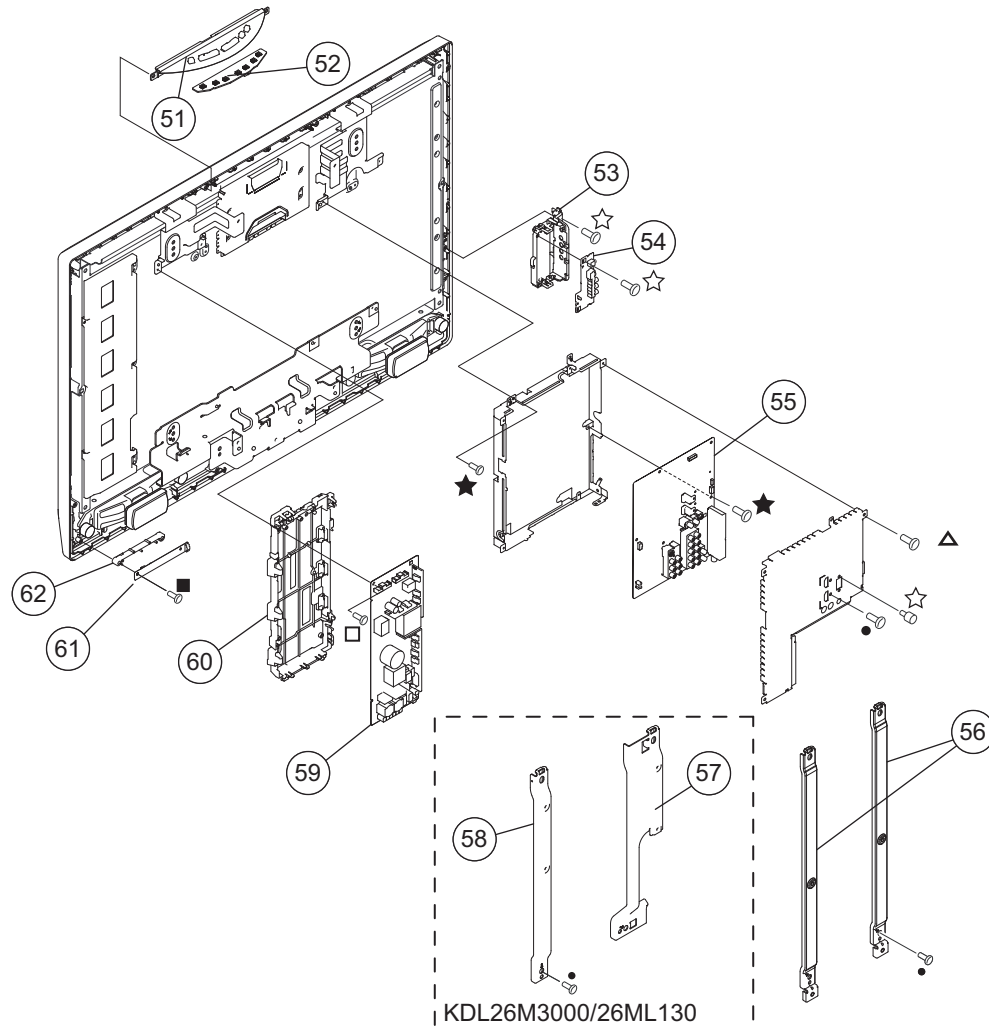

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
51	X-2186-624-1	BUTTON, MULTI ASSEMBLY		56	X-2177-549-1	VESA ARM(32) ASSEMBLY (KDL-32M3000/32ML130 ONLY)	
52	A-1268-471-A	HM1 BOARD, MOUNTED		57	X-2178-787-1	ARM ASSEMBLY, VESA (26L) (KDL-26M3000/26ML130 ONLY)	
53	3-268-323-11	HOLDER, SIDE JACK (S)		58	X-2178-788-1	ARM ASSEMBLY, VESA (26R) (KDL-26M3000/26ML130 ONLY)	
53	3-106-473-21	HOLDER, SIDE JACK(M)		59	A-1315-710-A	G1M BOARD, MOUNTED	
54	A-1268-473-A	UM BOARD, MOUNTED		* 60	3-106-471-11	BRACKET, G1	
\triangle 55	A-1376-787-A	BM BOARD, MOUNTED (KDL-26M3000/26ML130 ONLY)		61	A-1268-472-A	HM3 BOARD, MOUNTED	
\triangle 55	A-1376-788-A	BM BOARD, MOUNTED (KDL-32M3000/32ML130 ONLY)		62	3-210-445-01	GUIDE, LIGHT	


NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


NOTE: The components identified by a red outline and a  mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.


4-3. CONNECTORS


(Check the [Sony Electronics Service Information](#) website for any additional service related issues for this model.)

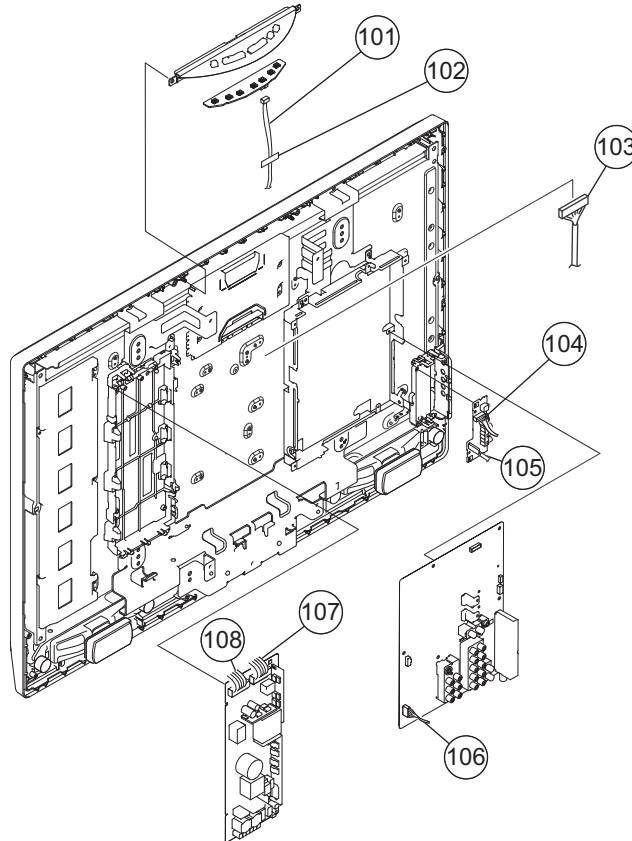

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
101	1-910-038-35	CONN ASSEMBLY, 11P MM CRIMP 550 (KDL-26M3000/26ML130 ONLY)		106	1-910-038-30	CONN ASSEMBLY, 4P SPEAKER FASTON (KDL-26M3000/26ML130 ONLY)	
101	1-910-038-28	CONN ASSEMBLY, 11P MM CRIMP 690 (KDL-32M3000/32ML130 ONLY)		106	1-910-038-07	FI CONNECTOR ASSEMBLY 30P (KDL-32M3000/32ML130 ONLY)	
102	2-688-062-01	TAPE (LCD)		107	1-910-038-29	CONN ASSEMBLY, 12P MM CRIMP 450	
103	1-834-383-11	LVDS CABLE		108	1-910-038-36	CONN ASSEMBLY, 14P MM CRIMP 300 (KDL-26M3000/26ML130 ONLY)	
104	1-910-038-33	CONN ASSEMBLY, 20P MM CRIMP 210		108	1-910-038-31	CONN ASSEMBLY, 14P MM CRIMP 420 (KDL-32M3000/32ML130 ONLY)	
105	1-910-038-32	WIRE ASSEMBLY, FASTON TERMINAL					

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.


NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

NOTE: The components identified by a red outline and a  mark contain confidential information. Specific instructions must be adhered to whenever these components are repaired and/or replaced. See Appendix A: Encryption Key Components in the back of this manual.

4-4. BEZEL ASSEMBLY, LCD PANEL AND SPEAKERS

(Check the [Sony Electronics Service Information](#) website for any additional service related issues for this model.)

- | | | |
|---|--------------|--|
| ☆ | 2-580-654-01 | SCREW, +PWTP2 4X16
(KDL-32M3000/32ML130 ONLY) |
| ● | 2-580-600-01 | SCREW, +PSW M4X8 |

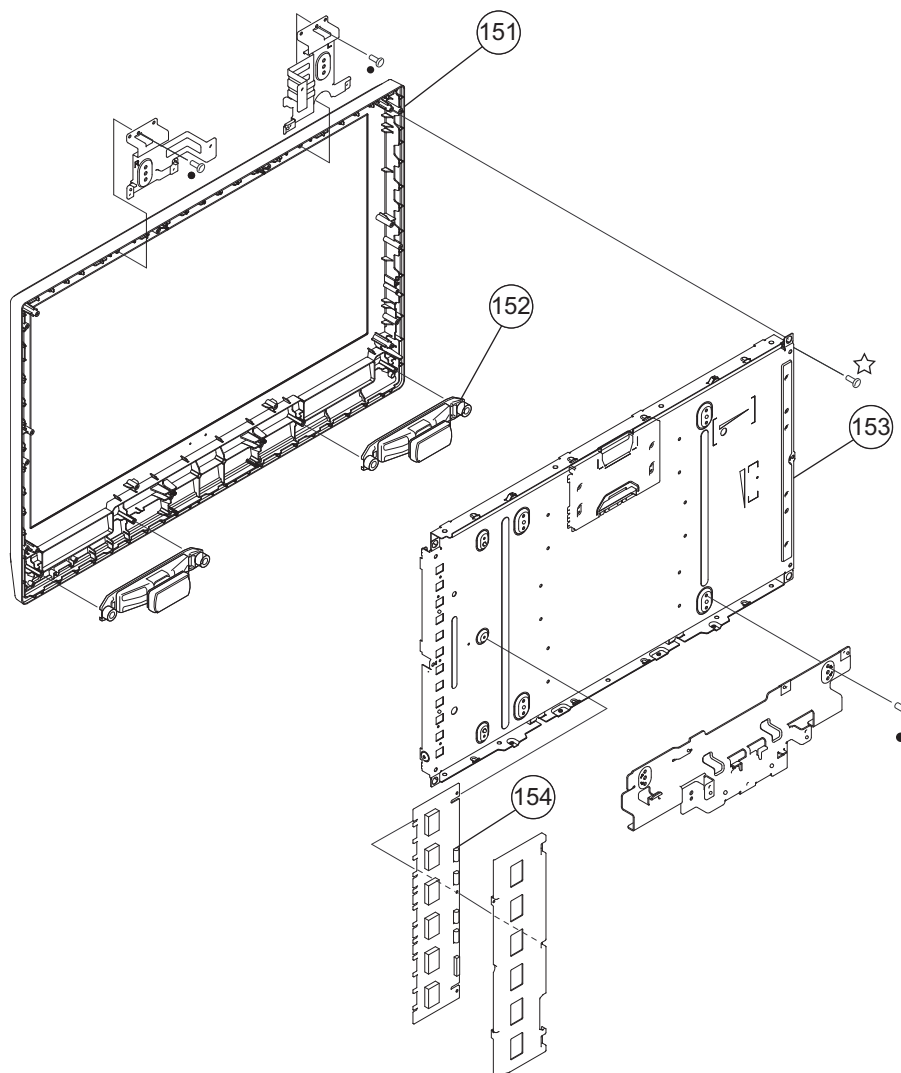

REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]	REF. NO.	PART NO.	DESCRIPTION	[ASSEMBLY INCLUDES]
151	X-2178-368-1	BEZEL ASSEMBLY (26) (KDL-26M3000 ONLY)		152	1-826-363-11	LOUDSPEAKER (4.2X15CM)	
151	X-2179-761-1	BEZEL ASSEMBLY (26) (KDL-26ML130 ONLY)		153	1-802-268-11	LCD PANEL 26INCH WXGA TFT (KDL-26M3000/26ML130 ONLY)	
151	X-2178-370-1	BEZEL ASSEMBLY (32) (KDL-32M3000 ONLY)		153	1-802-494-11	LCD PANEL (32 INCH WXGA TFT) (KDL-32M3000/32ML130 ONLY)	
151	X-2178-439-1	BEZEL ASSEMBLY (32) (KDL-32ML130 ONLY)		154	1-789-720-11	ETC-INVERTER MT BOARD (KDL-26M3000/26ML130 ONLY)	
				154	1-789-907-11	ETC-INVERTER MT BOARD (KDL-32M3000/32ML130 ONLY)	



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C2103	1-100-764-21	ELECT CHIP	4.7μF	20%	25V	C2159	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C2104	1-100-764-21	ELECT CHIP	4.7μF	20%	25V	C2160	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C2105	1-100-764-21	ELECT CHIP	4.7μF	20%	25V	C2161	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V
C2106	1-100-764-21	ELECT CHIP	4.7μF	20%	25V	C2168	1-162-979-11	CERAMIC CHIP	0.0027μF	10%	50V
C2107	1-126-396-11	ELECT CHIP	47μF	20%	16V	C2169	1-162-979-11	CERAMIC CHIP	0.0027μF	10%	50V
C2111	1-100-597-91	CERAMIC CHIP	0.1μF	10%	25V	C2170	1-162-979-11	CERAMIC CHIP	0.0027μF	10%	50V
C2112	1-100-764-21	ELECT CHIP	4.7μF	20%	25V	C2171	1-162-979-11	CERAMIC CHIP	0.0027μF	10%	50V
C2113	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C2172	1-124-779-00	ELECT CHIP	10μF	20%	16V
C2114	1-100-764-21	ELECT CHIP	4.7μF	20%	25V	C2173	1-124-779-00	ELECT CHIP	10μF	20%	16V
C2115	1-115-340-11	CERAMIC CHIP	0.22μF	10%	25V	C2174	1-135-366-11	ELECT CHIP	100μF	20%	16V
C2116	1-115-340-11	CERAMIC CHIP	0.22μF	10%	25V	C2175	1-124-779-00	ELECT CHIP	10μF	20%	16V
C2117	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2176	1-100-764-21	ELECT CHIP	4.7μF	20%	25V
C2118	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2177	1-100-764-21	ELECT CHIP	4.7μF	20%	25V
C2119	1-115-340-11	CERAMIC CHIP	0.22μF	10%	25V	C2178	1-100-597-91	CERAMIC CHIP	0.1μF	10%	25V
C2120	1-115-340-11	CERAMIC CHIP	0.22μF	10%	25V	C2179	1-100-597-91	CERAMIC CHIP	0.1μF	10%	25V
C2121	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C2180	1-100-597-91	CERAMIC CHIP	0.1μF	10%	25V
C2123	1-112-797-11	ELECT CHIP	470μF	20%	25V	C2181	1-124-779-00	ELECT CHIP	10μF	20%	16V
C2124	1-135-349-21	ELECT CHIP	22μF	20%	20V	C2182	1-124-779-00	ELECT CHIP	10μF	20%	16V
C2125	1-100-597-91	CERAMIC CHIP	0.1μF	10%	25V	C2183	1-124-779-00	ELECT CHIP	10μF	20%	16V
C2126	1-100-912-11	CERAMIC CHIP	1μF	10%	25V	C2185	1-126-396-11	ELECT CHIP	47μF	20%	16V
C2127	1-100-912-11	CERAMIC CHIP	1μF	10%	25V	C2186	1-126-396-11	ELECT CHIP	47μF	20%	16V
C2128	1-135-349-21	ELECT CHIP	22μF	20%	20V	C2195	1-100-597-91	CERAMIC CHIP	0.1μF	10%	25V
C2129	1-100-597-91	CERAMIC CHIP	0.1μF	10%	25V	C2196	1-100-764-21	ELECT CHIP	4.7μF	20%	25V
C2130	1-100-597-91	CERAMIC CHIP	0.1μF	10%	25V	C2197	1-100-764-21	ELECT CHIP	4.7μF	20%	25V
C2131	1-126-396-11	ELECT CHIP	47μF	20%	16V	C2198	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2132	1-115-340-11	CERAMIC CHIP	0.22μF	10%	25V	C2199	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V
C2133	1-115-340-11	CERAMIC CHIP	0.22μF	10%	25V	C2200	1-127-573-11	CERAMIC CHIP	1μF	10%	16V
C2134	1-125-889-11	CERAMIC CHIP	2.2μF	10%	10V	C2201	1-127-573-11	CERAMIC CHIP	1μF	10%	16V
C2135	1-125-889-11	CERAMIC CHIP	2.2μF	10%	10V	C2204	1-100-764-21	ELECT CHIP	4.7μF	20%	25V
C2136	1-115-340-11	CERAMIC CHIP	0.22μF	10%	25V	C2205	1-100-764-21	ELECT CHIP	4.7μF	20%	25V
C2137	1-115-340-11	CERAMIC CHIP	0.22μF	10%	25V	C2206	1-100-764-21	ELECT CHIP	4.7μF	20%	25V
C2138	1-115-340-11	CERAMIC CHIP	0.22μF	10%	25V	C2207	1-100-764-21	ELECT CHIP	4.7μF	20%	25V
C2139	1-115-340-11	CERAMIC CHIP	0.22μF	10%	25V	C2208	1-164-938-11	CERAMIC CHIP	0.0015μF	10%	50V
C2140	1-125-889-11	CERAMIC CHIP	2.2μF	10%	10V	C2209	1-164-938-11	CERAMIC CHIP	0.0015μF	10%	50V
C2141	1-125-889-11	CERAMIC CHIP	2.2μF	10%	10V	C2210	1-164-938-11	CERAMIC CHIP	0.0015μF	10%	50V
C2142	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C2211	1-164-938-11	CERAMIC CHIP	0.0015μF	10%	50V
C2143	1-125-889-11	CERAMIC CHIP	2.2μF	10%	10V	C2212	1-164-938-11	CERAMIC CHIP	0.0015μF	10%	50V
C2144	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C2213	1-164-938-11	CERAMIC CHIP	0.0015μF	10%	50V
C2145	1-100-591-91	CERAMIC CHIP	1μF	10%	25V	C2214	1-164-938-11	CERAMIC CHIP	0.0015μF	10%	50V
C2146	1-100-591-91	CERAMIC CHIP	1μF	10%	25V	C2215	1-164-938-11	CERAMIC CHIP	0.0015μF	10%	50V
C2149	1-126-396-11	ELECT CHIP	47μF	20%	16V	C2216	1-100-756-91	CERAMIC CHIP	0.047μF		50V
C2150	1-126-396-11	ELECT CHIP	47μF	20%	16V	C2217	1-125-889-11	CERAMIC CHIP	2.2μF	10%	10V
C2156	1-100-597-91	CERAMIC CHIP	0.1μF	10%	25V	C2218	1-125-889-11	CERAMIC CHIP	2.2μF	10%	10V
C2157	1-100-597-91	CERAMIC CHIP	0.1μF	10%	25V	C2221	1-125-889-11	CERAMIC CHIP	2.2μF	10%	10V
C2158	1-100-597-91	CERAMIC CHIP	0.1μF	10%	25V	C2223	1-125-889-11	CERAMIC CHIP	2.2μF	10%	10V



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C3005	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V	C4509	1-100-899-81	CERAMIC CHIP	0.082μF	10%	10V
C3006	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V	C4510	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3007	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V	C4511	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3010	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C4512	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3011	1-126-206-11	ELECT CHIP	100μF	20%	6.3V	C4513	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3019	1-162-912-11	CERAMIC CHIP	7pF	0.50pF	50V	C4514	1-100-765-21	ELECT CHIP	10μF	20%	16V
C3057	1-100-907-11	CERAMIC CHIP	0.1μF	10%	10V	C4515	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3062	1-112-066-11	CERAMIC CHIP	10μF	10%	10V	C4516	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3063	1-100-907-11	CERAMIC CHIP	0.1μF	10%	10V	C4517	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3066	1-100-907-11	CERAMIC CHIP	0.1μF	10%	10V	C4518	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3070	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V	C4519	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3072	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C4520	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3076	1-165-908-11	CERAMIC CHIP	1μF	10%	10V	C4521	1-100-765-21	ELECT CHIP	10μF	20%	16V
C3081	1-112-066-11	CERAMIC CHIP	10μF	10%	10V	C4522	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3083	1-100-907-11	CERAMIC CHIP	0.1μF	10%	10V	C4523	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3084	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C4524	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3110	1-125-777-11	CERAMIC CHIP	0.1μF	10%	10V	C4525	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3112	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C4526	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3113	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C4527	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3114	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	C4528	1-100-765-21	ELECT CHIP	10μF	20%	16V
C3115	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C4529	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3116	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C4530	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3118	1-126-394-11	ELECT CHIP	10μF	20%	16V	C4531	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C3119	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C4532	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C4001	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C4533	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C4030	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	C4534	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C4033	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C4538	1-124-779-00	ELECT CHIP	10μF	20%	16V
C4034	1-112-046-11	CERAMIC CHIP	4.7μF	10%	6.3V	C4539	1-124-779-00	ELECT CHIP	10μF	20%	16V
C4035	1-127-573-11	CERAMIC CHIP	1μF	10%	16V	C4540	1-124-779-00	ELECT CHIP	10μF	20%	16V
C4040	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C4544	1-126-210-21	ELECT CHIP	220μF	20%	4V
C4041	1-164-935-11	CERAMIC CHIP	470pF	10%	50V	C4545	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C4042	1-164-935-11	CERAMIC CHIP	470pF	10%	50V	C4546	1-100-588-21	ELECT CHIP	1000μF	20%	6.3V
C4043	1-164-935-11	CERAMIC CHIP	470pF	10%	50V	C4547	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C4044	1-164-935-11	CERAMIC CHIP	470pF	10%	50V	C4548	1-100-588-21	ELECT CHIP	1000μF	20%	6.3V
C4045	1-164-935-11	CERAMIC CHIP	470pF	10%	50V	C4549	1-128-396-11	ELECT CHIP	470μF	20%	10V
C4046	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C5002	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C4049	1-100-912-11	CERAMIC CHIP	1μF	10%	25V	C5005	1-162-927-11	CERAMIC CHIP	100pF	5%	50V
C4501	1-100-756-91	CERAMIC CHIP	0.047μF		50V	C5006	1-162-927-11	CERAMIC CHIP	100pF	5%	50V
C4502	1-100-756-91	CERAMIC CHIP	0.047μF		50V	C5008	1-165-908-11	CERAMIC CHIP	1μF	10%	10V
C4503	1-100-756-91	CERAMIC CHIP	0.047μF		50V	C5009	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V
C4504	1-100-756-91	CERAMIC CHIP	0.047μF		50V	C5502	1-125-777-11	CERAMIC CHIP	0.1μF	10%	10V
C4505	1-100-756-91	CERAMIC CHIP	0.047μF		50V	C5505	1-125-777-11	CERAMIC CHIP	0.1μF	10%	10V
C4506	1-100-756-91	CERAMIC CHIP	0.047μF		50V	C5509	1-100-567-81	CERAMIC CHIP	0.01μF	10%	25V
C4507	1-164-937-11	CERAMIC CHIP	0.001μF	10%	50V	C5510	1-100-567-81	CERAMIC CHIP	0.01μF	10%	25V
C4508	1-164-174-11	CERAMIC CHIP	0.0082μF	10%	25V	C5528	1-125-777-11	CERAMIC CHIP	0.1μF	10%	10V



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C5529	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C7033	1-127-988-81	CERAMIC CHIP	0.015μF	10%	16V
C5530	1-112-066-11	CERAMIC CHIP	10μF	10%	10V	C7034	1-164-858-11	CERAMIC CHIP	22pF	5%	50V
C5531	1-125-777-11	CERAMIC CHIP	0.1μF	10%	10V	C7035	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5623	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V	C7036	1-164-937-11	CERAMIC CHIP	0.001μF	10%	50V
C5624	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V	C7037	1-165-887-91	CERAMIC CHIP	0.22μF	10%	6.3V
C5625	1-125-777-11	CERAMIC CHIP	0.1μF	10%	10V	C7038	1-127-988-81	CERAMIC CHIP	0.015μF	10%	16V
C5626	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C7039	1-127-988-81	CERAMIC CHIP	0.015μF	10%	16V
C5627	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C7040	1-164-858-11	CERAMIC CHIP	22pF	5%	50V
C5628	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C7041	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C5629	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C7042	1-164-937-11	CERAMIC CHIP	0.001μF	10%	50V
C5630	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C7043	1-165-887-91	CERAMIC CHIP	0.22μF	10%	6.3V
C5631	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C7044	1-127-988-81	CERAMIC CHIP	0.015μF	10%	16V
C5632	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C7045	1-164-937-11	CERAMIC CHIP	0.001μF	10%	50V
C5633	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C7046	1-164-937-11	CERAMIC CHIP	0.001μF	10%	50V
C5634	1-112-066-11	CERAMIC CHIP	10μF	10%	10V	C7047	1-164-882-11	CERAMIC CHIP	220pF	5%	16V
C5635	1-100-906-11	CERAMIC CHIP	0.01μF	10%	16V	C7048	1-164-882-11	CERAMIC CHIP	220pF	5%	16V
C5636	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C7049	1-164-882-11	CERAMIC CHIP	220pF	5%	16V
C5637	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C7050	1-164-882-11	CERAMIC CHIP	220pF	5%	16V
C7000	1-135-960-91	CERAMIC CHIP	10μF	10%	25V	C7051	1-135-960-91	CERAMIC CHIP	10μF	10%	25V
C7001	1-135-960-91	CERAMIC CHIP	10μF	10%	25V	C7052	1-135-960-91	CERAMIC CHIP	10μF	10%	25V
C7002	1-117-681-11	ELECT CHIP	100μF	20%	16V	C7053	1-165-908-11	CERAMIC CHIP	1μF	10%	10V
C7003	1-127-573-11	CERAMIC CHIP	1μF	10%	16V	C7054	1-165-908-11	CERAMIC CHIP	1μF	10%	10V
C7004	1-128-536-11	ELECT CHIP	100μF	20%	25V	C7055	1-165-908-11	CERAMIC CHIP	1μF	10%	10V
C7005	1-100-597-91	CERAMIC CHIP	0.1μF	10%	25V	C7056	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C7006	1-112-794-11	ELECT CHIP	470μF	20%	16V	C7057	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C7007	1-135-960-91	CERAMIC CHIP	10μF	10%	25V	C7058	1-165-908-11	CERAMIC CHIP	1μF	10%	10V
C7008	1-100-911-11	CERAMIC CHIP	4.7μF	10%	25V	C7059	1-165-908-11	CERAMIC CHIP	1μF	10%	10V
C7009	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C7060	1-165-908-11	CERAMIC CHIP	1μF	10%	10V
C7010	1-127-820-11	CERAMIC CHIP	4.7μF	10%	16V	C7061	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C7011	1-112-789-11	ELECT CHIP	1000μF	20%	6.3V	C7062	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C7012	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	C7063	1-165-908-11	CERAMIC CHIP	1μF	10%	10V
C7015	1-100-588-21	ELECT CHIP	1000μF	20%	6.3V	C7064	1-165-908-11	CERAMIC CHIP	1μF	10%	10V
C7019	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	C7065	1-100-912-11	CERAMIC CHIP	1μF	10%	25V
C7020	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	C7066	1-100-912-11	CERAMIC CHIP	1μF	10%	25V
C7021	1-126-210-21	ELECT CHIP	220μF	20%	4V	C7067	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C7023	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7068	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C7024	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	C7073	1-135-960-91	CERAMIC CHIP	10μF	10%	25V
C7025	1-165-887-91	CERAMIC CHIP	0.22μF	10%	6.3V	C7074	1-135-960-91	CERAMIC CHIP	10μF	10%	25V
C7026	1-164-937-11	CERAMIC CHIP	0.001μF	10%	50V	C7075	1-135-960-91	CERAMIC CHIP	10μF	10%	25V
C7027	1-164-862-11	CERAMIC CHIP	33pF	5%	50V	C7076	1-135-960-91	CERAMIC CHIP	10μF	10%	25V
C7028	1-164-862-11	CERAMIC CHIP	33pF	5%	50V	C7077	1-125-837-91	CERAMIC CHIP	1μF	10%	6.3V
C7029	1-164-937-11	CERAMIC CHIP	0.001μF	10%	50V	C7078	1-165-875-11	CERAMIC CHIP	10μF	10%	10V
C7030	1-164-937-11	CERAMIC CHIP	0.001μF	10%	50V	C7079	1-165-875-11	CERAMIC CHIP	10μF	10%	10V
C7031	1-164-862-11	CERAMIC CHIP	33pF	5%	50V	C7080	1-100-055-11	CERAMIC CHIP	22μF	20%	16V
C7032	1-164-862-11	CERAMIC CHIP	33pF	5%	50V	C7081	1-100-055-11	CERAMIC CHIP	22μF	20%	16V




REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C7086	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	C7233	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7087	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	C7234	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7088	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	C7235	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7089	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	C7236	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7090	1-126-210-21	ELECT CHIP	220μF	20%	4V	C7237	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7091	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	C7238	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7092	1-126-210-21	ELECT CHIP	220μF	20%	4V	C7239	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7093	1-100-583-21	ELECT CHIP	470μF	20%	4V	C7240	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7094	1-126-392-11	ELECT CHIP	100μF	20%	6.3V	C7241	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7100	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7242	1-100-583-21	ELECT CHIP	470μF	20%	4V
C7106	1-112-794-11	ELECT CHIP	470μF	20%	16V	C7243	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7107	1-100-588-21	ELECT CHIP	1000μF	20%	6.3V	C7244	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7200	1-100-583-21	ELECT CHIP	470μF	20%	4V	C7245	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C7201	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7246	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7202	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7247	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7203	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7248	1-100-159-91	CERAMIC CHIP	22μF	10%	6.3V
C7204	1-114-148-11	CERAMIC CHIP	1μF		6.3V	C7249	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7205	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7250	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7206	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7251	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7207	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7252	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7208	1-126-210-21	ELECT CHIP	220μF	20%	4V	C7253	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7209	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7254	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7210	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7255	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7211	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7256	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7212	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C7257	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7213	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7258	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7214	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7259	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7215	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C7260	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7216	1-100-583-21	ELECT CHIP	470μF	20%	4V	C7261	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C7217	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7262	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7218	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7263	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7219	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7264	1-114-148-11	CERAMIC CHIP	1μF		6.3V
C7220	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C7265	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7221	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7266	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7222	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7267	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7223	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V	C7268	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7224	1-114-148-11	CERAMIC CHIP	1μF		6.3V	C7269	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7225	1-114-148-11	CERAMIC CHIP	1μF		6.3V	C7270	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7226	1-114-148-11	CERAMIC CHIP	1μF		6.3V	C7271	1-164-854-11	CERAMIC CHIP	15pF	5%	50V
C7227	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7272	1-164-854-11	CERAMIC CHIP	15pF	5%	50V
C7228	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7273	1-165-989-11	CERAMIC CHIP	10μF	10%	6.3V
C7229	1-114-148-11	CERAMIC CHIP	1μF		6.3V	C7274	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C7230	1-114-148-11	CERAMIC CHIP	1μF		6.3V	C7275	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C7231	1-114-148-11	CERAMIC CHIP	1μF		6.3V	C7276	1-100-909-11	CERAMIC CHIP	10μF	10%	6.3V
C7232	1-114-148-11	CERAMIC CHIP	1μF		6.3V	C7277	1-165-989-11	CERAMIC CHIP	10μF	10%	6.3V




REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C7278	1-165-989-11	CERAMIC CHIP	10μF	10%	6.3V	C7515	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7279	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	C7600	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7280	1-126-210-21	ELECT CHIP	220μF	20%	4V	C7700	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7300	1-117-681-11	ELECT CHIP	100μF	20%	16V	C7701	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7301	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	C7702	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7302	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	C7703	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7303	1-100-055-11	CERAMIC CHIP	22μF	20%	16V	C7704	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7305	1-117-681-11	ELECT CHIP	100μF	20%	16V	C7705	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7306	1-100-567-81	CERAMIC CHIP	0.01μF	10%	25V	C7706	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7400	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7707	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7401	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7720	1-125-837-91	CERAMIC CHIP	1μF	10%	6.3V
C7402	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7800	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7403	1-100-506-91	CERAMIC CHIP	1μF	20%	6.3V	C7801	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7404	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7804	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7405	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7805	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7406	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7807	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7407	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7808	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7408	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7809	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7409	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7810	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7410	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7811	1-165-989-11	CERAMIC CHIP	10μF	10%	6.3V
C7411	1-114-148-11	CERAMIC CHIP	1μF		6.3V	C7812	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7412	1-114-148-11	CERAMIC CHIP	1μF		6.3V	C7813	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7413	1-114-148-11	CERAMIC CHIP	1μF		6.3V	C7814	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7417	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7815	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V
C7418	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7816	1-165-989-11	CERAMIC CHIP	10μF	10%	6.3V
C7420	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7817	1-165-989-11	CERAMIC CHIP	10μF	10%	6.3V
C7422	1-114-148-11	CERAMIC CHIP	1μF		6.3V	C7818	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C7424	1-114-148-11	CERAMIC CHIP	1μF		6.3V	C7819	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V
C7425	1-114-148-11	CERAMIC CHIP	1μF		6.3V	C7820	1-164-864-11	CERAMIC CHIP	39pF	5%	50V
C7430	1-100-566-91	CERAMIC CHIP	0.1μF	10%	25V	C7821	1-164-858-11	CERAMIC CHIP	22pF	5%	50V
C7431	1-126-210-21	ELECT CHIP	220μF	20%	4V	C7822	1-164-858-11	CERAMIC CHIP	22pF	5%	50V
C7432	1-165-989-11	CERAMIC CHIP	10μF	10%	6.3V	C7823	1-164-868-11	CERAMIC CHIP	56pF	5%	50V
C7433	1-165-989-11	CERAMIC CHIP	10μF	10%	6.3V	C7824	1-164-868-11	CERAMIC CHIP	56pF	5%	50V
C7501	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7825	1-164-864-11	CERAMIC CHIP	39pF	5%	50V
C7502	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7828	1-164-862-11	CERAMIC CHIP	33pF	5%	50V
C7504	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7829	1-164-862-11	CERAMIC CHIP	33pF	5%	50V
C7505	1-117-681-11	ELECT CHIP	100μF	20%	16V	C7831	1-107-819-11	CERAMIC CHIP	0.022μF	10%	16V
C7506	1-117-681-11	ELECT CHIP	100μF	20%	16V	C7832	1-126-205-11	ELECT CHIP	47μF	20%	6.3V
C7507	1-117-681-11	ELECT CHIP	100μF	20%	16V	C7833	1-125-777-11	CERAMIC CHIP	0.1μF	10%	10V
C7509	1-127-573-11	CERAMIC CHIP	1μF	10%	16V	C7835	1-164-860-11	CERAMIC CHIP	27pF	5%	50V
C7510	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C7836	1-164-860-11	CERAMIC CHIP	27pF	5%	50V
C7511	1-164-937-11	CERAMIC CHIP	0.001μF	10%	50V	C7837	1-164-840-11	CERAMIC CHIP	1pF	0.25pF	50V
C7512	1-125-891-11	CERAMIC CHIP	0.47μF	10%	10V	C7838	1-164-840-11	CERAMIC CHIP	1pF	0.25pF	50V
C7513	1-126-210-21	ELECT CHIP	220μF	20%	4V	C7840	1-164-860-11	CERAMIC CHIP	27pF	5%	50V
C7514	1-165-875-11	CERAMIC CHIP	10μF	10%	10V	C7841	1-164-860-11	CERAMIC CHIP	27pF	5%	50V



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
C7842	1-100-581-81	CERAMIC CHIP	0.0047μF	10%	50V	C9116	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7844	1-117-681-11	ELECT CHIP	100μF	20%	16V	C9117	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7845	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C9118	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7846	1-137-765-21	ELECT CHIP	47μF	20%	16V	C9119	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7847	1-164-939-11	CERAMIC CHIP	0.0022μF	10%	50V	C9121	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7848	1-100-588-21	ELECT CHIP	1000μF	20%	6.3V	C9122	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7849	1-100-567-81	CERAMIC CHIP	0.01μF	10%	25V	C9123	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7850	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C9124	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7852	1-128-396-11	ELECT CHIP	470μF	20%	10V	C9125	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7853	1-100-567-81	CERAMIC CHIP	0.01μF	10%	25V	C9126	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7854	1-112-777-11	CERAMIC CHIP	0.01μF	10%	25V	C9127	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7855	1-165-887-91	CERAMIC CHIP	0.22μF	10%	6.3V	C9128	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7856	1-100-905-11	CERAMIC CHIP	0.001μF	10%	50V	C9129	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7857	1-100-159-91	CERAMIC CHIP	22μF	10%	6.3V	C9130	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7858	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C9131	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7859	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C9132	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7862	1-112-046-11	CERAMIC CHIP	4.7μF	10%	6.3V	C9133	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7863	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C9134	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7864	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C9135	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7866	1-164-874-11	CERAMIC CHIP	100pF	5%	50V	C9136	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7867	1-164-862-11	CERAMIC CHIP	33pF	5%	50V	C9137	1-165-989-11	CERAMIC CHIP	10μF	10%	6.3V
C7870	1-165-989-11	CERAMIC CHIP	10μF	10%	6.3V	C9138	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C7871	1-165-989-11	CERAMIC CHIP	10μF	10%	6.3V	C9139	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C7878	1-128-396-11	ELECT CHIP	470μF	20%	10V	C9140	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7879	1-162-995-11	CERAMIC CHIP	0.022μF		50V	C9143	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C7950	1-100-567-81	CERAMIC CHIP	0.01μF	10%	25V	C9144	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7951	1-100-567-81	CERAMIC CHIP	0.01μF	10%	25V	C9145	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C7952	1-165-908-11	CERAMIC CHIP	1μF	10%	10V	C9146	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C7953	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C9147	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7954	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C9149	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C7956	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C9150	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C7958	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C9151	1-165-989-11	CERAMIC CHIP	10μF	10%	6.3V
C7959	1-100-916-11	CERAMIC CHIP	0.1μF	10%	16V	C9152	1-165-989-11	CERAMIC CHIP	10μF	10%	6.3V
C9100	1-126-210-21	ELECT CHIP	220μF	20%	4V	C9153	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C9101	1-126-210-21	ELECT CHIP	220μF	20%	4V	C9154	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C9105	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C9155	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C9106	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C9156	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C9107	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C9157	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C9108	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C9158	1-162-968-11	CERAMIC CHIP	0.0047μF	10%	50V
C9110	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C9159	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C9111	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C9160	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C9112	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C9161	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C9113	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C9162	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C9114	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	C9163	1-164-315-11	CERAMIC CHIP	470pF	5%	50V
C9115	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V						

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
CONNECTOR				D5517	6-500-701-01	DIODE	PGB1010603NR
*	CN1400	1-819-928-11	HEADER ASSEMBLY	20P	D5525	1-216-864-11	SHORT CHIP
*	CN2000	1-819-461-11	HEADER ASSEMBLY FOR PWB	D5528	1-216-864-11	SHORT CHIP	
	CN3004	1-779-936-51	CONNECTOR, FFC/FPC	18P	D7000	8-719-081-97	MMDL914T1
*	CN3008	1-820-188-11	HEADER ASSEMBLY (PRINT PWB)	11P	D7001	8-719-988-61	1SS355TE-17
*	CN4001	1-820-550-11	HEADER ASSEMBLY FOR PWB		D7002	6-500-253-01	RB053L-30TE25
	CN5000	1-821-013-11	D SUB CONNECTOR	D7003	8-719-977-28	DIODE	DTZ10B
*	CN7301	1-819-333-11	HEADER ASSEMBLY FOR PWB	D7004	8-719-977-12	DIODE	DTZ6.8B
	CN7303	1-820-187-11	HEADER ASSEMBLY (PRINT PWB)	D7008	8-719-083-58	DIODE	UDZSNPTE-173.9B
*	CN7600	1-793-141-21	PIN, CONNECTOR (PC BOARD)	15P	D7010	8-719-081-34	RB160M-30TR
*	CN9102	1-818-656-21	HEADER ASSEMBLY	30P			
DIODE				D7013	8-719-081-34	DIODE	RB160M-30TR
D1013	8-719-423-03	DIODE	MA8100	D7019	6-500-253-01	DIODE	RB053L-30TE25
D1014	8-719-423-03	DIODE	MA8100	D7201	8-719-081-97	DIODE	MMDL914T1
D1015	8-719-423-03	DIODE	MA8100	D7500	8-719-073-34	DIODE	EC21QS03L-TE12L
D1016	8-719-423-03	DIODE	MA8100	D7801	8-719-058-24	DIODE	RB501V-40TE-17
D1019	8-719-423-03	DIODE	MA8100				
D1020	8-719-423-03	DIODE	MA8100				
D1021	8-719-423-03	DIODE	MA8100				
D2002	8-719-404-50	DIODE	MA111-TX				
D2008	8-719-404-50	DIODE	MA111-TX				
△ D2014	6-500-028-01	DIODE	MM3Z9V1ST1				
D2017	8-719-050-37	DIODE	M1MA152WA-T1				
D2018	8-719-977-28	DIODE	DTZ10B				
D2019	8-719-977-28	DIODE	DTZ10B				
D2020	8-719-422-46	DIODE	MA8056				
D2021	8-719-422-46	DIODE	MA8056				
D2022	8-719-422-46	DIODE	MA8056				
D3002	8-719-071-87	DIODE	MA785-(TX),SO				
D3007	8-719-077-59	DIODE	1PS302				
D3020	8-719-422-46	DIODE	MA8056				
D3021	8-719-422-46	DIODE	MA8056				
D4012	8-719-017-89	DIODE	MA8150-TX				
D5000	8-719-422-46	DIODE	MA8056				
D5001	8-719-422-46	DIODE	MA8056				
D5002	8-719-422-46	DIODE	MA8056				
D5003	8-719-050-38	DIODE	M1MA152WK-T1				
D5506	6-500-701-01	DIODE	PGB1010603NR				
D5508	8-719-081-97	DIODE	MMDL914T1				
D5509	6-500-701-01	DIODE	PGB1010603NR				
D5513	6-500-701-01	DIODE	PGB1010603NR				
D5516	8-719-081-97	DIODE	MMDL914T1				
						</	

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
FB2012	1-400-089-21	FERRITE	0μH	FB7807	1-469-083-21	FERRITE	0μH
FB2013	1-400-089-21	FERRITE	0μH	FB7808	1-400-198-21	FERRITE	0μH
				FB7809	1-400-198-21	FERRITE	0μH
FB2014	1-400-089-21	FERRITE	0μH	FB9101	1-400-089-21	FERRITE	0μH
FB4001	1-400-089-21	FERRITE	0μH				
FB4002	1-400-110-21	FERRITE	0μH			FILTER	
FB4003	1-400-089-21	FERRITE	0μH	FL3001	1-234-177-21	FERRITE	0μH
FB4005	1-414-445-11	FERRITE	0μH	FL5501	1-234-177-21	FERRITE	0μH
				FL5502	1-234-177-21	FERRITE	0μH
FB4006	1-414-445-11	FERRITE	0μH			IC	
FB4007	1-414-445-11	FERRITE	0μH	IC1001	8-759-548-56	IC	M52055FP
FB4008	1-400-591-22	FERRITE	0μH	IC2004	8-759-278-58	IC	NJM4558V-TE2
FB4009	1-400-591-22	FERRITE	0μH	IC2005	8-759-460-79	IC	BA09FP-E2
FB4010	1-400-591-22	FERRITE	0μH	IC2006	8-759-278-58	IC	NJM4558V-TE2
				IC2008	6-709-927-01	IC	RT8H225C-TP-2
FB4011	1-400-591-22	FERRITE	0μH				
FB4013	1-400-089-21	FERRITE	0μH	IC2009	6-710-904-01	IC	TPA3100D2PHPR
FB4501	1-412-983-31	INDUCTOR	2.2μH	IC2010	8-759-359-49	IC	NJM3414AV(TE2)
FB4502	1-469-555-21	INDUCTOR	10μH	IC2011	6-709-927-01	IC	RT8H225C-TP-2
FB5000	1-469-100-21	FERRITE	0μH	IC2013	6-701-105-01	IC	NJM2750M-TE2
				IC2014	6-707-181-01	IC	AK5366VQ-L
FB5001	1-469-100-21	FERRITE	0μH				
FB5002	1-469-100-21	FERRITE	0μH	IC2015	6-704-819-01	IC	CS4335-KSZR
FB5004	1-469-100-21	FERRITE	0μH	IC2016	6-704-819-01	IC	CS4335-KSZR
FB5005	1-400-141-22	FERRITE	0μH	IC3005	6-704-607-01	IC	M24C16-WMN6T(B)
FB7000	1-400-794-21	FERRITE	0μH	IC3007	6-709-731-01	IC	ADT75ARZ-REEL
				IC3009	6-709-517-01	IC	S-35390A-J8T1G
FB7003	1-400-089-21	FERRITE	0μH				
\triangle FB7200	1-414-229-11	FERRITE	0μH	IC3010	6-801-402-01	IC	BD4729GTR
\triangle FB7201	1-414-229-11	FERRITE	0μH	IC3011	6-806-734-01	IC	MB95F118ASPMT-G-SPE1
FB7202	1-414-229-11	FERRITE	0μH	\triangle IC4501	6-711-281-01	IC	AD9380KSTZ-100
FB7203	1-414-229-11	FERRITE	0μH	IC5000	6-704-600-01	IC	M24C02-WMN6T(B)
				IC5001	6-707-846-01	IC	TC74LCX14FT(EKJ)
FB7204	1-414-229-11	FERRITE	0μH				
FB7300	1-400-089-21	FERRITE	0μH	IC5501	6-704-001-01	IC	BR24L02F-WE2
FB7301	1-400-089-21	FERRITE	0μH	IC5503	6-704-001-01	IC	BR24L02F-WE2
FB7302	1-414-229-11	FERRITE	0μH	IC5511	6-708-758-01	IC	PCA9517DP.118
FB7303	1-414-229-11	FERRITE	0μH	IC5512	8-759-596-34	IC	SN74LV4053APWR
				IC5513	8-753-255-97	IC	CXB1441R-T4
FB7400	1-414-229-11	FERRITE	0μH				
\triangle FB7700	1-414-229-11	FERRITE	0μH	IC7000	6-702-142-01	IC	PQ1CY1032ZP
FB7701	1-414-229-11	FERRITE	0μH	IC7001	6-708-171-01	IC	MIC5235YM5TR
FB7800	1-414-229-11	FERRITE	0μH	IC7002	6-703-708-01	IC	LM2903DT
FB7801	1-218-990-81	SHORT CHIP		IC7003	6-703-175-01	IC	PST3629UL
				\triangle IC7004	6-709-075-01	IC	TPS5124DBTRG4
FB7802	1-218-990-81	SHORT CHIP					
FB7803	1-469-084-21	FERRITE	0MH	\triangle IC7005	6-709-075-01	IC	TPS5124DBTRG4
FB7804	1-469-083-21	FERRITE	0μH	IC7006	6-707-739-01	IC	MM1661JTRE
FB7805	1-469-083-21	FERRITE	0μH	IC7300	6-711-353-01	IC	100CK2254
FB7806	1-469-083-21	FERRITE	0μH	IC7301	6-700-631-01	IC	TPS2051ADR
				IC7400	6-711-198-01	IC	HYB18TC512160BF-2.5

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES	
	IC7501	6-709-504-01	IC	K9F5608U0D-PCB0T	L5502	1-457-223-11	INDUCTOR	0μH
△	IC7503	6-807-556-01	IC	M25P40-VMN6TP	L5503	1-457-223-11	INDUCTOR	0μH
	IC7504	8-759-675-48	IC	SN74LVC32APWR	L5504	1-457-223-11	INDUCTOR	0μH
	IC7505	6-705-468-01	IC	BA33BC0FP-E2	L7001	1-457-242-11	INDUCTOR	47μH
	IC7506	6-703-038-01	IC	CD74HC4538PWR	L7002	1-424-976-21	INDUCTOR	47μH
	IC7950	8-759-338-95	IC	NJM2903V(Te2)	L7004	1-424-922-21	INDUCTOR	10μH
	IC9100	6-702-973-01	IC	CXD9690Q	L7005	1-424-922-21	INDUCTOR	10μH
	IC9102	6-704-519-01	IC	THC63LVD103	L7006	1-400-325-11	INDUCTOR	5.6μH
	IC9105	6-701-680-01	IC	PST3629NR	L7007	1-400-281-11	INDUCTOR	10μH
				L7201	1-400-180-21	FERRITE	0μH	
	<u>JACK</u>							
	J1000	1-780-487-11	S TERMINAL BLOCK	L7300	1-400-284-21	INDUCTOR	0μH	
	J1100	1-821-064-11	PHONO JACK	L7431	1-400-180-21	FERRITE	0μH	
	J1701	1-820-765-11	PHONO JACK	L7720	1-400-180-21	FERRITE	0μH	
	J1710	1-820-638-11	JACK (SMALL TYPE)	L7800	1-412-973-11	INDUCTOR	0.33μH	
*	J1722	1-821-418-11	PIN JACK BLOCK	L7801	1-412-971-31	INDUCTOR	0.22μH	
	J5505	1-818-737-11	HDMI CONNECTOR	L7802	1-412-971-31	INDUCTOR	0.22μH	
	J5506	1-818-737-11	HDMI CONNECTOR	L7805	1-412-973-11	INDUCTOR	0.33μH	
				L7806	1-412-974-41	INDUCTOR	0.39μH	
				L7807	1-412-974-41	INDUCTOR	0.39μH	
				L7808	1-469-555-21	INDUCTOR	10μH	
	L1001	1-469-555-21	INDUCTOR	10μH				
	L1007	1-412-983-31	INDUCTOR	2.2μH	L7809	1-412-972-31	INDUCTOR	0.27μH
	L2005	1-469-555-21	INDUCTOR	10μH	L7810	1-412-972-31	INDUCTOR	0.27μH
	L2011	1-469-555-21	INDUCTOR	10μH	L7811	1-469-555-21	INDUCTOR	10μH
	L2015	1-469-555-21	INDUCTOR	10μH	L7812	1-469-555-21	INDUCTOR	10μH
				L7813	1-469-555-21	INDUCTOR	10μH	
	L2016	1-481-083-11	INDUCTOR	22μH				
	L2017	1-412-058-11	INDUCTOR	10μH	L7814	1-469-555-21	INDUCTOR	10μH
	L2018	1-457-429-11	INDUCTOR	22μH	L7815	1-469-555-21	INDUCTOR	10μH
	L2019	1-457-429-11	INDUCTOR	22μH	L7817	1-400-180-21	FERRITE	0μH
	L2022	1-469-555-21	INDUCTOR	10μH	L7818	1-400-180-21	FERRITE	0μH
				L7819	1-469-555-21	INDUCTOR	10μH	
	L2023	1-216-864-11	SHORT CHIP					
	L2025	1-469-555-21	INDUCTOR	10μH	L7820	1-400-180-21	FERRITE	0μH
	L2026	1-457-429-11	INDUCTOR	22μH	L7821	1-400-180-21	FERRITE	0μH
	L2027	1-457-429-11	INDUCTOR	22μH	L7822	1-400-180-21	FERRITE	0μH
	L3002	1-400-794-21	FERRITE	0μH	L7824	1-400-180-21	FERRITE	0μH
				L7825	1-400-180-21	FERRITE	0μH	
	L4501	1-469-555-21	INDUCTOR	10μH				
	L4502	1-469-555-21	INDUCTOR	10μH	L7826	1-400-180-21	FERRITE	0μH
	L4503	1-469-555-21	INDUCTOR	10μH	L7827	1-400-180-21	FERRITE	0μH
	L4504	1-469-555-21	INDUCTOR	10μH	L9100	1-469-555-21	INDUCTOR	10μH
	L4505	1-469-555-21	INDUCTOR	10μH	L9101	1-412-029-11	INDUCTOR	10μH
				L9103	1-469-555-21	INDUCTOR	10μH	
	L5005	1-457-223-11	INDUCTOR	0μH				
	L5006	1-457-223-11	INDUCTOR	0μH	L9104	1-469-555-21	INDUCTOR	10μH
	L5007	1-457-223-11	INDUCTOR	0μH	L9105	1-469-555-21	INDUCTOR	10μH
	L5008	1-457-223-11	INDUCTOR	0μH	L9106	1-456-984-11	INDUCTOR	0μH
	L5501	1-457-223-11	INDUCTOR	0μH	L9107	1-456-984-11	INDUCTOR	0μH
				L9108	1-456-984-11	INDUCTOR	0μH	

NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
L9109	1-456-984-11	INDUCTOR	0 μ H	Q7800	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF
L9110	1-456-984-11	INDUCTOR	0 μ H	Q7802	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF
L9111	1-400-177-21	FERRITE	0 μ H	Q7803	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF
IC LINK				Q7804	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF
PS5000	1-576-646-11	FUSE	0.5A 50V	Q7807	8-729-620-13	TRANSISTOR	2SC4154TP-1EF
\triangle PS7000	1-576-925-11	IC LINK	3.15A 0V	Q9100	8-729-600-22	TRANSISTOR	2SA1235-F
\triangle PS7001	1-576-925-11	IC LINK	3.15A 0V	Q9101	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF
TRANSISTOR				RESISTOR			
Q1007	8-729-422-27	TRANSISTOR	2SD601A-Q	R1012	1-218-985-11	RES-CHIP	470K 5% 1/16W
Q2006	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R1013	1-218-990-81	SHORT CHIP	
Q2007	6-551-364-01	TRANSISTOR	DTC614TUT106	R1014	1-218-985-11	RES-CHIP	470K 5% 1/16W
Q2008	6-551-364-01	TRANSISTOR	DTC614TUT106	R1015	1-218-990-81	SHORT CHIP	
Q2009	8-729-028-96	TRANSISTOR	DTC114EUA-T106	R1016	1-218-990-81	SHORT CHIP	
Q2010	8-729-013-28	TRANSISTOR	HN1B01FU-TE85R	R1021	1-218-985-11	RES-CHIP	470K 5% 1/16W
Q2012	6-551-271-01	TRANSISTOR	RT3AMMM	R1022	1-218-990-81	SHORT CHIP	
Q2013	6-551-271-01	TRANSISTOR	RT3AMMM	R1023	1-218-985-11	RES-CHIP	470K 5% 1/16W
Q2016	8-729-028-96	TRANSISTOR	DTC114EUA-T106	R1024	1-218-990-81	SHORT CHIP	
Q2017	8-729-028-96	TRANSISTOR	DTC114EUA-T106	R1025	1-218-990-81	SHORT CHIP	
Q2018	8-729-028-96	TRANSISTOR	DTC114EUA-T106	R1102	1-218-831-11	METAL CHIP	220 0.50% 1/10W
Q2019	6-551-364-01	TRANSISTOR	DTC614TUT106	R1103	1-218-831-11	METAL CHIP	220 0.50% 1/10W
Q2020	6-551-364-01	TRANSISTOR	DTC614TUT106	R1104	1-218-831-11	METAL CHIP	220 0.50% 1/10W
Q2021	8-729-422-27	TRANSISTOR	2SD601A-Q	R1105	1-218-933-11	RES-CHIP	22 5% 1/16W
Q3007	8-729-028-96	TRANSISTOR	DTC114EUA-T106	R1106	1-218-831-11	METAL CHIP	220 0.50% 1/10W
Q4001	8-729-028-97	TRANSISTOR	DTC114TUA-T106	R1107	1-218-831-11	METAL CHIP	220 0.50% 1/10W
Q4002	8-729-028-97	TRANSISTOR	DTC114TUA-T106	R1108	1-218-831-11	METAL CHIP	220 0.50% 1/10W
Q4011	8-729-907-00	TRANSISTOR	DTC114EU	R1109	1-218-933-11	RES-CHIP	22 5% 1/16W
Q4014	8-729-028-96	TRANSISTOR	DTC114EUA-T106	R1110	1-218-831-11	METAL CHIP	220 0.50% 1/10W
Q4016	8-729-028-97	TRANSISTOR	DTC114TUA-T106	R1111	1-218-831-11	METAL CHIP	220 0.50% 1/10W
Q4017	8-729-028-97	TRANSISTOR	DTC114TUA-T106	R1112	1-218-831-11	METAL CHIP	220 0.50% 1/10W
Q4018	8-729-054-36	TRANSISTOR	UPA1716G-E2	R1113	1-218-933-11	RES-CHIP	22 5% 1/16W
Q4501	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	R1114	1-218-990-81	SHORT CHIP	
Q4502	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	R1115	1-218-985-11	RES-CHIP	470K 5% 1/16W
Q4503	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF	R1116	1-218-990-81	SHORT CHIP	
Q5503	8-729-028-28	TRANSISTOR	2SK2036(TE85L)	R1117	1-218-985-11	RES-CHIP	470K 5% 1/16W
Q5505	8-729-028-28	TRANSISTOR	2SK2036(TE85L)	R1132	1-218-831-11	METAL CHIP	220 0.50% 1/10W
Q5507	8-729-028-96	TRANSISTOR	DTC114EUA-T106	R1133	1-218-831-11	METAL CHIP	220 0.50% 1/10W
Q5624	8-729-907-00	TRANSISTOR	DTC114EU	R1134	1-218-831-11	METAL CHIP	220 0.50% 1/10W
Q5625	8-729-907-00	TRANSISTOR	DTC114EU	R1135	1-218-933-11	RES-CHIP	22 5% 1/16W
\triangle Q7000	8-729-046-04	TRANSISTOR	FDS6690A	R1136	1-218-831-11	METAL CHIP	220 0.50% 1/10W
\triangle Q7001	6-709-438-01	TRANSISTOR	FDS6986AS-NL	R1137	1-218-831-11	METAL CHIP	220 0.50% 1/10W
\triangle Q7002	6-709-438-01	TRANSISTOR	FDS6986AS-NL	R1138	1-218-831-11	METAL CHIP	220 0.50% 1/10W
\triangle Q7003	6-709-438-01	TRANSISTOR	FDS6986AS-NL	R1139	1-218-933-11	RES-CHIP	22 5% 1/16W
\triangle Q7004	6-709-438-01	TRANSISTOR	FDS6986AS-NL	R1140	1-218-831-11	METAL CHIP	220 0.50% 1/10W



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R1141	1-218-831-11	METAL CHIP	220	0.50%	1/10W	R1876	1-216-864-11	SHORT CHIP			
R1142	1-218-831-11	METAL CHIP	220	0.50%	1/10W	R1877	1-216-864-11	SHORT CHIP			
R1143	1-218-933-11	RES-CHIP	22	5%	1/16W	R1878	1-218-831-11	METAL CHIP	220	0.50%	1/10W
R1144	1-218-990-81	SHORT CHIP				R1885	1-216-864-11	SHORT CHIP			
R1145	1-218-985-11	RES-CHIP	470K	5%	1/16W	R1886	1-216-864-11	SHORT CHIP			
R1146	1-218-990-81	SHORT CHIP				R1887	1-218-831-11	METAL CHIP	220	0.50%	1/10W
R1147	1-218-985-11	RES-CHIP	470K	5%	1/16W	R1894	1-216-864-11	SHORT CHIP			
R1401	1-216-864-11	SHORT CHIP				R1914	1-218-831-11	METAL CHIP	220	0.50%	1/10W
R1402	1-218-990-81	SHORT CHIP				R1915	1-218-831-11	METAL CHIP	220	0.50%	1/10W
R1403	1-218-990-81	SHORT CHIP				R1916	1-218-831-11	METAL CHIP	220	0.50%	1/10W
R1404	1-218-990-81	SHORT CHIP				R1917	1-218-969-11	RES-CHIP	22K	5%	1/16W
R1405	1-218-990-81	SHORT CHIP				R1918	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1406	1-218-990-81	SHORT CHIP				R1919	1-218-941-81	RES-CHIP	100	5%	1/16W
R1408	1-216-864-11	SHORT CHIP				R1920	1-218-839-11	METAL CHIP	470	0.50%	1/10W
R1700	1-218-981-91	RES-CHIP	220K	5%	1/16W	R1922	1-218-990-81	SHORT CHIP			
R1701	1-218-981-91	RES-CHIP	220K	5%	1/16W	R1923	1-218-990-81	SHORT CHIP			
R1702	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R1924	1-216-864-11	SHORT CHIP			
R1703	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R1925	1-216-864-11	SHORT CHIP			
R1710	1-218-985-11	RES-CHIP	470K	5%	1/16W	R1926	1-216-864-11	SHORT CHIP			
R1711	1-218-985-11	RES-CHIP	470K	5%	1/16W	R1927	1-216-864-11	SHORT CHIP			
R1712	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1928	1-216-864-11	SHORT CHIP			
R1713	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1929	1-216-864-11	SHORT CHIP			
R1720	1-218-985-11	RES-CHIP	470K	5%	1/16W	R1930	1-216-864-11	SHORT CHIP			
R1721	1-218-985-11	RES-CHIP	470K	5%	1/16W	R1931	1-216-864-11	SHORT CHIP			
R1722	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1932	1-216-864-11	SHORT CHIP			
R1723	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1933	1-216-864-11	SHORT CHIP			
R1726	1-216-864-11	SHORT CHIP				R1934	1-216-864-11	SHORT CHIP			
R1727	1-216-864-11	SHORT CHIP				R1935	1-216-864-11	SHORT CHIP			
R1728	1-216-864-11	SHORT CHIP				R1936	1-216-864-11	SHORT CHIP			
R1822	1-218-990-81	SHORT CHIP				R1937	1-216-864-11	SHORT CHIP			
R1832	1-218-990-81	SHORT CHIP				R1938	1-216-864-11	SHORT CHIP			
R1833	1-218-990-81	SHORT CHIP				R1939	1-216-864-11	SHORT CHIP			
R1836	1-218-990-81	SHORT CHIP				R1940	1-216-295-91	SHORT CHIP			
R1839	1-218-990-81	SHORT CHIP				R1941	1-216-295-91	SHORT CHIP			
R1842	1-218-990-81	SHORT CHIP				R1942	1-216-295-91	SHORT CHIP			
R1845	1-218-990-81	SHORT CHIP				R1943	1-216-295-91	SHORT CHIP			
R1848	1-218-990-81	SHORT CHIP				R1944	1-216-295-91	SHORT CHIP			
R1850	1-216-809-11	METAL CHIP	100	5%	1/10W	R1945	1-216-295-91	SHORT CHIP			
R1859	1-218-831-11	METAL CHIP	220	0.50%	1/10W	R1946	1-216-295-91	SHORT CHIP			
R1866	1-216-864-11	SHORT CHIP				R2110	1-208-905-11	METAL CHIP	5.6K	0.50%	1/16W
R1867	1-216-864-11	SHORT CHIP				R2111	1-208-905-11	METAL CHIP	5.6K	0.50%	1/16W
R1868	1-216-864-11	SHORT CHIP				R2112	1-218-973-11	RES-CHIP	47K	5%	1/16W
R1869	1-218-831-11	METAL CHIP	220	0.50%	1/10W	R2113	1-218-973-11	RES-CHIP	47K	5%	1/16W
R1870	1-218-831-11	METAL CHIP	220	0.50%	1/10W	R2114	1-216-864-11	SHORT CHIP			
R1871	1-218-831-11	METAL CHIP	220	0.50%	1/10W	R2116	1-216-864-11	SHORT CHIP			



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R2117	1-208-687-11	METAL CHIP	1.5K	0.50%	1/16W	R2202	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2118	1-208-687-11	METAL CHIP	1.5K	0.50%	1/16W	R2204	1-218-977-11	RES-CHIP	100K	5%	1/16W
R2120	1-218-973-11	RES-CHIP	47K	5%	1/16W	R2205	1-218-973-11	RES-CHIP	47K	5%	1/16W
R2121	1-218-973-11	RES-CHIP	47K	5%	1/16W	R2206	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2122	1-218-973-11	RES-CHIP	47K	5%	1/16W	R2210	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W
R2126	1-218-973-11	RES-CHIP	47K	5%	1/16W	R2211	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W
R2129	1-218-973-11	RES-CHIP	47K	5%	1/16W	R2212	1-208-711-11	METAL CHIP	15K	0.50%	1/16W
R2130	1-208-697-11	METAL CHIP	3.9K	0.50%	1/16W	R2213	1-208-711-11	METAL CHIP	15K	0.50%	1/16W
R2131	1-208-697-11	METAL CHIP	3.9K	0.50%	1/16W	R2214	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2133	1-218-973-11	RES-CHIP	47K	5%	1/16W	R2215	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2138	1-218-985-11	RES-CHIP	470K	5%	1/16W	R2216	1-218-977-11	RES-CHIP	100K	5%	1/16W
R2139	1-218-985-11	RES-CHIP	470K	5%	1/16W	R2217	1-218-977-11	RES-CHIP	100K	5%	1/16W
R2141	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R2222	1-218-973-11	RES-CHIP	47K	5%	1/16W
R2142	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R2227	1-218-973-11	RES-CHIP	47K	5%	1/16W
R2143	1-208-905-11	METAL CHIP	5.6K	0.50%	1/16W	R2228	1-469-083-21	FERRITE	0μH		
R2145	1-208-905-11	METAL CHIP	5.6K	0.50%	1/16W	R2229	1-469-083-21	FERRITE	0μH		
R2147	1-218-990-81	SHORT CHIP				R2230	1-220-199-81	RES-CHIP	24K	5%	1/16W
R2148	1-218-973-11	RES-CHIP	47K	5%	1/16W	R2231	1-220-199-81	RES-CHIP	24K	5%	1/16W
R2149	1-218-969-11	RES-CHIP	22K	5%	1/16W	R2232	1-469-083-21	FERRITE	0μH		
R2150	1-218-969-11	RES-CHIP	22K	5%	1/16W	R2233	1-469-083-21	FERRITE	0μH		
R2151	1-218-973-11	RES-CHIP	47K	5%	1/16W	R2234	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2153	1-218-977-11	RES-CHIP	100K	5%	1/16W	R2235	1-216-813-11	METAL CHIP	220	5%	1/10W
R2161	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2236	1-216-807-11	METAL CHIP	68	5%	1/10W
R2162	1-218-977-11	RES-CHIP	100K	5%	1/16W	R2237	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2163	1-218-973-11	RES-CHIP	47K	5%	1/16W	R2238	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2166	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2239	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2167	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2249	1-218-941-81	RES-CHIP	100	5%	1/16W
R2168	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2250	1-218-990-81	SHORT CHIP			
R2169	1-218-973-11	RES-CHIP	47K	5%	1/16W	R2251	1-218-953-11	RES-CHIP	1K	5%	1/16W
R2170	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2252	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2171	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2253	1-218-990-81	SHORT CHIP			
R2176	1-218-973-11	RES-CHIP	47K	5%	1/16W	R2254	1-218-990-81	SHORT CHIP			
R2177	1-218-977-11	RES-CHIP	100K	5%	1/16W	R2257	1-218-982-11	RES-CHIP	270K	5%	1/16W
R2178	1-218-977-11	RES-CHIP	100K	5%	1/16W	R2258	1-218-982-11	RES-CHIP	270K	5%	1/16W
R2179	1-218-977-11	RES-CHIP	100K	5%	1/16W	R2259	1-218-982-11	RES-CHIP	270K	5%	1/16W
R2180	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2260	1-218-982-11	RES-CHIP	270K	5%	1/16W
R2181	1-218-977-11	RES-CHIP	100K	5%	1/16W	R2261	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2184	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2262	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2185	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2263	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2186	1-216-813-11	METAL CHIP	220	5%	1/10W	R2264	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2187	1-216-813-11	METAL CHIP	220	5%	1/10W	R2265	1-218-950-11	RES-CHIP	560	5%	1/16W
R2198	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R2266	1-218-950-11	RES-CHIP	560	5%	1/16W
R2199	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2267	1-218-950-11	RES-CHIP	560	5%	1/16W
R2200	1-218-977-11	RES-CHIP	100K	5%	1/16W	R2268	1-218-950-11	RES-CHIP	560	5%	1/16W
R2201	1-218-990-81	SHORT CHIP				R2269	1-218-941-81	RES-CHIP	100	5%	1/16W



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R2270	1-218-941-81	RES-CHIP	100	5%	1/16W	R3527	1-218-941-81	RES-CHIP	100	5%	1/16W
R2271	1-218-941-81	RES-CHIP	100	5%	1/16W	R3528	1-218-990-81	SHORT CHIP			
R2272	1-218-941-81	RES-CHIP	100	5%	1/16W	R3533	1-216-864-11	SHORT CHIP			
R2273	1-218-973-11	RES-CHIP	47K	5%	1/16W	R3534	1-216-864-11	SHORT CHIP			
R2274	1-218-973-11	RES-CHIP	47K	5%	1/16W	R3539	1-218-990-81	SHORT CHIP			
R2275	1-218-973-11	RES-CHIP	47K	5%	1/16W	R3541	1-218-990-81	SHORT CHIP			
R2276	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4002	1-218-977-11	RES-CHIP	100K	5%	1/16W
R2277	1-218-990-81	SHORT CHIP				R4006	1-218-977-11	RES-CHIP	100K	5%	1/16W
R2278	1-218-990-81	SHORT CHIP				R4007	1-218-979-11	RES-CHIP	150K	5%	1/16W
R2281	1-208-695-11	METAL CHIP	3.3K	0.50%	1/16W	R4008	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2282	1-208-935-11	METAL CHIP	100K	0.50%	1/16W	R4013	1-218-977-11	RES-CHIP	100K	5%	1/16W
R2283	1-218-990-81	SHORT CHIP				R4042	1-218-977-11	RES-CHIP	100K	5%	1/16W
R3010	1-218-990-81	SHORT CHIP				R4043	1-218-979-11	RES-CHIP	150K	5%	1/16W
R3031	1-208-931-11	METAL CHIP	68K	0.50%	1/16W	R4045	1-216-864-11	SHORT CHIP			
R3034	1-208-703-11	METAL CHIP	6.8K	0.50%	1/16W	R4047	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R3037	1-208-711-11	METAL CHIP	15K	0.50%	1/16W	R4048	1-218-839-11	METAL CHIP	470	0.50%	1/10W
R3073	1-218-990-81	SHORT CHIP				R4050	1-218-971-11	RES-CHIP	33K	5%	1/16W
R3087	1-218-990-81	SHORT CHIP				R4058	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3101	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R4060	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3146	1-218-941-81	RES-CHIP	100	5%	1/16W	R4061	1-218-983-11	RES-CHIP	330K	5%	1/16W
R3180	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4063	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R3190	1-208-886-81	METAL CHIP	910	0.50%	1/16W	R4064	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3201	1-218-990-81	SHORT CHIP				R4065	1-218-971-11	RES-CHIP	33K	5%	1/16W
R3218	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R4067	1-218-990-81	SHORT CHIP			
R3223	1-218-945-11	RES-CHIP	220	5%	1/16W	R4545	1-218-665-11	METAL CHIP	75	0.50%	1/10W
R3243	1-218-941-81	RES-CHIP	100	5%	1/16W	R4546	1-218-665-11	METAL CHIP	75	0.50%	1/10W
R3247	1-218-990-81	SHORT CHIP				R4547	1-218-665-11	METAL CHIP	75	0.50%	1/10W
R3249	1-218-935-11	RES-CHIP	33	5%	1/16W	R4551	1-216-864-11	SHORT CHIP			
R3255	1-400-591-22	FERRITE	0μH			R4552	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R3256	1-400-591-22	FERRITE	0μH			R4553	1-218-289-11	METAL CHIP	510	5%	1/10W
R3257	1-400-591-22	FERRITE	0μH			R4554	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3258	1-400-591-22	FERRITE	0μH			R4555	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3260	1-400-591-22	FERRITE	0μH			R4556	1-216-801-11	METAL CHIP	22	5%	1/10W
R3261	1-400-591-22	FERRITE	0μH			R4557	1-216-801-11	METAL CHIP	22	5%	1/10W
R3262	1-400-591-22	FERRITE	0μH			R4558	1-216-801-11	METAL CHIP	22	5%	1/10W
R3264	1-400-591-22	FERRITE	0μH			R4559	1-216-801-11	METAL CHIP	22	5%	1/10W
R3265	1-400-591-22	FERRITE	0μH			R4560	1-218-969-11	RES-CHIP	22K	5%	1/16W
R3267	1-216-864-11	SHORT CHIP				R4561	1-218-969-11	RES-CHIP	22K	5%	1/16W
R3270	1-218-941-81	RES-CHIP	100	5%	1/16W	R4562	1-218-969-11	RES-CHIP	22K	5%	1/16W
R3515	1-216-833-11	METAL CHIP	10K	5%	1/10W	R4563	1-218-969-11	RES-CHIP	22K	5%	1/16W
R3516	1-216-809-11	METAL CHIP	100	5%	1/10W	R4564	1-218-969-11	RES-CHIP	22K	5%	1/16W
R3517	1-218-989-11	RES-CHIP	1M	5%	1/16W	R4565	1-218-969-11	RES-CHIP	22K	5%	1/16W
R3519	1-216-809-11	METAL CHIP	100	5%	1/10W	R4575	1-216-864-11	SHORT CHIP			
R3524	1-218-990-81	SHORT CHIP				R4576	1-216-864-11	SHORT CHIP			
R3526	1-216-864-11	SHORT CHIP				R4577	1-216-864-11	SHORT CHIP			



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R4578	1-208-675-11	METAL CHIP	470	0.50%	1/16W	R7001	1-216-815-11	METAL CHIP	330	5%	1/10W
R4579	1-208-675-11	METAL CHIP	470	0.50%	1/16W	R7002	1-216-821-11	METAL CHIP	1K	5%	1/10W
R4580	1-208-675-11	METAL CHIP	470	0.50%	1/16W	R7003	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5012	1-218-827-11	METAL CHIP	150	0.50%	1/10W	R7004	1-216-841-11	METAL CHIP	47K	5%	1/10W
R5013	1-218-827-11	METAL CHIP	150	0.50%	1/10W	R7005	1-218-867-11	METAL CHIP	6.8K	0.50%	1/10W
R5014	1-218-827-11	METAL CHIP	150	0.50%	1/10W	R7006	1-218-861-11	METAL CHIP	3.9K	0.50%	1/10W
R5015	1-218-827-11	METAL CHIP	150	0.50%	1/10W	R7007	1-218-847-11	METAL CHIP	1K	0.50%	1/10W
R5016	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7008	1-218-873-11	METAL CHIP	12K	0.50%	1/10W
R5017	1-218-827-11	METAL CHIP	150	0.50%	1/10W	R7009	1-218-891-11	METAL CHIP	68K	0.50%	1/10W
R5018	1-218-827-11	METAL CHIP	150	0.50%	1/10W	R7010	1-218-911-11	METAL CHIP	470K	0.50%	1/10W
R5019	1-218-977-11	RES-CHIP	100K	5%	1/16W	R7012	1-216-295-91	SHORT CHIP			
R5029	1-218-933-11	RES-CHIP	22	5%	1/16W	R7016	1-216-295-91	SHORT CHIP			
R5030	1-218-933-11	RES-CHIP	22	5%	1/16W	R7017	1-469-553-21	INDUCTOR	4.7μH		
R5501	1-218-929-11	RES-CHIP	10	5%	1/16W	R7018	1-208-935-11	METAL CHIP	100K	0.50%	1/16W
R5504	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R7019	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5505	1-218-929-11	RES-CHIP	10	5%	1/16W	R7020	1-218-990-81	SHORT CHIP			
R5512	1-208-683-11	METAL CHIP	1K	0.50%	1/16W	R7021	1-218-990-81	SHORT CHIP			
R5513	1-218-941-81	RES-CHIP	100	5%	1/16W	R7022	1-216-820-11	METAL CHIP	820	5%	1/10W
R5514	1-218-941-81	RES-CHIP	100	5%	1/16W	R7023	1-216-819-11	METAL CHIP	680	5%	1/10W
R5519	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R7024	1-218-941-81	RES-CHIP	100	5%	1/16W
R5521	1-218-973-11	RES-CHIP	47K	5%	1/16W	R7025	1-208-936-11	METAL CHIP	110K	0.50%	1/16W
R5525	1-218-973-11	RES-CHIP	47K	5%	1/16W	R7026	1-208-935-11	METAL CHIP	100K	0.50%	1/16W
R5527	1-218-941-81	RES-CHIP	100	5%	1/16W	R7027	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5528	1-218-941-81	RES-CHIP	100	5%	1/16W	R7028	1-208-956-81	METAL CHIP	750K	0.50%	1/16W
R5529	1-218-973-11	RES-CHIP	47K	5%	1/16W	R7029	1-218-990-81	SHORT CHIP			
R5530	1-218-941-81	RES-CHIP	100	5%	1/16W	R7030	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5534	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R7032	1-218-990-81	SHORT CHIP			
R5535	1-218-973-11	RES-CHIP	47K	5%	1/16W	R7034	1-218-977-11	RES-CHIP	100K	5%	1/16W
R5536	1-218-973-11	RES-CHIP	47K	5%	1/16W	R7035	1-208-695-11	METAL CHIP	3.3K	0.50%	1/16W
R5538	1-218-973-11	RES-CHIP	47K	5%	1/16W	R7036	1-218-982-11	RES-CHIP	270K	5%	1/16W
R5539	1-218-990-81	SHORT CHIP				R7037	1-208-687-11	METAL CHIP	1.5K	0.50%	1/16W
R5543	1-218-941-81	RES-CHIP	100	5%	1/16W	R7038	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R5557	1-218-990-81	SHORT CHIP				R7039	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R5580	1-216-295-91	SHORT CHIP				R7040	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R5622	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7041	1-208-927-11	METAL CHIP	47K	0.50%	1/16W
R5637	1-218-990-81	SHORT CHIP				R7042	1-218-982-11	RES-CHIP	270K	5%	1/16W
R5638	1-218-990-81	SHORT CHIP				R7043	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R5642	1-216-864-11	SHORT CHIP				R7044	1-208-929-81	METAL CHIP	56K	0.50%	1/16W
R5644	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R7045	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R5645	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R7046	1-208-923-11	METAL CHIP	33K	0.50%	1/16W
R5648	1-216-864-11	SHORT CHIP				R7047	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W
R5658	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R7048	1-218-941-81	RES-CHIP	100	5%	1/16W
R5660	1-218-990-81	SHORT CHIP				R7049	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W
R5671	1-218-941-81	RES-CHIP	100	5%	1/16W	R7050	1-218-941-81	RES-CHIP	100	5%	1/16W
R7000	1-216-821-11	METAL CHIP	1K	5%	1/10W	R7051	1-218-941-81	RES-CHIP	100	5%	1/16W



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R7052	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W	R7334	1-216-864-11	SHORT CHIP			
R7053	1-218-941-81	RES-CHIP	100	5%	1/16W	R7335	1-216-864-11	SHORT CHIP			
R7054	1-208-691-11	METAL CHIP	2.2K	0.50%	1/16W	R7337	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7055	1-208-935-11	METAL CHIP	100K	0.50%	1/16W	R7400	1-208-911-11	METAL CHIP	10K	0.50%	1/16W
R7056	1-208-935-11	METAL CHIP	100K	0.50%	1/16W	R7401	1-208-855-81	METAL CHIP	47	0.50%	1/16W
R7057	1-208-935-11	METAL CHIP	100K	0.50%	1/16W	R7402	1-208-683-11	METAL CHIP	1K	0.50%	1/16W
R7058	1-208-935-11	METAL CHIP	100K	0.50%	1/16W	R7403	1-208-683-11	METAL CHIP	1K	0.50%	1/16W
R7059	1-218-937-11	RES-CHIP	47	5%	1/16W	R7404	1-208-683-11	METAL CHIP	1K	0.50%	1/16W
R7060	1-218-937-11	RES-CHIP	47	5%	1/16W	R7405	1-208-683-11	METAL CHIP	1K	0.50%	1/16W
R7061	1-218-937-11	RES-CHIP	47	5%	1/16W	R7406	1-208-683-11	METAL CHIP	1K	0.50%	1/16W
R7062	1-218-937-11	RES-CHIP	47	5%	1/16W	R7407	1-208-683-11	METAL CHIP	1K	0.50%	1/16W
R7063	1-216-864-11	SHORT CHIP				R7408	1-208-683-11	METAL CHIP	1K	0.50%	1/16W
R7064	1-216-864-11	SHORT CHIP				R7501	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R7065	1-208-911-11	METAL CHIP	10K	0.50%	1/16W	R7502	1-218-990-81	SHORT CHIP			
R7066	1-208-709-11	METAL CHIP	12K	0.50%	1/16W	R7505	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7067	1-208-911-11	METAL CHIP	10K	0.50%	1/16W	R7506	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7068	1-208-911-11	METAL CHIP	10K	0.50%	1/16W	R7508	1-218-977-11	RES-CHIP	100K	5%	1/16W
R7069	1-216-295-91	SHORT CHIP				R7509	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7070	1-216-295-91	SHORT CHIP				R7511	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7071	1-216-791-11	METAL CHIP	3.3	5%	1/10W	R7513	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7072	1-216-791-11	METAL CHIP	3.3	5%	1/10W	R7517	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7073	1-216-791-11	METAL CHIP	3.3	5%	1/10W	R7521	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7074	1-216-791-11	METAL CHIP	3.3	5%	1/10W	R7526	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7079	1-216-295-91	SHORT CHIP				R7528	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7080	1-216-295-91	SHORT CHIP				R7529	1-218-977-11	RES-CHIP	100K	5%	1/16W
R7081	1-216-295-91	SHORT CHIP				R7532	1-218-990-81	SHORT CHIP			
R7082	1-216-295-91	SHORT CHIP				R7533	1-218-446-11	METAL CHIP	1	5%	1/10W
R7089	1-216-295-91	SHORT CHIP				R7535	1-218-990-81	SHORT CHIP			
R7092	1-218-990-81	SHORT CHIP				R7541	1-218-990-81	SHORT CHIP			
R7200	1-218-989-11	RES-CHIP	1M	5%	1/16W	R7542	1-218-990-81	SHORT CHIP			
R7201	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R7544	1-218-990-81	SHORT CHIP			
R7202	1-218-990-81	SHORT CHIP				R7607	1-218-933-11	RES-CHIP	22	5%	1/16W
R7203	1-218-941-81	RES-CHIP	100	5%	1/16W	R7608	1-218-973-11	RES-CHIP	47K	5%	1/16W
R7301	1-216-864-11	SHORT CHIP				R7609	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7302	1-216-864-11	SHORT CHIP				R7610	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7307	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7611	1-218-933-11	RES-CHIP	22	5%	1/16W
R7317	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R7703	1-218-990-81	SHORT CHIP			
R7318	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R7705	1-218-941-81	RES-CHIP	100	5%	1/16W
R7327	1-218-977-11	RES-CHIP	100K	5%	1/16W	R7706	1-218-935-11	RES-CHIP	33	5%	1/16W
R7328	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R7710	1-218-935-11	RES-CHIP	33	5%	1/16W
R7329	1-216-835-11	METAL CHIP	15K	5%	1/10W	R7712	1-218-935-11	RES-CHIP	33	5%	1/16W
R7330	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R7714	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7331	1-216-835-11	METAL CHIP	15K	5%	1/10W	R7715	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7332	1-216-835-11	METAL CHIP	15K	5%	1/10W	R7716	1-218-935-11	RES-CHIP	33	5%	1/16W
R7333	1-216-835-11	METAL CHIP	15K	5%	1/10W	R7717	1-218-935-11	RES-CHIP	33	5%	1/16W



REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R7800	1-218-953-11	RES-CHIP	1K	5%	1/16W	R9111	1-216-821-11	METAL CHIP	1K	5%	1/10W
R7808	1-218-949-11	RES-CHIP	470	5%	1/16W	R9117	1-216-864-11	SHORT CHIP			
R7814	1-218-941-81	RES-CHIP	100	5%	1/16W	R9139	1-216-803-11	METAL CHIP	33	5%	1/10W
R7819	1-218-941-81	RES-CHIP	100	5%	1/16W	R9146	1-216-864-11	SHORT CHIP			
R7821	1-218-969-11	RES-CHIP	22K	5%	1/16W	R9153	1-216-864-11	SHORT CHIP			
R7822	1-218-969-11	RES-CHIP	22K	5%	1/16W	R9154	1-216-864-11	SHORT CHIP			
R7829	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R9159	1-216-845-11	METAL CHIP	100K	5%	1/10W
R7831	1-218-989-11	RES-CHIP	1M	5%	1/16W	R9163	1-216-821-11	METAL CHIP	1K	5%	1/10W
R7834	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R9165	1-216-821-11	METAL CHIP	1K	5%	1/10W
R7836	1-218-990-81	SHORT CHIP				R9166	1-216-833-11	METAL CHIP	10K	5%	1/10W
R7838	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R9167	1-216-821-11	METAL CHIP	1K	5%	1/10W
R7839	1-208-697-11	METAL CHIP	3.9K	0.50%	1/16W	R9169	1-216-821-11	METAL CHIP	1K	5%	1/10W
R7840	1-218-953-11	RES-CHIP	1K	5%	1/16W	R9177	1-218-990-81	SHORT CHIP			
R7842	1-218-953-11	RES-CHIP	1K	5%	1/16W	R9178	1-218-990-81	SHORT CHIP			
R7843	1-208-663-11	METAL CHIP	150	0.50%	1/16W	R9179	1-218-941-81	RES-CHIP	100	5%	1/16W
R7844	1-208-893-11	METAL CHIP	1.8K	0.50%	1/16W	R9184	1-218-990-81	SHORT CHIP			
R7845	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9185	1-218-990-81	SHORT CHIP			
R7847	1-218-941-11	RES-CHIP	100	5%	1/16W	R9186	1-216-864-11	SHORT CHIP			
R7848	1-218-989-11	RES-CHIP	1M	5%	1/16W	R9187	1-216-864-11	SHORT CHIP			
R7849	1-208-715-11	METAL CHIP	22K	0.50%	1/16W	R9190	1-216-864-11	SHORT CHIP			
R7851	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R9193	1-216-864-11	SHORT CHIP			
R7852	1-218-978-11	RES-CHIP	120K	5%	1/16W	R9196	1-218-990-81	SHORT CHIP			
R7853	1-218-965-11	RES-CHIP	10K	5%	1/16W						
R7868	1-208-893-11	METAL CHIP	1.8K	0.50%	1/16W						
R7869	1-218-941-81	RES-CHIP	100	5%	1/16W						
R7964	1-218-969-11	RES-CHIP	22K	5%	1/16W						
R7965	1-208-928-11	METAL CHIP	51K	0.50%	1/16W						
R7967	1-218-941-81	RES-CHIP	100	5%	1/16W						
R7969	1-208-928-11	METAL CHIP	51K	0.50%	1/16W						
R7970	1-218-969-11	RES-CHIP	22K	5%	1/16W						
R7971	1-218-941-81	RES-CHIP	100	5%	1/16W						
R7972	1-218-959-11	RES-CHIP	3.3K	5%	1/16W						
R7973	1-218-959-11	RES-CHIP	3.3K	5%	1/16W						
R7974	1-218-941-81	RES-CHIP	100	5%	1/16W						
R7975	1-218-941-81	RES-CHIP	100	5%	1/16W						
R7976	1-208-871-81	METAL CHIP	220	0.50%	1/16W						
R7977	1-218-831-11	METAL CHIP	220	0.50%	1/10W						
R7979	1-218-831-11	METAL CHIP	220	0.50%	1/10W						
R7982	1-218-827-11	METAL CHIP	150	0.50%	1/10W						
R7983	1-218-831-11	METAL CHIP	220	0.50%	1/10W						
R7984	1-218-831-11	METAL CHIP	220	0.50%	1/10W						
R7987	1-218-831-11	METAL CHIP	220	0.50%	1/10W						
R7988	1-218-831-11	METAL CHIP	220	0.50%	1/10W						
R9109	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R9110	1-216-801-11	METAL CHIP	22	5%	1/10W						

KDL-26M3000/26ML130/32M3000/32ML130


89


NOTE: The components identified by shading and \triangle mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


G1M

REF. NO.	PART NO.	DESCRIPTION	VALUES	REF. NO.	PART NO.	DESCRIPTION	VALUES
CONNECTOR							
	CN6101	1-695-915-11	TAB (CONTACT)	D6205	6-501-319-01	DIODE	FCQ10A06
	CN6102	1-580-843-11	PIN, CONNECTOR (POWER)	D6206	6-500-555-01	DIODE	MM3Z27VT1
*	CN6201	1-785-708-11	PIN, CONNECTOR (PC BOARD)	D6209	8-719-081-97	DIODE	MMDL914T1
*	CN6202	1-793-236-11	PIN, CONNECTOR (PC BOARD)				
			12P	D6210	8-719-082-03	DIODE	MM3Z15VT1
			14P	D6211	6-501-319-01	DIODE	FCQ10A06
DIODE				D6212	8-719-312-10	DIODE	RU4AM-T3
	D6101	8-719-510-53	DIODE	ET6101	1-537-770-21	TERMINAL BOARD, GROUND	
	D6102	8-719-081-97	DIODE	IC			
	D6103	6-500-567-01	DIODE	IC6101	6-709-192-01	IC	FA5501AN-D1-TE1
	D6104	6-500-567-01	DIODE	\triangle IC6104	6-707-749-01	IC	CXD9841P
	D6105	8-719-081-97	DIODE	\triangle IC6105	6-708-801-01	IC	MIP2H2
	D6106	8-719-081-97	DIODE	IC6201	6-709-155-01	IC	TS3431BILT
	D6107	8-719-027-76	DIODE	IC6203	6-700-898-01	IC	PQ05RD21J00H
	D6108	8-719-081-97	DIODE	CHIP CONDUCTOR			
	D6109	8-719-054-59	DIODE	JR6239	1-216-864-11	SHORT CHIP	
	D6110	8-719-976-99	DIODE	IC LINK			
	D6111	8-719-081-97	DIODE	PS6201	1-533-597-41	IC LINK	5A 90V
	D6112	6-500-335-01	DIODE	\triangle PS6202	1-533-597-41	IC LINK	5A 90V
	D6113	8-719-081-97	DIODE	\triangle PS6203	1-533-596-21	IC LINK	4A 90V
	D6114	8-719-081-97	DIODE	TRANSISTOR			
	D6115	8-719-081-97	DIODE				
\triangle	D6116	6-501-906-01	DIODE	Q6102	8-729-141-48	TRANSISTOR	2SB624-BV345
	D6119	8-719-027-76	DIODE	\triangle Q6103	6-551-303-01	TRANSISTOR	2SK3683-01MR-F111
	D6120	6-500-448-11	DIODE	Q6104	8-729-045-62	TRANSISTOR	2SK2158-T2B
\triangle	D6121	6-501-906-01	DIODE	Q6105	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF
	D6122	8-719-082-03	DIODE	Q6106	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF
	D6127	8-719-056-83	DIODE				
	D6128	8-719-081-97	DIODE	Q6107	8-729-920-79	TRANSISTOR	2SB1132-T100-QR
	D6129	6-501-297-11	DIODE	Q6108	8-729-027-43	TRANSISTOR	DTC114EKA-T146
	D6132	8-719-081-97	DIODE	\triangle Q6109	6-551-302-01	TRANSISTOR	2SK3561(LBS1SONY,Q
	D6133	6-501-450-11	DIODE	\triangle Q6110	6-551-302-01	TRANSISTOR	2SK3561(LBS1SONY,Q
	D6134	6-501-822-11	DIODE	Q6111	8-729-045-62	TRANSISTOR	2SK2158-T2B
	D6135	6-500-600-01	DIODE				
\triangle	D6136	8-719-931-47	DIODE	Q6112	8-729-045-62	TRANSISTOR	2SK2158-T2B
	D6137	6-500-021-01	DIODE	Q6201	8-729-045-62	TRANSISTOR	2SK2158-T2B
	D6138	8-719-081-97	DIODE	Q6202	6-551-696-01	TRANSISTOR	ISA1235AC1TP-1EF
	D6139	6-500-567-21	DIODE	Q6203	8-729-620-07	TRANSISTOR	2SC3052EF-T1-LEF
	D6140	6-500-021-01	DIODE	RESISTOR			
	D6141	8-719-081-97	DIODE	\triangle R6101	1-240-251-92	METAL	6.8 5% 10W
	D6201	8-719-200-31	DIODE	R6102	1-240-576-21	METAL CHIP	470K 1% 1/10W
	D6202	8-719-082-75	DIODE	R6103	1-240-576-21	METAL CHIP	470K 1% 1/10W
	D6203	8-719-082-75	DIODE	R6106	1-218-877-11	METAL CHIP	18K 0.50% 1/10W
	D6204	6-501-319-01	DIODE	R6107	1-216-073-91	RES-CHIP	10K 5% 1/10W

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

G1M

REF. NO.	PART NO.	DESCRIPTION	VALUES			REF. NO.	PART NO.	DESCRIPTION	VALUES		
R6108	1-240-576-21	METAL CHIP	470K	1%	1/10W	R6161	1-249-425-11	CARBON	4.7K	5%	1/4W
R6109	1-240-576-21	METAL CHIP	470K	1%	1/10W	R6162	1-211-989-11	METAL CHIP	68	0.50%	1/10W
R6113	1-215-869-11	METAL OXIDE	1K	5%	1W	R6163	1-211-985-11	METAL CHIP	47	0.50%	1/10W
R6114	1-216-077-91	RES-CHIP	15K	5%	1/10W	R6165	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R6115	1-249-397-11	CARBON	22	5%	1/4W	R6166	1-249-426-11	CARBON	5.6K	5%	1/4W
R6117	1-216-817-11	METAL CHIP	470	5%	1/10W	R6167	1-247-791-91	CARBON	22	5%	1/4W
R6118	1-216-851-11	METAL CHIP	330K	5%	1/10W	R6168	1-216-009-91	RES-CHIP	22	5%	1/10W
R6119	1-216-837-11	METAL CHIP	22K	5%	1/10W	R6169	1-216-049-11	RES-CHIP	1K	5%	1/10W
R6120	1-216-845-11	METAL CHIP	100K	5%	1/10W	R6170	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6121	1-249-397-11	CARBON	22	5%	1/4W	R6171	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6122	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6172	1-218-642-11	METAL OXIDE	100K	5%	1W
R6124	1-216-809-11	METAL CHIP	100	5%	1/10W	R6173	1-216-830-11	METAL CHIP	5.6K	5%	1/10W
R6125	1-216-001-00	RES-CHIP	10	5%	1/10W	R6175	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6127	1-215-882-00	METAL OXIDE	22	5%	2W	R6178	1-216-857-11	METAL CHIP	1M	5%	1/10W
R6128	1-216-801-11	METAL CHIP	22	5%	1/10W	R6179	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6129	1-215-882-00	METAL OXIDE	22	5%	2W	R6180	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R6130	1-208-840-11	METAL CHIP	270K	0.50%	1/10W	R6181	1-249-397-11	CARBON	22	5%	1/4W
R6131	1-208-840-11	METAL CHIP	270K	0.50%	1/10W	R6183	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6132	1-208-840-11	METAL CHIP	270K	0.50%	1/10W	R6185	1-208-822-11	METAL CHIP	47K	0.50%	1/10W
R6133	1-208-840-11	METAL CHIP	270K	0.50%	1/10W	R6186	1-216-105-91	RES-CHIP	220K	5%	1/10W
R6134	1-218-760-11	METAL CHIP	220K	0.50%	1/10W	R6187	1-218-903-11	METAL CHIP	220K	0.50%	1/10W
R6135	1-208-804-11	METAL CHIP	8.2K	0.50%	1/10W	R6188	1-208-854-11	METAL CHIP	1M	0.50%	1/10W
R6136	1-216-635-11	METAL CHIP	220	0.50%	1/10W	R6189	1-216-845-11	METAL CHIP	100K	5%	1/10W
R6137	1-208-854-11	METAL CHIP	1M	0.50%	1/10W	R6190	1-249-385-11	CARBON	2.2	5%	1/4W
R6138	1-208-854-11	METAL CHIP	1M	0.50%	1/10W	R6191	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6139	1-208-854-11	METAL CHIP	1M	0.50%	1/10W	R6192	1-247-289-00	METAL	8.2M	5%	1W
R6140	1-208-854-11	METAL CHIP	1M	0.50%	1/10W	R6201	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6141	1-218-760-11	METAL CHIP	220K	0.50%	1/10W	R6202	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R6142	1-216-685-11	METAL CHIP	27K	0.50%	1/10W	R6203	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R6144	1-216-857-11	METAL CHIP	1M	5%	1/10W	R6204	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R6145	1-247-903-00	CARBON	1M	5%	1/4W	R6207	1-216-817-11	METAL CHIP	470	5%	1/10W
R6146	1-216-851-11	METAL CHIP	330K	5%	1/10W	R6208	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
 R6147	1-202-933-61	FUSIBLE	0.1	10%	1/2W	R6209	1-218-885-11	METAL CHIP	39K	0.50%	1/10W
R6148	1-249-385-11	CARBON	2.2	5%	1/4W	R6210	1-218-871-11	METAL CHIP	10K	0.50%	1/10W
R6149	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R6211	1-218-867-11	METAL CHIP	6.8K	0.50%	1/10W
R6150	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6212	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6151	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6213	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6152	1-218-872-11	METAL CHIP	11K	0.50%	1/10W	R6214	1-218-863-11	METAL CHIP	4.7K	0.50%	1/10W
R6153	1-216-864-11	SHORT CHIP				R6215	1-218-867-11	METAL CHIP	6.8K	0.50%	1/10W
R6154	1-218-886-11	METAL CHIP	43K	0.50%	1/10W	R6218	1-218-847-11	METAL CHIP	1K	0.50%	1/10W
R6155	1-218-903-11	METAL CHIP	220K	0.50%	1/10W	R6219	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6157	1-249-429-11	CARBON	10K	5%	1/4W	R6220	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6158	1-249-429-11	CARBON	10K	5%	1/4W	R6221	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R6159	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6222	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6160	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R6223	1-216-833-11	METAL CHIP	10K	5%	1/10W




92

English
2007GJ74WEB-1
Printed in USA
© 2007.7

APPENDIX A: ENCRYPTION KEY COMPONENTS

Encryption key components developed by Sony Corporation contain confidential information, and shall be handled under the non-disclosure obligations provided in the applicable agreement with Sony Corporation (and/or its subsidiary).

As part of this agreement specific instructions must be adhered to whenever a Circuit Board containing encryption key components is repaired and/or replaced pursuant to the following:

- 1) In the service manual the Circuit Board(s) containing encryption key components shall be identified with a red outline and a .
- 2) Only repair boards or components listed in the service manual shall be utilized for replacement and/or repair.
- 3) Disassembly, decryption, or reverse-engineering component(s) is strictly prohibited.
- 4) Any board in which the Servicer replaces an encryption key component must be placed back into the set it originally came from and the replaced defective component **MUST BE DESTROYED**. Boards cannot be swapped.
- 5) If a Circuit Board identified with a red outline and a  in the service manual is deemed to be defective:
 - a) and if a core charge is imposed and is covered under the product warranty, the defective un-repaired or modified board **MUST BE RETURNED** to Sony.
 - b) and if the core charge is **NOT** covered under the product warranty, the defective un-repaired or modified board **MUST BE DESTROYED**.
- 5) If a unit is destroyed (such as field scrap), the Circuit Board identified with a red outline and a  in the service manual **MUST BE DESTROYED**.

In an effort to reduce the size of this pdf file the tiled schematics are not attached to this Service Manual. To receive a complete set of the tiled schematics for this manual please submit a request to the Service Promotion Department at Service_Promotion@am.sony.com.